



## ***Mohican User Manual***



Downloaded from [www.linephaze.com](http://www.linephaze.com)

- Find specs, manuals and used listings across thousands of audio products



Congratulations on your new Hegel Mohican, our best CD-Player. All Hegel products are based on a simple philosophy: Add as little as possible. Keep the music signal as close to the original as possible. Always chase lower distortion and lower noise. The music is reproduced as close to the original as possible and is limited only by the quality of the recording. Our aim is to give you the best possible music experience. Our minimalistic Scandinavian design is styled to fit in with any interior. The products shall be easy to operate and shall be manufactured according to the best quality principles.

“The technology of today’s HiFi industry is moving fast. New formats, players and specs are being implemented constantly. When we decided to make the Mohican, we thought: let’s optimize the CD format. Let’s focus on making this the best CD-player possible and forget about everything else. We took our reference DAC technology, and optimized it for 16bit/44,100. We were also able to get really low phase noise. The result is the Hegel Mohican, the last CD-Player you need to own.”

Bent Holter  
Founder Hegel Music System

 
A handwritten signature in black ink, which appears to be 'Bent Holter', written in a cursive style.

## Index


What's in the box	4
Quickstart	6
General Use	8
Connections	9
Remote Control	10
Special Functions	11
General Information	12
Additional Information	13




## What's In The Box




CD-Player

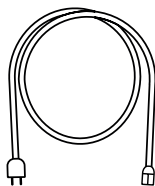 


Power Cord

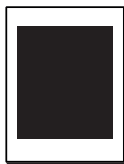 

Accessory Box

 

Remote  
Control

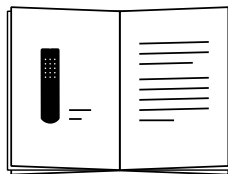 


User Manual




## Quickstart
 
### 1. Connect to your amplifier

Use unbalanced(RCA) or balanced(XLR) cables from the Mohican to your amplifier.

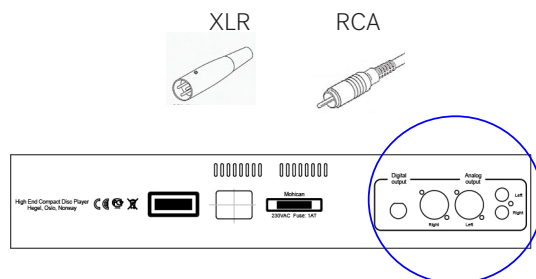


 For the best audio experience, the distance between the listener and each speaker should be identical.

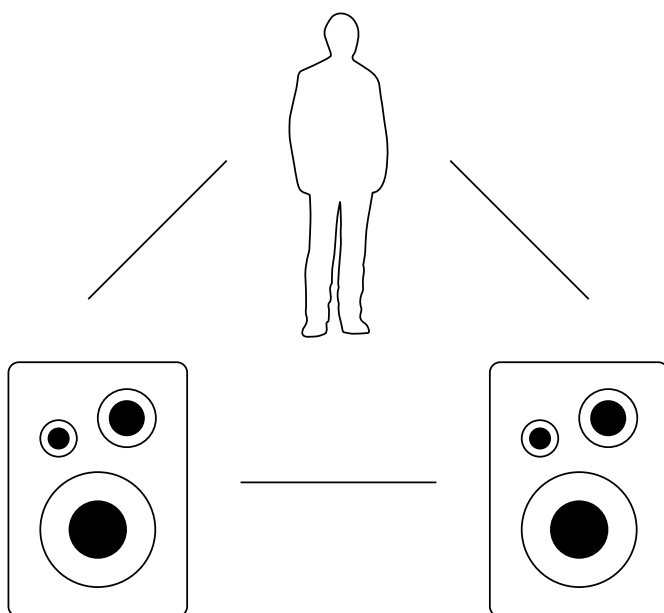


## Quickstart

 
### 3. Connect the power cord

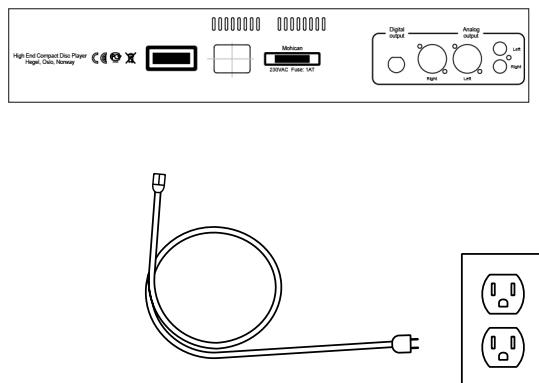

### 4. Turn on the CD-Player

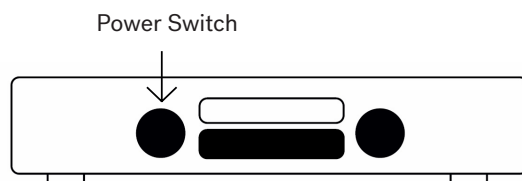 

## General Use

 

### On/Off

The CD-player is switched on by pushing the top of the button on the left side of the front panel. A flashing “-- --” blue light in the display indicates that power has been switched on. By pushing the same button one more time, the power is switched off.

### Open / close

Pushing the top of the button on the right side of the front panel opens the CD tray, and the CD can be placed in the tray. To close the CD tray, push the same button one more time. The CD tray can also be closed by gently pushing the tray loader inwards.

### Play

To start the CD, push the lower right button on the right side of the front panel.

### Pause

If the play button is pushed when a track is playing, the player goes into pause mode. Push the same button to start playback again. The display flashes the track and time when the pause was selected.

### Stop

To stop the CD, push the lower left button on the right side of the front panel.

### Next track

 
Pushing the right side of the left button makes the player jump to the next track. Each time this button is pushed, the beginning of the selected track is played.

### Previous track

Pushing the left side of the left button makes the player jump to the beginning of the current track. Each time this button is pushed, the player starts playing the beginning of the selected track.



## Connections

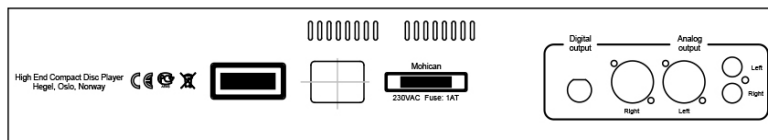

### Analog Outputs

- Unbalanced signal output(RCA) Right
- Unbalanced signal output(RCA) Left
- Balanced signal output(XLR) Left
- Balanced signal output(XLR) Right

The CD-Player has two types of analog audio outputs: unbalanced audio signal (RCA/phono) and true balanced audio signal (XLR: pin 2 is positive phase, pin 3 is negative phase, and pin 1 is chassis ground).

### Digital Output

- BNC

We recommend using the balanced XLR outputs from the CD-player as this gives the highest level of sound quality.

### AC Power Connection

- AC Power connector with fuse holder:  
230V/115V/100V AC depending on country.

## Remote Control - RC2

The Hegel Mohican can be controlled with the included Hegel RC2 Remote Control. The Hegel system remote control controls other Hegel products, such as amplifiers and preamplifiers, avoiding the need for multiple remote control devices.

 
To avoid damage to the remote control by leakage from the batteries during transport and storage, the remote control is supplied without batteries from Hegel.

The remote control uses two standard 1.5-volt LR03 AAA batteries. To insert the batteries, use a crosshead (Phillips) screwdriver to gently remove the four screws on the underside of the remote control.

Insert the batteries with the correct polarity with + sign and - sign, as shown inside the battery holder. Be careful when inserting the batteries to not damage the battery holder.

Replace the cover. Insert the screws by gently turning them by hand, to avoid damaging the threads in the remote control chassis. Do not tighten the screws too much, as this can damage the screws and the soft metal chassis of the remote control.

Caution: Do not drop the remote control on the floor, as this can damage its internal parts and the battery holder.

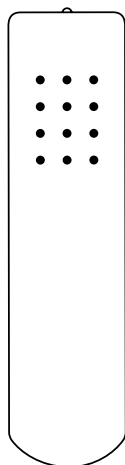

### Remote Control Buttons (starting top left)

1. Play/Pause
2. Skip to previous track
3. Skip to next track
4. Stop/Eject
5. Rewind the track
6. Forward the track
7. Volume up for Hegel Amp and Preamp
8. Repeat track or CD
9. Switch to next input on your Hegel Amp and Preamp
10. Volume down for Hegel Amp and Preamp
11. Mute the Hegel Amp and Preamp
12. Switch to prev. input on your Hegel Amp and Preamp

## Special Functions

### RC2

The Hegel RC2 Remote Control can be used to search backward, forward and to repeat the entire CD.

#### Search Forward

Hold down the forward button on the remote control. The search speed is initially slow and will increase to high after about 20 seconds.

#### Search Backward

Hold down the rewind button on the remote control. The search speed is initially slow and increases to high speed after 20 seconds.

### Repeat Entire CD

Press the repeat button on the remote control once. "REP cd" is displayed for two seconds. It repeats for two seconds every ten seconds to show that the repeat CD mode has been selected. To cancel "repeat CD", press the repeat button on the remote control twice.

### Repeat track

To repeat the current track, press the repeat button on the remote control twice. "REP tr" is displayed. It repeats for two seconds every ten seconds, to show that the repeat track mode has been selected. To cancel "repeat track", press the repeat button on the remote control once.







## General Information

### Transport and Shipment

When packing the CD-Player for shipping, follow these instructions to avoid damaging the unit:

Insert the CD-player into the plastic bag. Ensure the plastic bag does not press tightly on the knobs as this may damage them during transportation.

Place the CD-Player into the shock absorber. Place the CD-Player with absorber into the original cardboard box.

### Cleaning

Fingerprints or stains on the front panel or top cover can be removed with a cloth moistened with warm water or a mild detergent suitable for cleaning mirrors and windows.

### Technical Specifications

#### Mohican CD-Player

DAC IC	32 bit
Line level Output	1*unbalanced fixed(RCA) 1*unbalanced fixed(XLR)
Digital Output	1*BNC true 75 Ohm
Frequency response	0Hz-50kHz
Distortion	Less than 0.0015%
Dimensions	8cm x 43cm x 29cm HxWxD 10kg shipment weight.  3.2" x 17" x 11.4" HxWxD 22lbs shipment weight.

## Additional Information

### Warning

Hegel products should only be opened or serviced by certified technicians. The devices contain electronic components that may cause severe electric shock. Work performed on Hegel products by unqualified personnel may cause serious damage or personal injury.

Opening of the product by non-authorized personnel voids the warranty.

The products must not be exposed to rain or moisture.

### Warranty

All Hegel products come with a 2-year warranty against defective materials and workmanship.

Opening of the product by non-authorized personnel voids the warranty.

In case you need any assistance with your Hegel product, please find your nearest dealer or distributor by looking at the Hegel web site \www.hegel.com. If you experience any problems locating your dealer or distributor, please contact [info@hegel.com](mailto:info@hegel.com)

### More Information

For more information, please visit [www.hegel.com/products/cd/mohican](http://www.hegel.com/products/cd/mohican)

### Use and Placement

The HEGEL Mohican should be placed on a flat, hard surface for proper cooling. A certain space is required for air circulation above and below the CD-Player. The CD-Player must never be placed on a carpet or similar surface that obstructs air circulation through the unit. Nor should it be covered while in use or placed on a narrow shelf or other confined space.

The CD-Player needs some break-in time before maximum sound quality can be experienced.

Never lift the Mohican by holding around the volume knob or input selector knob. The Mohican is heavy, and applying pressure may damage the knobs.







[www.hegel.com](http://www.hegel.com)



Downloaded from [www.linephaze.com](http://www.linephaze.com)

- Find specs, manuals and used listings across thousands of audio products