

YAMAHA NS-300X

Natural Sound
3-way, 3-speaker System
Bass Reflex Type

CENTER

THANK YOU FOR PURCHASING THE YAMAHA NS-300X
SPEAKER SYSTEM.

READ THIS BEFORE OPERATING YOUR NS-300X.

- To prevent discoloration or damage to the cabinet, keep your speakers away from high temperature and out of direct sunlight.
- Placing your turntable on top of the speaker cabinet or on the same shelf may cause howling. The turntable should be placed where vibrations from the speakers will not reach it.
- When an amplifier with a rated output power higher than the music input of the speaker system is used, care should be taken never to exceed the speaker's music input.
- Connections to the amplifier's speaker terminals depend on the particular amplifier you are using. Please check the amplifier's owner's manual before making speaker connections.
- In order to preserve the beauty of the cabinet, avoid the use of alcohol, benzene, thinner or insecticides on the cabinet and avoid prolonged contact with vinyl-based products. When cleaning, use a clean, dry cloth.
- The speaker system contains strong magnets, so television sets, watches, magnetic tape, etc., should be kept at a reasonable distance.
- When the grille is off, avoid touching the woofer cone or center cap. Any deformation can cause audible distortion.
- The bass may sound unnatural if the speakers are placed directly on the floor. If this is the case, raise the speakers off the floor with sturdy supports such as speaker stands or concrete blocks.

CONNECTION TO YOUR AMPLIFIER

**BEFORE MAKING CONNECTIONS, MAKE SURE THAT
THE AMPLIFIER IS SWITCHED OFF.**

• How to connect:

Connect the screw-type input terminals at the rear of the speakers to the speaker output terminals of your amplifier with the supplied speaker cords.

 
Connect the left speaker to the left (marked L) terminals of your amplifier, and the right speaker to the right (marked R) terminals, making sure not to reverse the polarity (+, -). If one speaker is connected with reversed polarity, the sound will be unnatural with little bass.

The speaker cord supplied is a red/black 2-line cord. Connect the red terminal (+) of the amplifier and the speaker to the RED LINE, and the black terminal (-) of the amplifier and the speaker to the BLACK LINE.

To connect to the speaker terminals, loosen the screw-type terminal counter-clockwise as illustrated below (①), and insert the bare end of the speaker cord (②). The cord will be locked when rotating the connector housing clockwise until firm (③).


SPEAKER PLACEMENT

As illustrated, the NS-300X is designed so that Speaker ① is the right speaker and Speaker ② is the left speaker. However, depending on the listening room conditions, if you feel better sound is obtained by reversing the positions, this placement may also be used.

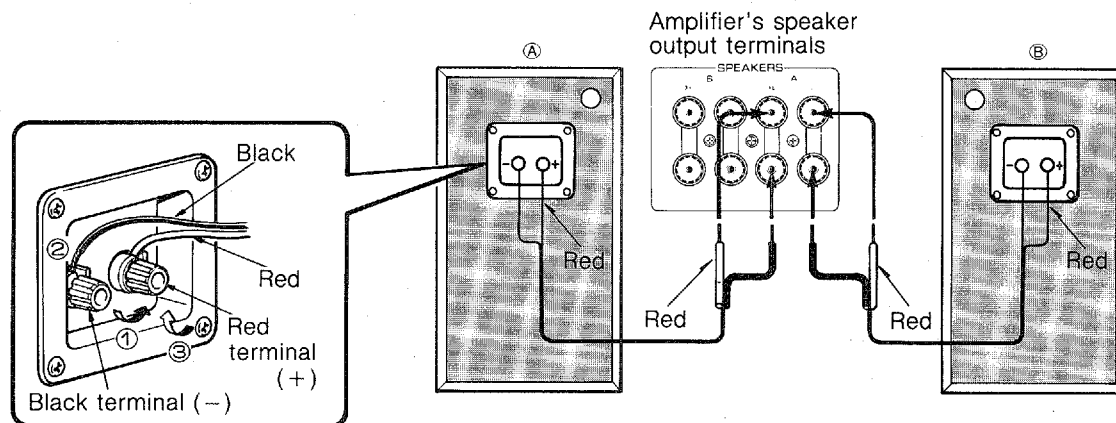


FRONT GRILLE

 The front grille is attached to the cabinet in four places. When removing the grille, first pull the upper two corners towards you with both hands as shown in the illustration, then detach the bottom. When replacing the grille, line up the fasteners at the four corners of the grille with the corresponding holes in the cabinet and press firmly.

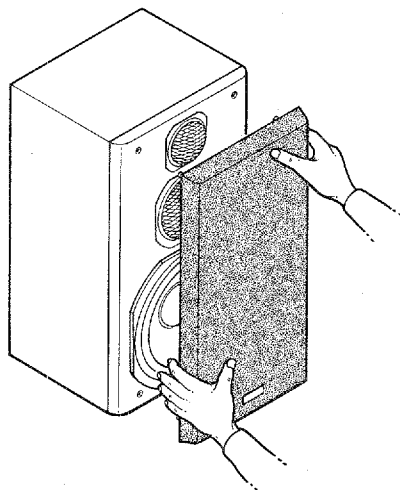


CHARACTERISTICS

 ■ FREQUENCY RESPONSE/HARMONIC DISTORTION (Input 1W, Measured at 1m)

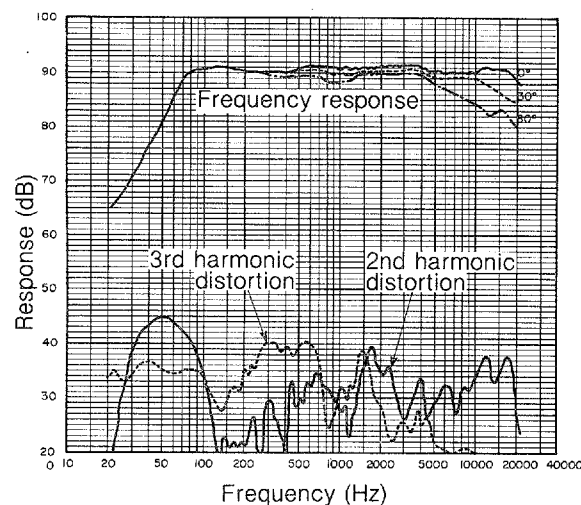

■ IMPEDANCE

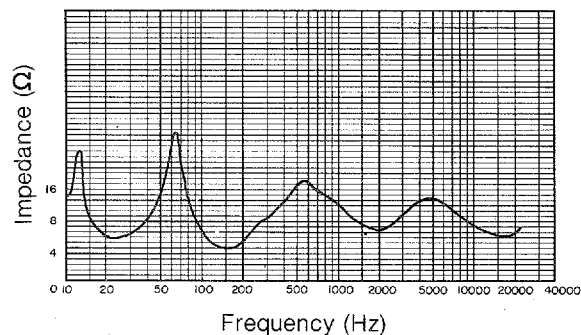 

SPECIFICATIONS

Type	3-way, 3-speaker Bass Reflex
Speaker	
Woofer	27 cm (10-5/8") Cone (JA-2537)
Midrange	6 cm (2-3/8") Dome (JA-0609)
Tweeter	3 cm (1-3/16") Dome (JA-0583)
Nominal Input	100W
Music Input	200W
Efficiency	91 dB/W/m
Frequency Response	32 ~ 30,000 Hz
Nominal Impedance	6 ohms
Crossover Frequency	700 Hz, 4.5 kHz (12dB/oct)
Dimensions (W × H × D)	322 × 583 × 326 mm (12-11/16" × 22-15/16" × 12-13/16")
Weight	18 kg (39 lbs 10 oz)
Accessory	1 Speaker cord for each speaker

*Specifications subject to change without notice.

*Care should be taken not to exceed the music input power value noted above.

SINCE 1887  **YAMAHA**
NIPPON GAKKI CO., LTD. HAMAMATSU, JAPAN
VD53090-0 BWgV, O Printed in Japan