


TRANSPARENT


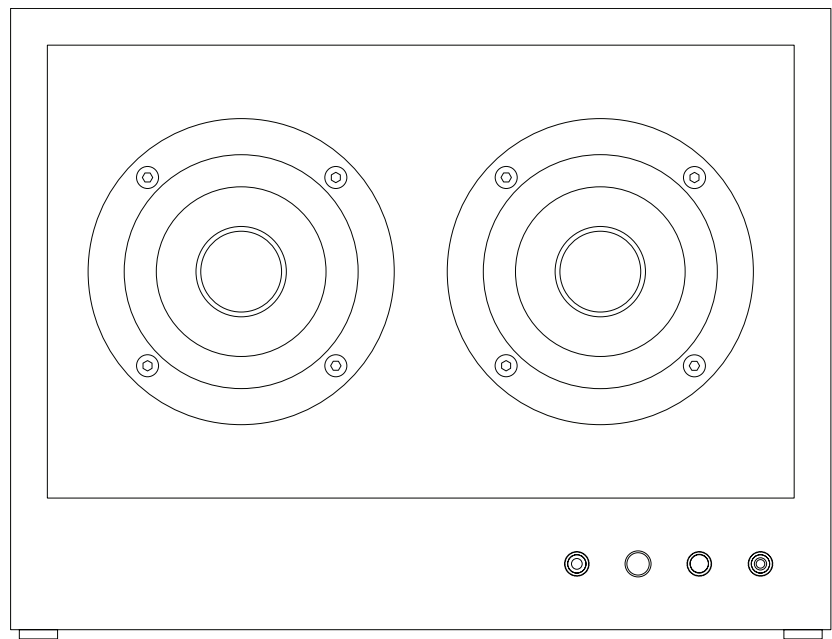


Designed and developed by Transparent™
Stockholm, Sweden

transparent
<https://transpa.rent>

Small Transparent Speaker

STS—W/B

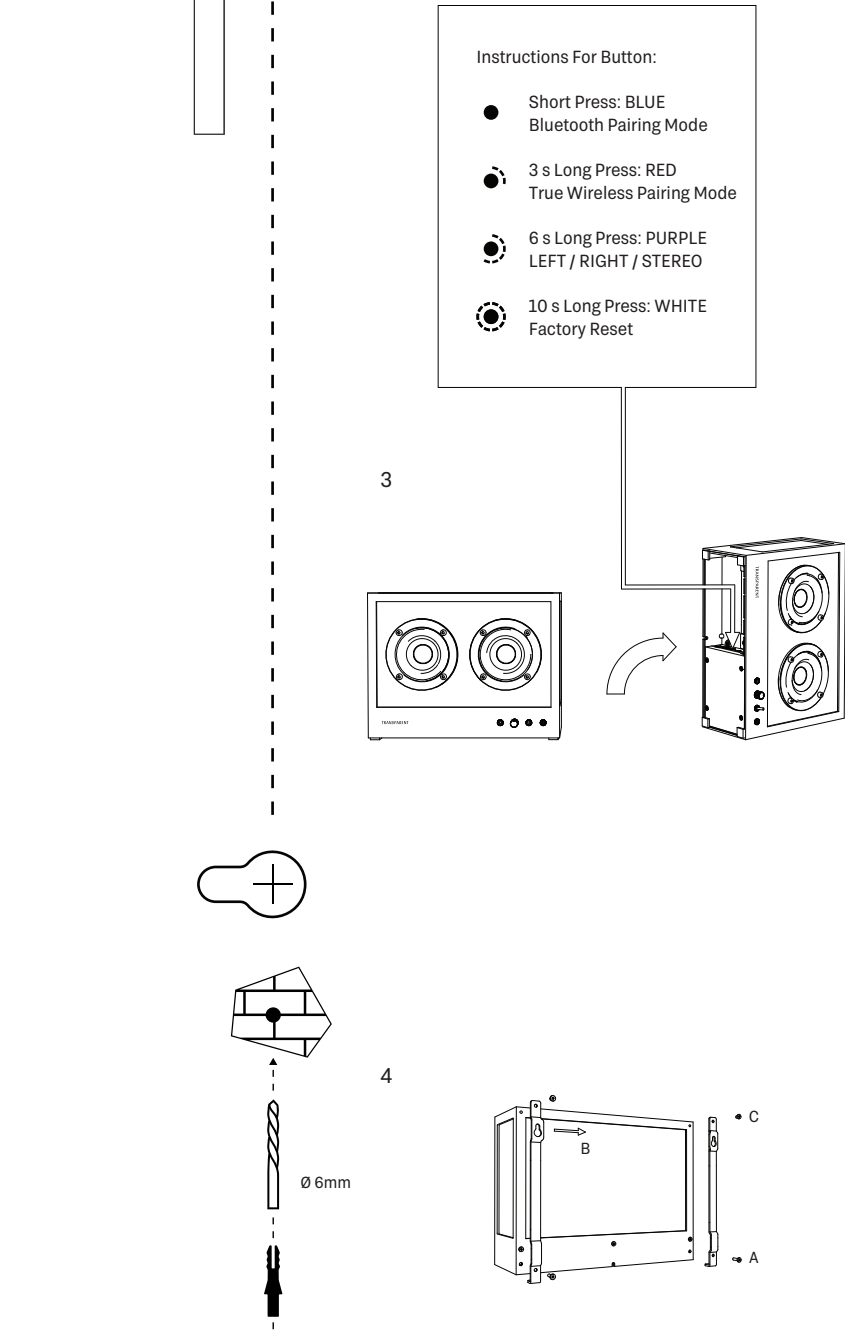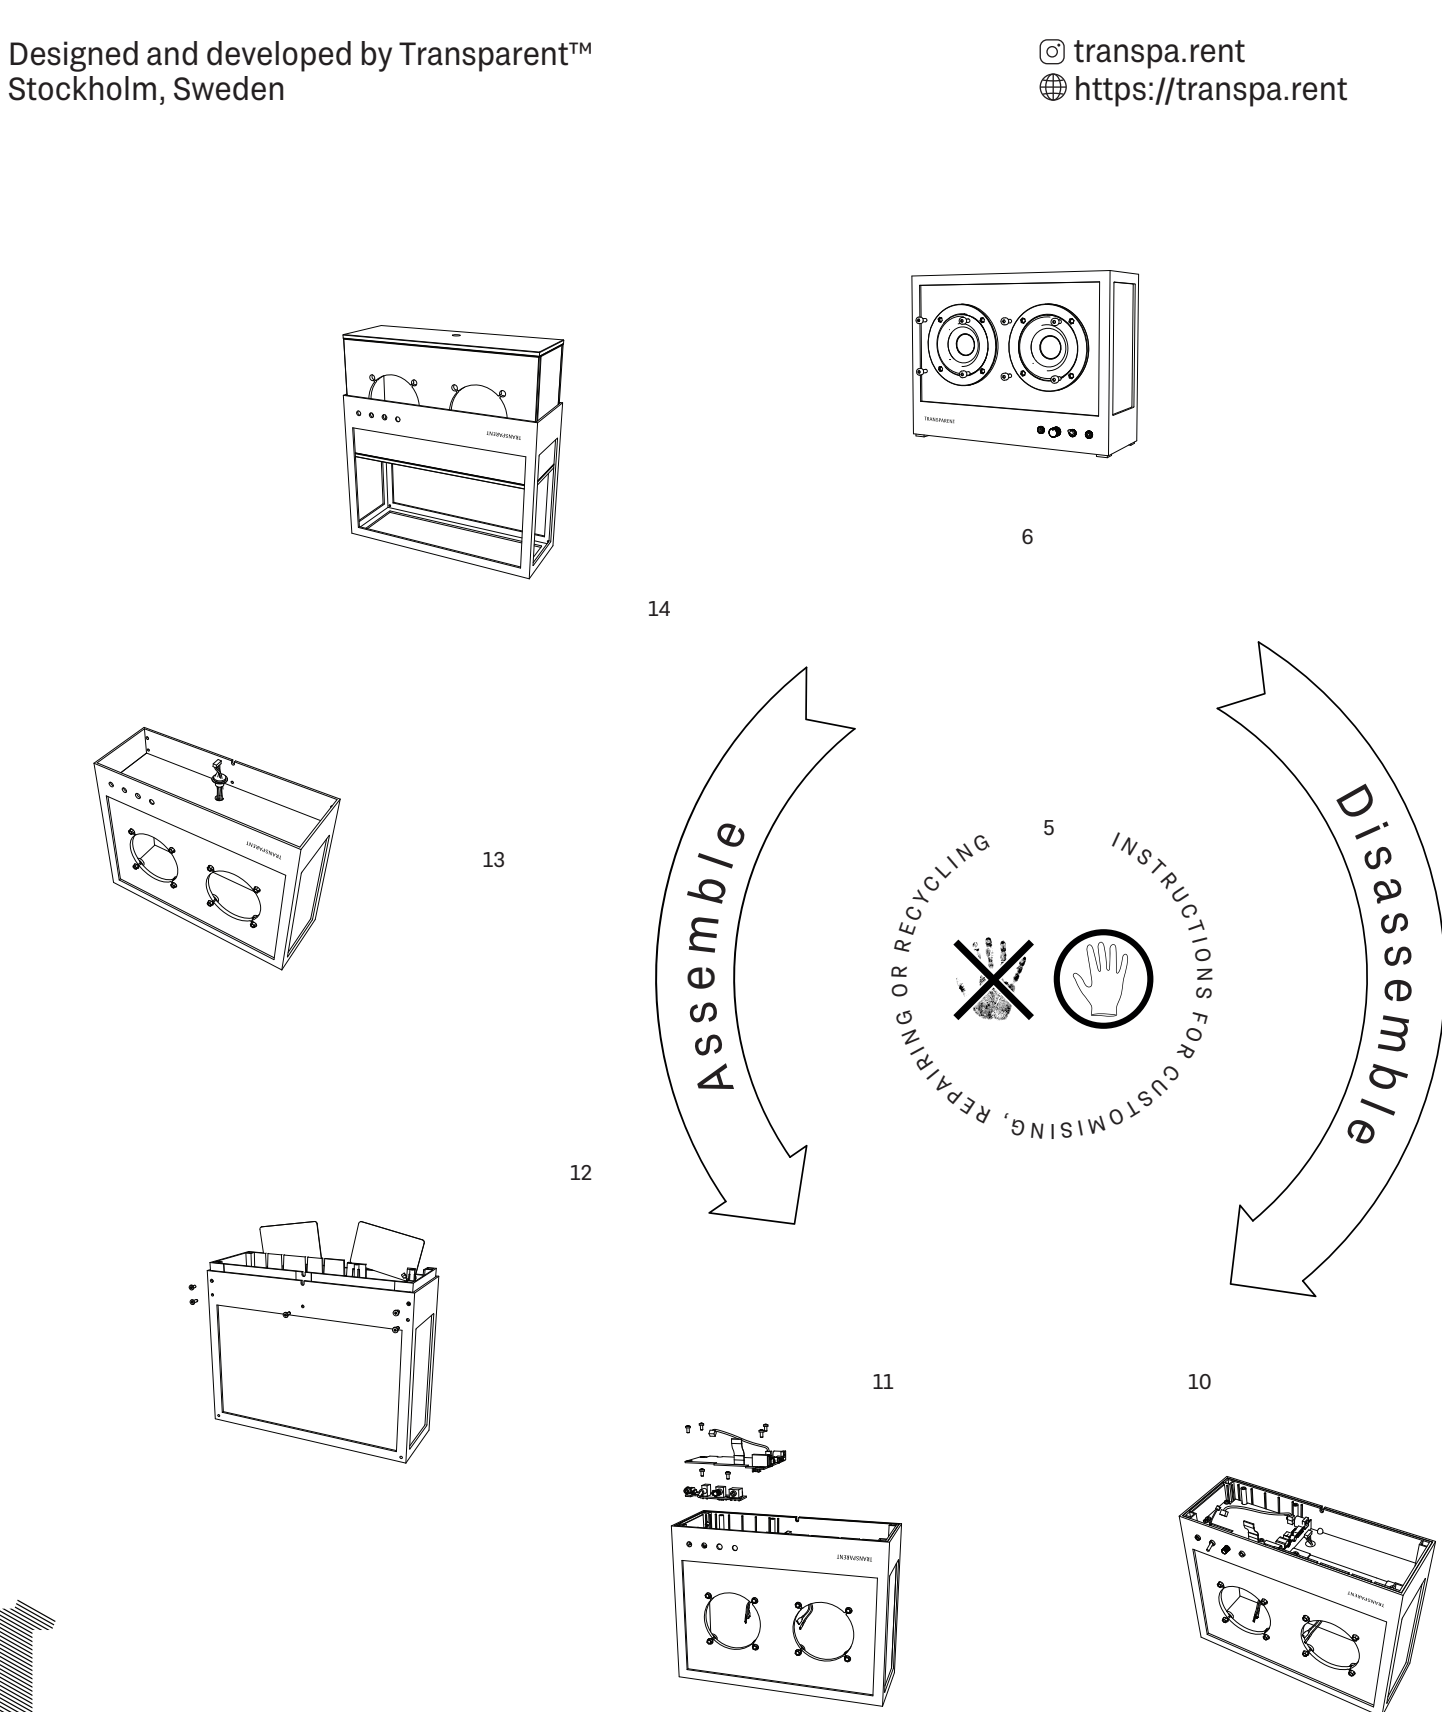

User Manual

The Small Transparent Speaker is carefully designed down to every last detail. The product is simplified and refined down to the essentials, constructed by one single aluminum "uniframe", and tempered glass panels. Despite its smaller size this speaker still delivers a surprisingly big sound. The acoustic engineers has made a great accomplishment with both the speaker elements design and digital signal processing. The sound is rich, yet balanced.

1 Wireless
Today many tech products become obsolete after only a year or so. We want this product to instead become better over time. The speaker comes with Bluetooth™ but there is a compartment in the bottom that can hold and power various wireless upgrades. For users that want a wifi multi room system we currently recommend the Chromecast Audio™. This way several speakers can contribute to play music and the speakers can even be set to play left or right channel only. We also recommend the new Amazon Echo Input™ for people that want to have a voice controlled system. These small add-on devices is provided USB power and an audio line in socket on the bottom side panel. Note that they are not included in the box and is configured through these companies own smartphone-apps.

This "modular" setup is in order to offer solutions for many types of people, but also to let the speaker be able to be upgraded with new technology. The speaker is able to be upgraded with new technology. The speaker is able to be upgraded with new technology. The speaker is able to be upgraded with new technology.

2 Unboxing
To keep the crisp look, we encourage you to use the cotton gloves supplied when unpacking, setting up and placing your speaker. Please read your user manual and safety text.

Playing Music Through Aux.
To play music you can use the music cable supplied. First plug in the power cable and flip the on switch on the front, a white light indicates the speaker is now on. Then plug in the audio cable and play music from any source you prefer. Please note that using the long audio cable to the bottom line in socket will cause a humming noise before both ends are plugged in, this is a result of a so called "isolated transformer".

3 Bluetooth Pairing
Flip the speaker onto its right side to expose the bottom interface. Press a short click on the button to initiate Bluetooth™ pairing mode. The LED should now blink blue. Now make sure your device /phone has bluetooth switched on, locate and select the Small Transparent Speaker in the list of devices. Once you can now start playing music from your phone.

True Wireless Pairing
If you own two Small Transparent Speakers you can play music wirelessly to both units. To enable this feature press the button on the right side of the speaker. The LED should now blink blue. Now make sure your device /phone has bluetooth switched on, locate and select the Small Transparent Speaker in the list of devices. Once you can now start playing music from your phone. Donel The speakers now automatically go into "left" and "right" mode, and will let you know by saying "left" or "right". Now place the speaker in the left side of the room and the right one to the right.

Left / Right / Stereo Mode
If you want to change these settings at any time you simply press the button for at least 6 seconds until you see a purple light, upon release it will toggle between these modes.

4 Wall Mounting
This speaker can be wall mounted by using the included wall mounting brackets. To fasten the brackets to the speaker frame you should first remove the four silicon feet. Then unscrew the two screws (A) on the picture below and re screw them into the lower holes of the brackets. Make sure both brackets are pointing inwards. (B). Then screw the upper screws supplied with the brackets in place (C) and you are done. In order to wall mount the speaker you can use the holes guided in the user manual to mark your holes (D). Note that the screws and plugs supplied in the box are for concrete walls and a 6 millimeter hole. We do not recommend wall assembly on other types of walls. Insert the plugs in the holes and screw the wall screws almost all the way in, then hang up your speaker. Any wall mounting is carried out at your own risk. If any doubts we recommend to take help from people with experience of similar operations.

5 Re-assembly
For future repairing or customisations we have designed the Small Transparent Speaker to be able to be easily disassembled and reassembled. Please note that doing this requires a bit of experience using normal tools, and that any tinkering is carried out at your own risk. We suggest using textile gloves to protect glass and PCBs. You need hex tool, screw driver and 3-4 plastic cards (like bank cards). Also useful is a bit of patience, pliers and small compartments to keep track of unscrewed small parts.

Make sure the device is not plugged into power.
6 Unscrew all 8 speaker screws.
7 Lift speakers a little and unplug speaker cables (a small pliers might be handy). Remove both speakers but leave the nuts in place if you will remount speakers in the same cabinet.
8 Remove front components and bottom feet.
9 Turn the speaker upside down, unscrew and remove bottom plate.
10 Unplug all internal cables.
11 Unscrew and remove first the main PCB then the front PCB.
12 Unscrew screws on back. Release bottom plastic housing by inserting plastic cards in the front slot and gently pulling it upwards. A pliers might be helpful.
13 Pull out the speaker cable part.
14 Eject the glass cabinet by pulling it out gently. Done!
For reassembly just follow the steps backwards.

Network Standby
After 15 minutes without any incoming music signal from BT input, the speaker will automatically go into a network standby mode. This is indicated by a slowly flashing white light, and the consumption goes down to 1W. The speaker will automatically wake up when it receives a music signal, but we encourage you to completely turn off your speaker when not in use for a longer time.

Standby
After 15 minutes without any incoming music signal from cable input, the speaker will automatically go into a standby mode. This is indicated by a slowly flashing white light, and the consumption goes down to less than 0.5W. The speaker will automatically wake up when it receives a music signal, but we encourage you to completely turn off your speaker when not in use for a longer time.

Support
If you purchased a product in Europe or other countries, please feel free to ask any questions to: support@transpa.rent

Instagram
[instagram.com/transpa.rent](https://transpa.rent)

#transparentspeaker

Important Safety Instructions

1) Read these instructions.
2) Keep these instructions.
3) Heed all warnings.
4) Follow all instructions.
5) Do not use this apparatus near water.
6) Clean only with dry cloth.
7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11) Only use attachments/accessories specified by the manufacturer.
12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13) Unplug this apparatus during lightning storms or when unused for long periods of time.
14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15) To completely disconnect this apparatus from the AC mains, disconnect the power supply cord plug from the AC receptacle.
16) The mains plug of the power supply cord shall remain readily operable.

Warning
To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Caution
Changes or modifications not approved by Transparent Sound AB could void the user's authority to operate the equipment.

Symbols

Caution: To prevent the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.

This appliance may not be treated as regular household waste. Management of WEEE (waste electrical and electronic equipment) is applicable in the Member States of the European Union and other European countries with individual national policies on the management of WEEE. If you need more information on the collection, reuse and recycling systems, please contact your local or regional waste administration.

The product complies with the following European Directives:
• Ecodesign requirements for Energy-related Products Directive (EU) 278/2009
• Radio Equipment Directive 2014/53/EU
• The Low Voltage Directive 2014/35/EU

TUV mark
• Comforms to UL60065 certified to Canada IEC60065

RoHS The product complies with RoHS (Restriction of Hazardous Substances Directive) 2011/65/EU

This equipment is a Class II or a double-insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

CE The product complies with the technical regulations of the Eurasian Economic Commission:
— On safety of low-voltage equipment (CU TR 004/2011)
— Hardware electromagnetic compatibility (CU TR 020/2011)

Radio Frequency Interference Requirements - FCC
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.
NOTE: This product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This product generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

Please pay attention that changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Warranty
The warranty for this product is valid in accordance to the general terms and conditions found at <https://transpa.rent>.
Technical Specifications
Dimensions (mm): 268 x 203 x 95
Weight: 3 kg
L/R Drivers: 2 x 3" (Full Range)
Amplifier: Class D built in (Active)
Output power: 2 x 15 W
Sealed Cabinet Volume: 31
Frequency Response: 60 Hz – 20 kHz ±3 dB on axis
High Quality Digital Signal Processing (DSP)
Front Controls: Power switch, Volume adjustment
Wireless: Bluetooth® 5 and "True Wireless" dual speaker streaming
Line in: 2 x 3.5 mm Mini Jack (front and bottom), 1 x USB

Included
1 x long audio cable, 1 x short audio cable, 1 x long power cable, 1 x short (USB) power cable, wall mount brackets and screws, 3 x AC power plugs, cotton gloves
Recycling
This product was constructed for easy disassembly and assembly.
• You can get information about spare parts and further instructions from <https://transpa.rent>.
• If the electronics has become outdated in any way, if you need a different wireless format etc, please don't just buy another complete product, try to upgrade your Transparent Speaker instead. It is designed to be modular and upgradable.
• Try to find ways to get discarded parts back into the material loop. Go to <https://transpa.rent> and look for a takeback system. We want to reincorporate as much as possible back into the production line.
• Otherwise consult your local waste disposal authority for guidance.

Användarmanual

Small Transparent Speaker är noggrant designad ner till varje minsta detalj. Produkten är förenklad och raffinerad till endast det väsentliga, konstruerad av en enda aluminium "uniframe" och härdat glas. Trots sin mindre storlek levererar denna högtalare fortfarande ett överraskande stort ljud. De akustiska ingenjörerna har gjort en stor prestation med både högtalarelementens design och den digitala signalbehandlingen. Ljudet är rikt men ändå balanserat.

1 Trådlöst
Idag blir många tekniska produkter föråldrade redan efter några år. Vi vill att den här produkten istället blir bättre med tiden. Högtalaren levereras med Bluetooth™ men det finns ett utrymme i botten som kan hålla och driva olika trådlösa uppgärningar. För användare som vill ha ett multi-room system med wifi rekommenderar vi för närvarande Chromecast Audio™. På så sätt kan flera högtalare bidra till att spela samma musik, och högtalarna kan till och med ställas in för att bara spela vänster- eller höger kanal. Vi rekommenderar också den nya Amazon Echo Input™ för användare som vill ha ett stöstyrt ljudsystem. Dessa små "moduler" får USB-ström och en ljudkontakt i botten för att anslutas. Observera att de normalt inte ingår i köpet, samt är konfigurerade genom dessa olika företags egna smartphone-appar.

Denna "modulär" approach är både för att erbjuda lösningar för olika typer av behov, men också för att låta ett service utföras av kvalificerad servicepersonal. Service krävs när apparaten har skadats på något sätt, t ex om strömförslingskabeln eller kontakten är skadad, vätska har spillts eller föremål fallit in i apparaten, apparaten har utsatts för regn eller fukt, fungerar inte normalt, eller har tappats.

2 Uppackning
För att bibehålla produktens fina utseende uppmuntrar vi dig att använda de bomullshandskar som medföljer när du packar upp, ställer in och placerar din högtalare. Läs din användarmanual och säkerhetstext.

Spela musik med sladd
För att spela musik kan du använda den medföljande musikkabeln. Anslut först strömkabeln och slå på strömljuset på framsidan, ett vitt ljus indikerar att högtalaren nu är på. Anslut sedan ljudkabeln och spela musik från vilken källa du än föredrar. Observera att om du använder den långa ljudkabeln till uttag på undersidan kommer det att orsaka ett lite "rummande" ljud innan båda sidorna på sladden är anslutna. Detta uppstår med lång sladd till följd av så kallad "isolerad transformator".

3 Bluetooth-parkoppling
Vänd upp högtalaren på höger sida för att exponera knappen på undersidan. Tryck på ett kort klick på knappen för att starta Bluetooth™ parningsläge. Lysdioden ska nu blinka blått. Se nu till att din telefon (motort) har påslagen Bluetooth, leta reda på och välj Small Transparent Speaker i listan som vanligtvis finns i relation till Bluetooth-anslutningarna. Klart! Du kan nu börja spela musik.

True Wireless-parkoppling
Om du har två Small Transparent Speakers kan du spela musik trådlöst till båda enheterna. För att aktivera detta, vänd båda enheterna på höger sida. Anslut strömkablarna på båda högtalarna och slå på strömljuset. Tryck och håll ned knappen i minst 3 sekunder tills du ser ett rött ljus och släp sedan knappen för True Wireless Pairing Mode. Gör detta på båda högtalarna (ej nödvändigt att göra precis samtidigt) och välj en av de Small Transparent Speaker som dyker upp i Bluetooth-listan på din telefon. Klart! Högtalarna går nu automatiskt till "vänster" och "höger" läge och meddelar dig genom att säga "vänster" eller "höger". Placera nu den vänstra högtalaren i vänster sida av rummet och den högra till höger.

Vänster- /höger- /stereo-läge
Om du vill ändra dessa inställningar när som helst trycker du bara på knappen i minst 6 sekunder tills du ser ett lilla ljus, när det släpps växlar högtalaren mellan dessa lägen.

4 Vägmontering
Denna högtalare kan monteras på väggen med hjälp av de medföljande väggfästena. För att montera fästena på högtalargrannen bör du först ta bort de fyra gummfötterna. Skruva sedan loss de två skruvarna (A) på bilden nedan och skruva in dem igen genom väggfästena. Se till att båda väggfästena pekar inåt (B). Skruva sedan de övre skruvarna som medföljer väggfästena på plats (C) så är du klar. För att vägmontera högtalaren kan du använda hålguden som finns i denna bruksanvisning för att markera dina hål (D). Observera att skruvarna och pluggarna som levereras i lådan är för betongväggar och ett 6 mm borrar hål. Vi rekommenderar inte vägmontering på andra typer av väggar. Sätt i pluggarna i hålen i väggen och skruva sedan in skruvarna. Öns för att vägmontera utifrån på egen risk. Vid minsta tvivel rekommenderar vi att du får hjälp från personer med erfarenhet av liknande monteringar.

5 Re-montering
För framtida reparationer eller anpassningar har vi utformt Small Transparent Speaker för att enkelt kunna demonteras och återmonteras. Öns för att göra detta kräver det lite erfarenhet av att använda vanliga verktyg, och att alla åtgärder utförs på egen risk. Vi föreslår att du använder textilhandskar för att skydda glas och PCB. Du behöver insververktyg, skruvmejsel och 3-4 plastkort (som bankkort). Önska ändå att du inte blandar, tång och små behållare för att hålla reda på skruvar och små delar.
Se till att enheten inte är ansluten till en vägguttag.
6 Skruva loss alla 8 högtalarskruvar.
7 Lössa på högtalarna försiktigt med en skruvmejsel, ta ur dem och koppla ur högtalarkablarna (en liten tång kan vara praktiskt). Ta bort båda högtalarna men lämna muttrarna på plats om du kommer att återmontera högtalarna i samma låda.
8 Ta bort de främre reglarna och gummfötterna.
9 Vänd högtalaren upp och ner, skruva loss och ta bort bottenplattan.
10 Koppla ur alla interna kablar.
11 Skruva loss och ta bort bort huvudkretskortet och sedan det främre, mindre kretskortet.
12 Skruva loss skruvarna på baksidan. Lössa hela botten delen genom att sätta in plastkort som håller de främre spårarna öppna, och dra sedan hela delen försiktigt uppåt. En tång kan vara till hjälp.
13 Dra ut högtalarkabeldelen.
14 Mata ut glesladden genom att dra den försiktigt ut. Klart!
Följ stegen baklänges för montering.

Nätverksstandby
Efter 15 minuter utan inkommande musiksingal från BT-ingång går högtalaren automatiskt i ett nätverksstandby-läge. Detta indikeras av ett långsamt blinkande vitt ljus, och förbrukningen sjunker till 1W. Högtalaren vaknar automatiskt när den mottar en musiksingal, men vi uppmuntrar dig att stänga av högtalaren helt när den inte används längre.

Strömsparläge
Efter 15 minuter utan inkommande musiksingal från line-in-kontakten går högtalaren automatiskt i vänteläge. Detta indikeras av ett långsamt blinkande vitt ljus, och förbrukningen sjunker till mindre än 0.5W. Högtalaren vaknar automatiskt när den mottar en musiksingal, men vi uppmuntrar dig att stänga av högtalaren helt när den inte används längre.

Support
Om du har köpt din produkt i Europa eller andra länder, vänligen ställ frågor till: support@transpa.rent
Instagram
[instagram.com/transpa.rent](https://transpa.rent)
#transparentspeaker

Viktiga säkerhetsinstruktioner

1) Läs dessa instruktioner.
2) Behåll dessa instruktioner.
3) Följ alla varningar.
4) Följ alla anvisningar.
5) Använd inte apparaten nära vatten.
6) Rengör endast med torr trasa.
7) Blockera inte ventilationsöppningar. Installera i enlighet med tillverkarens anvisningar.
8) Installera inte i närheten av värmeållor som element, spisar eller andra apparater (inklusive förstärkare) som producerar värme.
9) Andra inte säkerhetsändamålet med den polariserade eller jordade kontakten. En polariserad plugg har två blad med en bredare än den andra. En kontakt med jordgätag har två blad och en tredje ledningspinne. Det breda bladet eller den tredje stängningen tillhandahåller för din säkerhet. Om medföljande kontakten inte passar i ditt uttag, kontakta en elektriker för att byta ut det föråldrade uttaget.
10) Skydda nätsladden från att trampas på eller klämmas fast, särskilt vid kontakterna och vid den punkt där de lämnar apparaten.
11) Använd endast tillbehör som specificerats av tillverkaren.
12) Använd endast med den vagn, stativ, konsol eller bord som specificerats av tillverkaren eller säljs med apparaten. Om en vagn används ska du vara försiktig när du flyttar kombinationen av vagnen / apparaten för att undvika fallskador.
13) Koppla ur denna apparat vid åskväder eller om den inte används under lång tid.
14) Låt ett service utföras av kvalificerad servicepersonal. Service krävs när apparaten har skadats på något sätt, t ex om strömförslingskabeln eller kontakten är skadad, vätska har spillts eller föremål fallit in i apparaten, apparaten har utsatts för regn eller fukt, fungerar inte normalt, eller har tappats.
15) För att helt koppla bort denna apparat från nätsladden, koppla bort nätkabelkontakten från nätslaget.
16) Nätkontakten på nätsladden ska förbli låttätad.

Varning
För att minska risken för brand eller elektrisk stöt, utsätt inte apparaten för regn eller fukt.
Varning
Ändringar som inte godkänns av Transparent Sound AB kan ogiltigförklara användarens behörighet att använda utrustningen.
Symboler
Varning: Ta inte ut locket för att förhindra risken för elektrisk stöt. Inga delar som kan servas av användaren. Hänvisa service till kvalificerad servicepersonal.
Den här apparaten får inte behandlas som vanligt hushållsavfall. Hantering av WEEE (avfall från elektrisk och elektronisk utrustning) är tillämplig i EU i medlemsstater och andra europeiska länder med individuell nationell politik för hantering av WEEE. Om du behöver mer information om insamlings-, återavvinnings- och återvinningssystem, vänligen kontakta din lokala eller regionala avfallshantering.

Produkten uppfyller följande europeiska direktiv:
• Krav på ekodesign för direktiv om energirelaterade produkter (CE) 278/2009
• Direktiv om radioutrustning 2014/53 / EU
• Lågsämningsdirektiv 2014/35 / EU

TUV-märke
• Uppfyller UL60065 certifierad enligt Kanada IEC60065

RoHS Produkten uppfyller RoHS (direktiv om begränsning av farliga ämnen) 2011/65 / EU

Denna utrustning är en klass II eller en dubbelisolerad elektrisk apparat. Den har utformats så att den inte kräver säkerhetsanslutning till elektrisk jord.

Produkten uppfyller de tekniska föreskrifterna från Eurasian Economic Commission:
• Om säkerhet för lågsämningsutrustning (CU TR 004/2011)
• Elektromagnetisk kompatibilitet för hårdvara (CU TR 020/2011)

Radiofrekvensanvändningskrav - FCC
Den här enheten uppfyller del 15 av FCC-reglerna. Driften är föremål för följande två villkor:
• Om säkerhet för lågsämningsutrustning (CU TR 004/2011)
• Elektromagnetisk kompatibilitet för hårdvara (CU TR 020/2011)

Denna enhet kan användas för att skicka och mottaga signaler, inklusive störningar som kan orsaka oönskad drift.
(2) Denna enhet måste acceptera alla mottagna störningar, inklusive störningar som kan orsaka oönskad drift.
OSI: Denna produkt har testats och visat sig uppfylla kraven för en digital 5-enhet enligt del 15 i FCC-reglerna. Dessa gränser är utformade för att ge rimligt skydd mot skadliga störningar i en bostadsinstallation. Denna produkt genererar, använder och kan utstråla radiofrekvensenergi och kan, om den inte installeras och används i enlighet med instruktionerna, orsaka skadliga störningar i radio Kommunikation. Det finns dock ingen garanti för att störningar inte kommer att inträffa i en viss installation. Om den här produkten orsakar skadliga störningar på radio- eller tv-mottagning, som kan bestämmas genom att stänga av och slå på utrustningen, uppmanas användaren att försöka korrigera störningen med en eller flera av följande åtgärder:
• Rika in eller flytta om mottagningsantennen.
• Öka avståndet mellan utrustningen och mottagaren.
• Anslut utrustningen till ett uttag på en annan krets än den som mottagaren är ansluten till.
• Kontakta återförsäljaren eller en erfaren radio- / TV-tekniker för hjälp.

Var uppmärksam på att ändringar eller modifiering som inte uttryckligen godkänns av den som ansvarar för efterlevnaden kan ogiltiga användarens behörighet att använda utrustningen.

Enligt reglerna i Industry Canada får denna radiosändare endast arbeta med en antenn av en typ och maximal (eller mindre) förstärkning som godkänns för sändaren av Industry Canada. För att minska potentiell radioströmning för andra användare bör antennen typen och dess förstärkning väljas så att den ekvivalenta isotropiskt utstrålade effekten (e.i.p.) inte är mer än nödvändigt för framgångsrik kommunikation.

Garanti
Garantin för denna produkt är giltig i enlighet med de allmänna villkoren som finns på <https://transpa.rent/>.

Tekniska specifikationer
Mått (mm): 268 x 203 x 95
Vikt: 3 kg
L / R Element: 2 x 3" (Full Range)
Förstärkare: Klass D inbyggd (aktiv)
Utteffekt: 2 x 15 W
Akustisk Volym: 31
Frekvensomgång: 60 Hz - 20 kHz ± 3 dB
Högvattat digital signalbehandling (DSP)
Färmre reglage: Strömljuset, Volymjustering
Trådlöst: Bluetooth® 5 och "True Wireless" streaming med dubbla högtalare
Linje in: 2 x 3,5 mm (fram och undertill), 1 x USB

Ingår
1 x högtalare, 1 x lång ljudkabel, 1 x kort ljudkabel, 1 x lång strömkabel, 1 x kort (USB) strömkabel, väggfästet och skruvar, 3 x AC-pluggar, bomullshandskar
Återvinning
Denna produkt är konstruerad för enkel demontering och montering.
• Du kan få information om reservdelar och ytterligare instruktioner från <https://transpa.rent/>.
• Om elektroniken har blivit föråldrad på något sätt, om du behöver ett annat trådlöst format osv., Köp inte bara en ny komplett produkt, försök att uppdatera din Transparent Speaker istället. Den är utformad för att vara modular och uppdaterbar.
• Försök hitta sätt att få bort kasserade delar tillbaka i materialflödet. Gå till <https://transpa.rent/> och leta efter ett takeback-system. Vi har för avsikt att återföra så mycket som möjligt tillbaka i produktionslinjen.
• Kontakta annars din lokala avfallshantering för vägledning.

