

# Service Manual


Direct Drive Automatic Turntable System

## SL-DL5

[E], [EK], [XL], [EG], [EB],  
[EF], [XA], [EH], [Ei], [EC]

## SL-DL5(K)

[E], [EG], [EH], [XA]

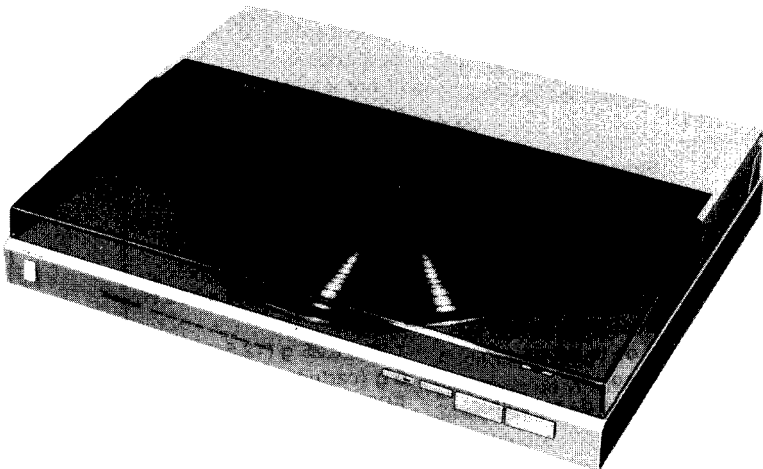

**Areas**

- \* [E] is available in Switzerland and Scandinavia.
- \* [EK] is available in United Kingdom.
- \* [XL] is available in Australia.
- \* [EG] is available in F.R. Germany.
- \* [EB] is available in Belgium.
- \* [EF] is available in France.
- \* [XA] is available in Southeast Asia, Oceania, Africa, Middle Near East and Central South America.
- \* [EH] is available in Holland.
- \* [Ei] is available in Italy.
- \* [EC] is available in Czechoslovakia.

- \* The cabinet and dust cover are available in black color and silver types.
- \* The black type model is provided with (K) in the Service Manual.

English

### Specifications

Specifications are subject to change without notice for further improvement.  
Weight and dimensions shown are approximate.

■ **General**

**Power supply:** 220 V, 50/60 Hz  
**Power consumption:** 10 W  
**Dimensions:** 43 × 8,8 × 32,3 cm  
(W×H×D) (16-59/64" × 3-1/2" × 12-23/32")  
43 × 34,1 × 32,3 cm  
(16-59/64" × 13-27/64" × 12-23/32")  
(Maximum height when top  
(dust cover) is open.)  
**Weight:** 5 kg (11 lb.)

■ **Turntable section**

**Type:** Direct drive  
Automatic turntable  
Auto start/Auto lead-in  
Auto return  
Auto stop  
Repeat play  
Auto speed select  
Manual speed selection possible  
Auto size select  
Record presence detection  
**Drive method:** Direct drive  
**Motor:** Brushless DC motor  
**Drive control method:** F.G servo control  
**Turntable platter:** Aluminum die-cast  
Diameter 30 cm (12")

**Turntable speeds:** 33-1/3 rpm and 45 rpm  
Auto speed select  
(Manual selection possible)  
**Wow and flutter:** 0.012% WRMS\*  
0.025% WRMS (JIS C5521)  
±0.035% peak  
(IEC 98A Weighted)  
\* Measured by obtaining signal from built-in frequency  
generator of motor assembly.  
**Rumble:** -56 dB (IEC 98A Unweighted)  
-78 dB (IEC 98A Weighted)

■ **Tonearm section**

**Type:** Dynamic balanced type  
Linear tracking tonearm  
4-pivot gimbal suspension  
**Effective length:** 10.5 cm (4-1/8")  
**Tracking error angle:** Within ±0.1°  
**Effective mass:** 9 g (including cartridge)  
**Resonance frequency:** 12 Hz  
**Tonearm drive motor:** DC motor  
**Phono cable  
capacitance:** 150 pF

■ **Cartridge section**

**Type:** Moving magnet stereo cartridge  
**Magnetic circuit:** All laminated core

# Technics

Matsushita Electric Trading Co., Ltd.  
P.O. Box 288, Central Osaka Japan



<b>Frequency response:</b>	10 Hz ~ 30 kHz 20 Hz ~ 10 kHz ±1 dB	<b>Stylus pressure range:</b>	1.25 ±0.25 g (12.5 ±2.5 mN)
<b>Output voltage:</b>	2.5 mV at 1 kHz, 5 cm/s. zero to peak lateral velocity (7 mV at 1 kHz, 10 cm/s. zero to peak 45° velocity [DIN 45 500])	<b>Weight:</b>	6.0 g (cartridge only)
<b>Channel separation:</b>	22 dB at 1 kHz	<b>Replacement stylus:</b>	EPS-24CS
<b>Channel balance:</b>	Within 2 dB at 1 kHz	<b>* The product for destination [XA] is equipped with voltage selector.</b>	
<b>Recommended load impedance:</b>	47 kΩ~100 kΩ	<b>* Power Supply:</b> 240V, 50/60 Hz	
<b>Compliance (dynamic):</b>	12 × 10 <sup>-6</sup> cm/dyne at 100 Hz	For United Kingdom and Australia ([EK] and [XL] areas)	

tsch

## TECHNISCHE DATEN

Änderungen der technischen Daten vorbehalten.  
Die angegebenen Gewichts- und Abmessungsdaten sind circa Werte.

### ■ Allgemeine Daten

<b>Stromversorgung:</b>	220 V, 50/60 Hz Wechselstrom
<b>Leistungsaufnahme:</b>	10 W
<b>Abmessungen:</b> (B×H×T)	43 × 8,8 × 32,3 cm 43 × 34,1 × 32,3 cm (Maximale Höhe bei vollständig geöffnetem Gehäuseoberteil.)
<b>Gewicht:</b>	5 kg

### ■ Plattenspieler

<b>Typ:</b>	Direktangetriebener automatischer Plattenspieler Auto-Start/Auto-Zuführung Rückführautomatik Stopp-Automatik Wiederhol-Betrieb Automatische Drehzahlwahl Manuelle Drehzahlwahl möglich Automatische Plattengrößewahl Plattenpräsenz-Registrierung Direktantrieb
<b>Antrieb:</b>	
<b>Motor:</b>	Kollektorloser Gleichstrommotor
<b>Antriebsregel-Methode:</b>	FG-Servo-Steuerung
<b>Plattenteller:</b>	Aluminium-Druckguß Durchmesser 30 cm
<b>Plattenteller-Drehzahlen:</b>	33-1/3 und 45 U/min Automatische Drehzahlwahl (manuelle Wahl möglich)
<b>Gleichlaufschwankungen:</b>	0,012% WRMS* 0,025% WRMS (JIS C5521) ±0,035% Spitze (IEC 98A bewertet)

\* Gemessen anhand von Signalen vom eingebauten Frequenzgenerator des Motorbauteils.

<b>Rumpel-Fremdspannungsabstand:</b>	-56 dB (IEC 98A unbewertet)
<b>Rumpel-Geräuschspannungsabstand:</b>	-78 dB (IEC 98A bewertet)

### ■ Tonarm

<b>Typ:</b>	Dynamisch ausbalancierter Tangential-Tonarm mit Kardan-aufhängung mit 4-Punkt-Drehlager
<b>Effektive Länge:</b>	10,5 cm
<b>Spurfehlwinkel:</b>	Innerhalb ±0,1°
<b>Effektive Masse:</b>	9 g (einschließlich Tonabnehmer)
<b>Resonanzfrequenz:</b>	12 Hz
<b>Tonarm-Antriebsmotor:</b>	Gleichstrommotor

### ■ Tonabnehmer

<b>Typ:</b>	Stereo-Magnet-Tonabnehmer mit Einpunkt-Aufhängungssystem
<b>Magnetkreis:</b>	Ganzlamellenkern
<b>Frequenzgang:</b>	10 Hz bis 30 kHz 20 Hz bis 10 kHz ±1 dB 2,5 mV bei 1 kHz
<b>Ausgangsspannung:</b>	5 cm/s. Null-zu-Spitze, lateral [7 mV bei 1 kHz 10 cm/s. Null-zu-Spitze, 45° (DIN 45 000)]
<b>Kanaltrennung:</b>	22 dB bei 1 kHz
<b>Kanalabweichung:</b>	Innerhalb 2 dB bei 1 kHz
<b>Empfohlene Endimpedanz:</b>	47 kΩ ~ 100 kΩ
<b>Nachgiebigkeit (dynamisch):</b>	12 × 10 <sup>-6</sup> cm/dyn bei 100 Hz
<b>Auflagekraft-Einstellbereich:</b>	1,25 ±0,25 g (12,5 ±2,5 mN)
<b>Gewicht:</b>	6,0 g (nur Tonabnehmer)
<b>Ersatznadel:</b>	EPS-24CS








## DISASSEMBLY INSTRUCTIONS


### How to remove the turntable

1. Open the upper cabinet.
2. Detach the 45 rpm adaptor as shown in Fig. 1.
3. Remove the turntable mat and lift up the turntable.  
\* The turntable is tight fitted onto the center spindle. When removing the turntable, take care not to give damage to the upper cabinet arm motor cover and tonearm cover.
4. When putting the turntable mat on the turntable, match the projection of the turntable (record detector) with the hold of the turntable mat. (See Fig. 2)

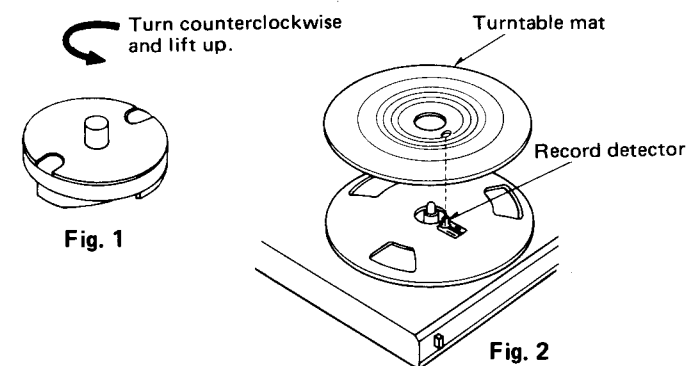

### How to remove the bottom board

1. Remove the 45 rpm adaptor and turntable.
2. Turn over the body on a soft cloth taking care not to damage the upper cabinet and dust cover.
3. Remove the 6 setscrews. (Fig. 3 : ① ~ ⑥)

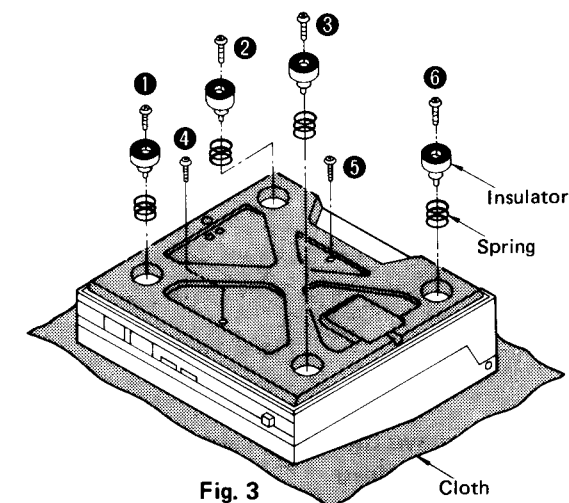



### How to remove the main circuit printed board

1. Remove the bottom board. (Refer to "How to remove the bottom board".)
2. Release the holder of the stator frame lead connector and pull off the lead wire. (Fig. 4)
3. Remove the 6 setscrews (Fig. 4 : ⑦ ~ ⑫) of the printed circuit board.
4. When mounting the printed circuit board . . . . .  
(1) Turn the record detecting sensor lever counterclockwise.  
(2) Insert the speed selector switch into the knob.  
(3) Connect the lead wire to the connector, close the holder and tighten the screws.



\* The printed circuit board is grounded to the chassis by screw ⑩. When checking the conduction with screw ⑩ removed, connect the earth terminal of the printed circuit board to the chassis (stator frame).

### How to remove the stator frame

1. Remove the bottom board.  
(Refer to "How to remove the bottom board".)
2. Release the holder of the stator frame lead connector and pull off the lead wire. (Fig. 4)
3. Remove the 2 setscrews (Fig. 4 : ⑩, ⑪) of the radiator.
4. Remove the 3 setscrews (Fig. 4 : ⑭ ~ ⑯) of the stator frame.

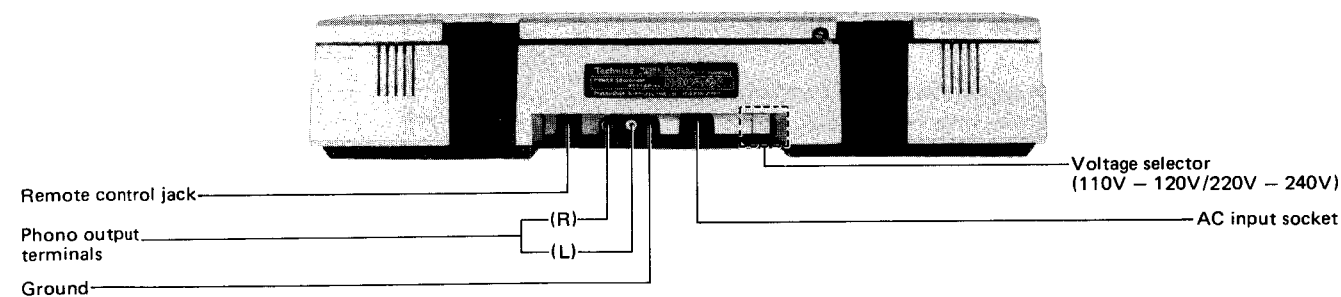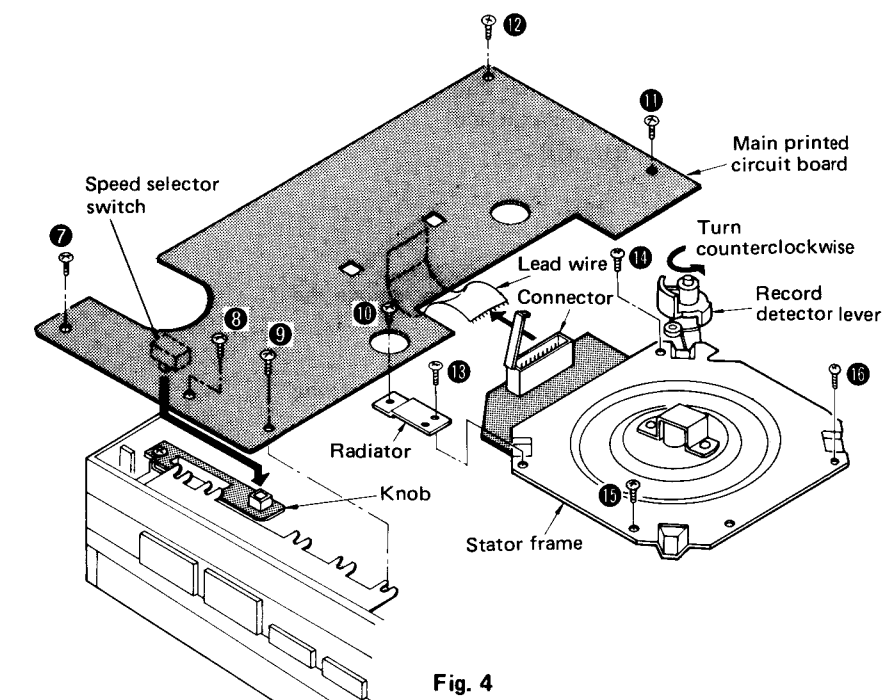

\* The product for destination [XA] is equipped with voltage selector.

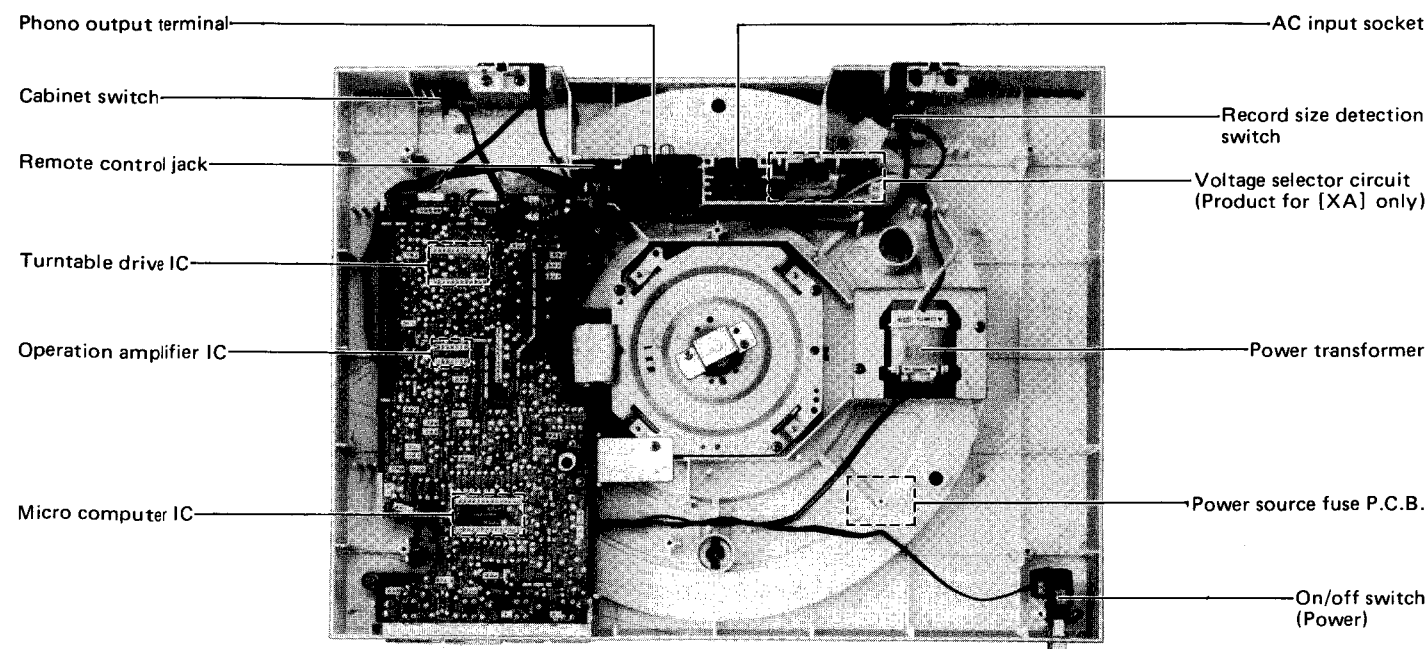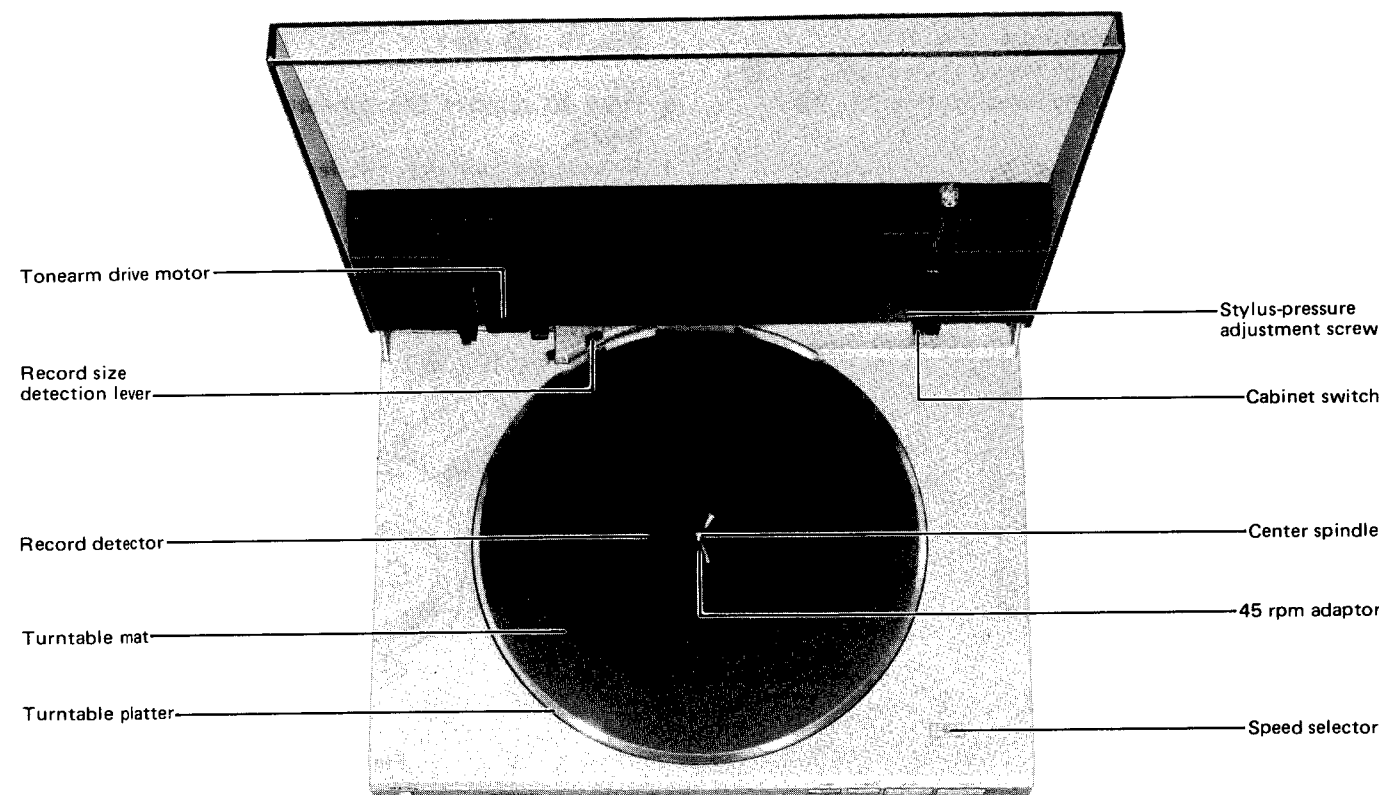



### How to remove the dust cover

1. Open the upper cabinet.
2. Remove the 4 setscrews of the arm motor cover. (Fig. 5 : 17 ~ 20).
3. Remove the 5 setscrews of the dust cover. (Fig. 5 : 21 ~ 23 and Fig. 6 : 24, 25)

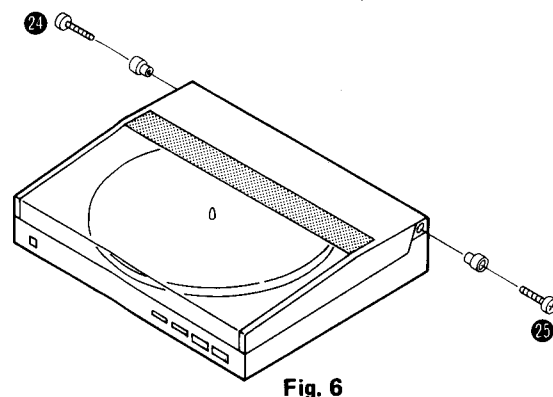


Fig. 6

### How to remove the upper cabinet (Separation of cabinet)

1. Remove the bottom board. (Refer to "How to remove the bottom board".)
2. Detach the output terminal from lower cabinet. (Fig. 7)
3. Pull out connectors 26 and 27. (Fig. 7)
4. Remove the 4 setscrews of the hinge. (Fig. 7 : 28 ~ 31)
5. The hinge is engaged with the lower cabinet. The lower cabinet can be separated from the upper cabinet by lifting the cabinet while releasing the hinge claws. (See Fig. 5 (A))

### How to remove the arm motor printed board

1. Open the upper cabinet and detach the arm motor cover. (Refer to "How to remove the dust cover".)
2. Remove the setscrews 32. (Fig. 5)
3. Release the claws with the nail and remove the position detecting circuit and the rest switch. (Fig. 5 : (B), (C))

### How to remove the Hall element

1. Remove the turntable. (Refer to "How to remove the turntable".)
2. Unsolder the Hall element.  
\*The Hall element should be installed with the marking side up as in Fig. 8.  
With the marking side up, no problem will occur even when the leg is reversed in position.

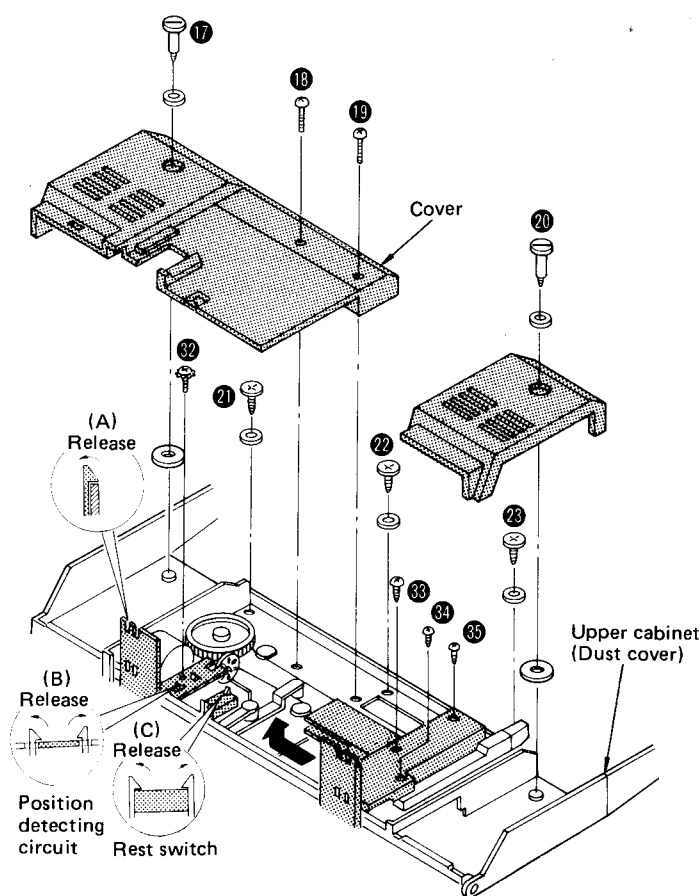


Fig. 5

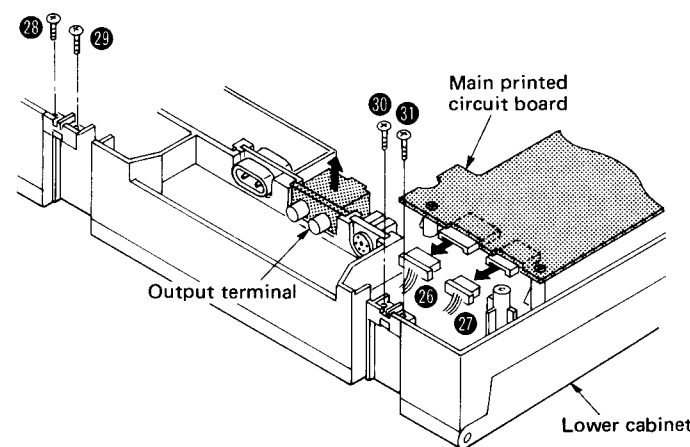


Fig. 7

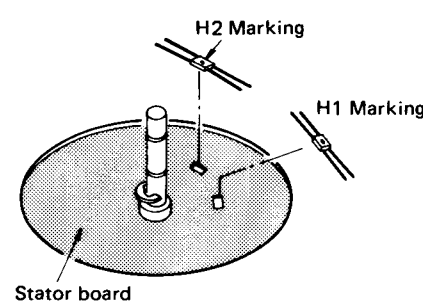


Fig. 8

### How to remove the cartridge

1. Open the upper cabinet.
2. Completely loosen the setscrew and pull out the cartridge. (Fig. 9)
3. When attaching the cartridge again, match the tonearm connector with the cartridge pin, then completely insert it and tighten the setscrew.

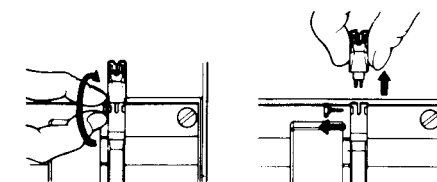


Fig. 9

### How to remove the tonearm

1. Remove the cartridge. (Refer to "How to remove the cartridge".)
2. Remove the 3 setscrews of the tonearm cover (Fig. 5 : 33 ~ 35) and detach the cover in the direction of the arrow.
3. Unsolder 5 leads of the cartridge. (Fig. 10)
4. Remove the setscrew of the tonearm board. (Fig. 10 : 36)
5. Remove the setscrew of the tonearm. (Fig. 11 : 37)

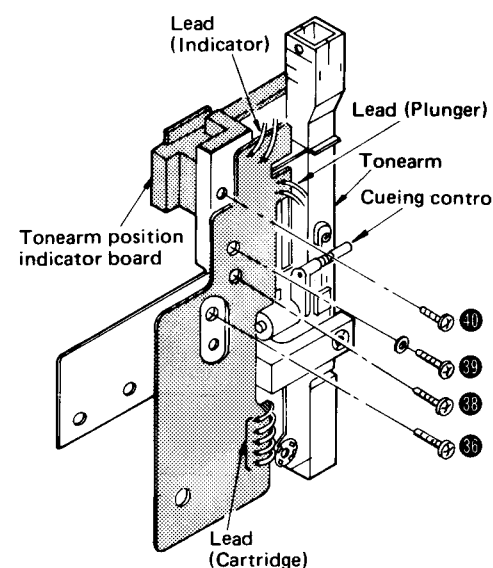


Fig. 10

### How to remove the cabinet switch

1. Remove the bottom board. (Refer to "How to remove the bottom board".)
2. Remove the setscrew of the cabinet switch. (Fig. 12 : 41)
3. When fitting the cabinet switch, be sure to open the upper cabinet.

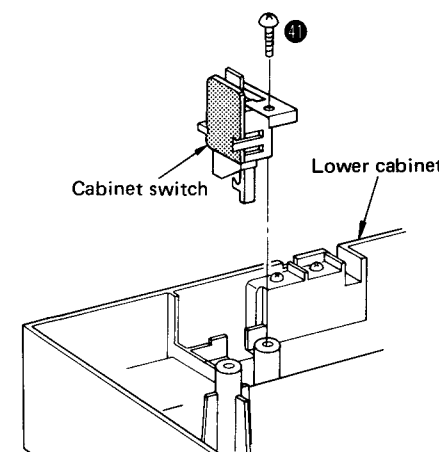


Fig. 12

### How to remove the cueing control ass'y

1. Remove the cartridge. (Refer to "How to remove the cartridge".)
2. Remove the tonearm cover. (Refer to "How to remove the tonearm".)
3. Unsolder 2 leads of the plunger.
4. Remove the 2 setscrews of the cueing control ass'y. (Fig. 10 : 38, 39)

### How to remove the tonearm position indicator board

1. Remove the cartridge. (Refer to "How to remove the cartridge".)
2. Remove the tonearm cover. (Refer to "How to remove the tonearm".)
3. Unsolder 2 leads of the indicator. (Fig. 10)
4. Remove the setscrew of the tonearm position indicator board. (Fig. 10 : 40)

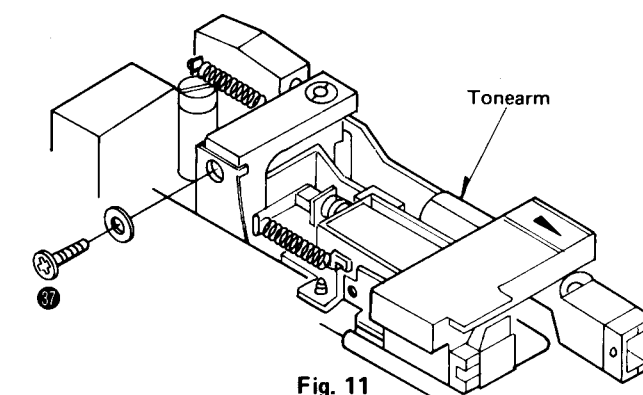


Fig. 11

### How to remove the on/off switch

1. Remove the bottom board. (Refer to "How to remove the bottom board".)
2. Pull out the knob.
3. Remove the setscrew of the on/off switch. (Fig. 13 : 42)

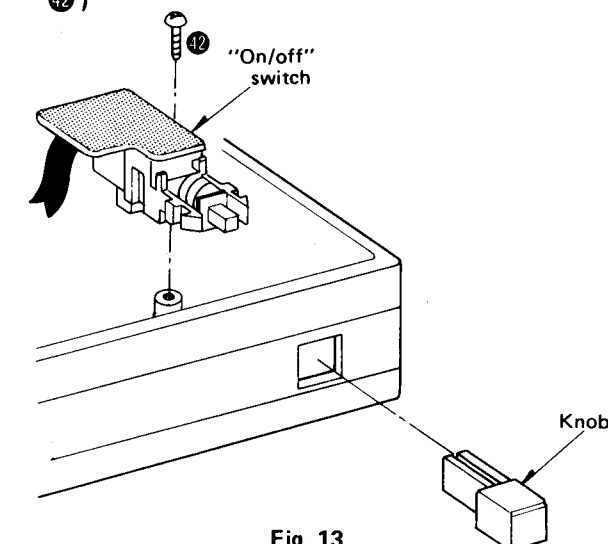


Fig. 13



## ■ HOW TO SET THE TONEARM DRIVE ROPE

Set the rope according to the following procedure.

1. Open the upper cabinet and remove the cartridge.
2. Remove the arm motor cover and tonearm cover.
3. Detach the arm drive wheel "C" ring ⑬ and washer ⑭, and remove the drive wheel. (See Fig. 14)
4. Turn over the arm drive wheel and set the rope in the order of 1 ~ 2. (Fig. 15)
5. Holding the rope set over the arm drive wheel with the hand, set the rope over the wheels in the order of 3 ~ 5 in Fig. 16.
6. After setting the rope, rotate the worm gear by hand until the tonearm matches the rope connector.
7. Rotate the worm gear by hand and check that the tonearm operates, and then fit the washer ⑭ and "C" ring ⑬ in place.

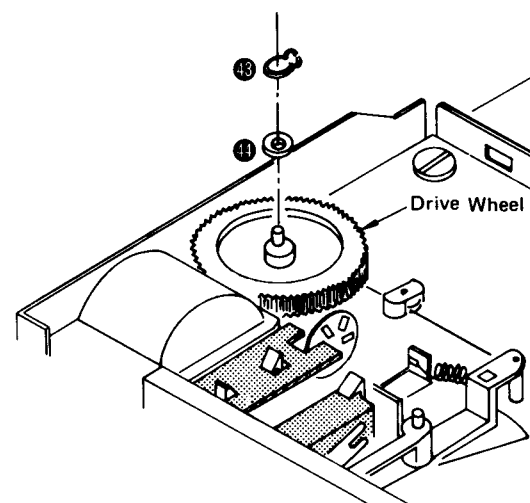


Fig. 14

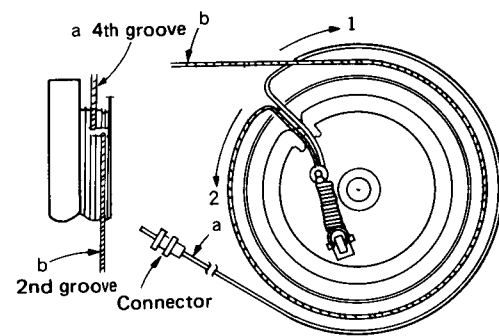


Fig. 15

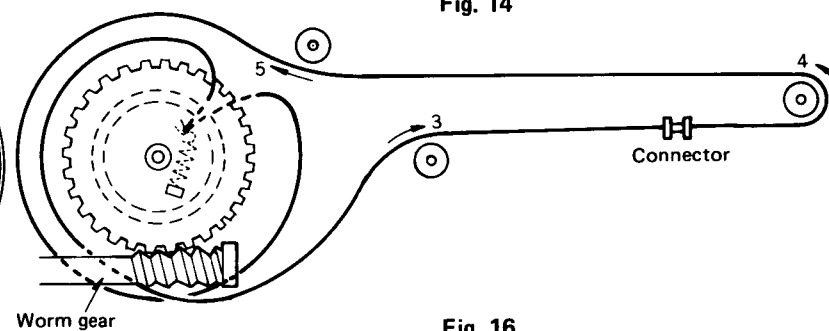


Fig. 16

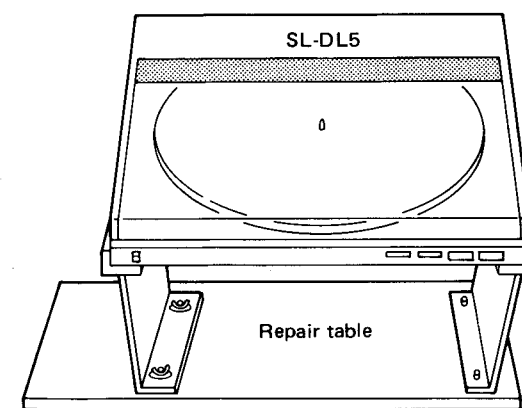


Fig. 17

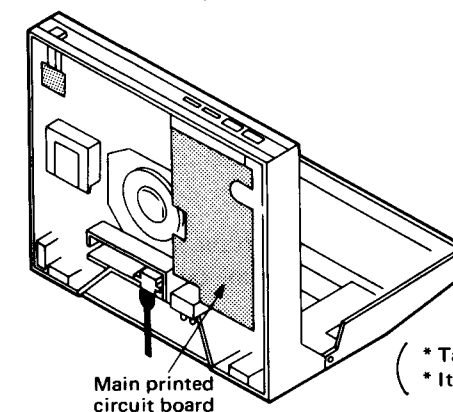


Fig. 21

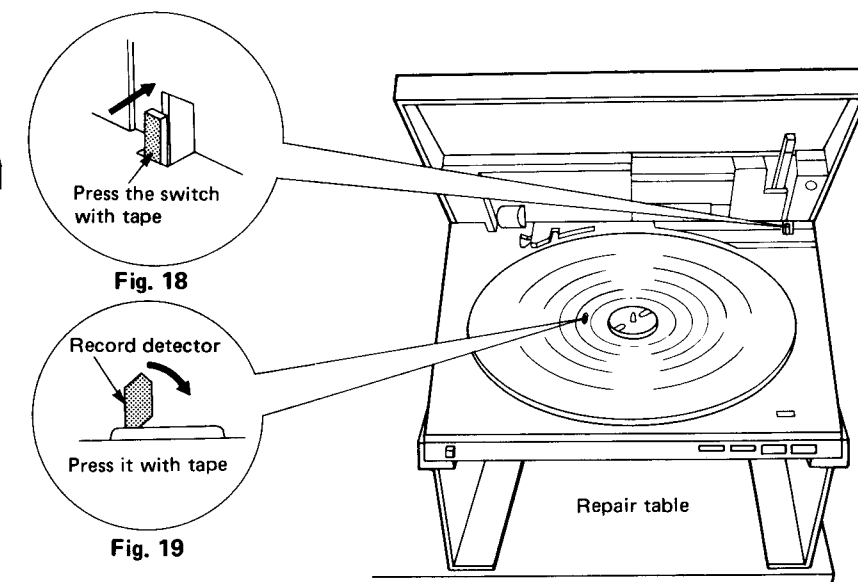


Fig. 18

Fig. 19

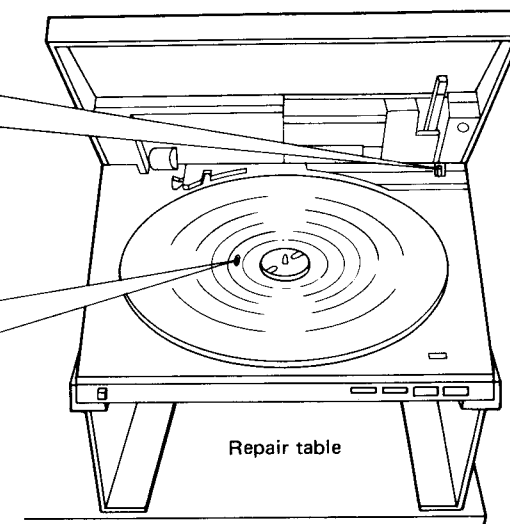


Fig. 20  
(Abb. 1)

\* Take care not to allow the unit to fall down.  
\* It is desirable to use a repair table for the repair job.

## ■ CHECKING METHOD OF THE UNIT

The unit (circuit, etc.) can be checked and adjusted as follows:

- Close the upper cabinet. (Check of the main circuit printed board.)

1. Remove the bottom board.
2. Place the unit on the player repair table. (Fig. 17)
3. Put a record on the turntable and close the upper cabinet.
4. Set the power on/off switch to "on".
5. Press the start button to rotate the turntable.
6. Check the unit with a tester from below the bottom.


- Open the upper cabinet. (Check of the tonearm drive unit and main circuit printed board.)

1. Remove the bottom board.
2. Completely open the upper cabinet.
3. Secure the record detector with adhesive tape. (Fig. 18)
4. Fasten the cabinet release switch with adhesive tape. (Fig. 19)
5. Place the unit on the player repair table (Fig. 20) or carefully raise the unit after removing the 45-adaptor and turntable mat. (Fig. 21).
6. Set the power on/off switch to "on".
7. Press the start button. (The record size 17 cm and the speed 45 r.p.m. are automatically detected, and the turntable starts rotating.)

\* When raising the unit, take care because the turntable is not secured. It is desirable to use the player repair table.)

## ■ MEASUREMENTS AND ADJUSTMENTS English

- Diagram for printed circuit board adjustment



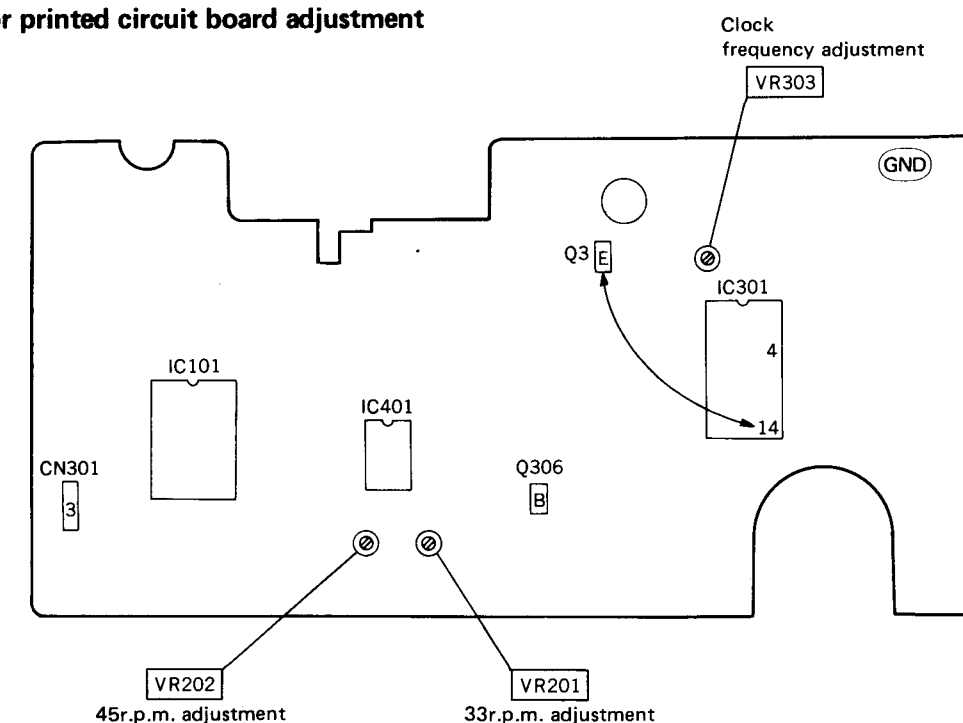





- \* Connect between Q3 (E) and IC301 (14) for clock frequency adjustment.
- \* Zwischen Q3 (E) und IC301 (14) anschließen, für die Zeitgeberfrequenz.
- \* Connecter entre Q3 (E) et IC301 (14) pour le réglage de la fréquence des impulsions d'horloge.
- \* Conectar entre Q3 (E) y IC301 (14) para ajuste de frecuencia de reloj.



● Instruments used

1. DC voltmeter
2. Oscilloscope or frequency counter

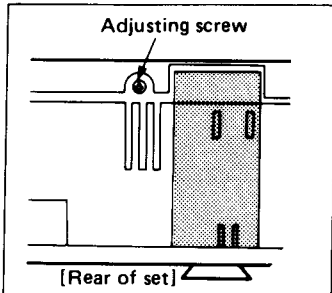
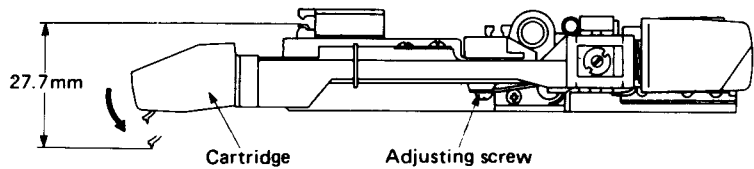
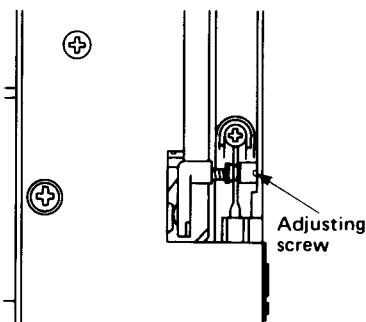
Step	Item	Adjustment procedure
1	Auto start position	<ol style="list-style-type: none"> <li>1 Make sure that the tonearm is at the start position (on the rest).</li> <li>2 Adjust by turning the auto start position adjusting screw.</li> </ol> <p><b>Tonearm lowers inside the disc:</b> Turn the adjusting screw clockwise.</p> <p><b>Tonearm lowers outside the disc:</b> Turn the adjusting screw anticlockwise.</p> <p>* Be sure to use 30 cm record for the adjustment.</p> 
2	Arm lift height	<ol style="list-style-type: none"> <li>1 Make the set as illustrated in Fig. 20.</li> <li>2 Set the on/off switch to "on" and press the start switch to shift the tonearm inward.</li> <li>3 Press the cueing control button so that the distance between the cartridge stylus tip and the guide rail is 27.7 mm.</li> </ol> <p><b>To increase the distance . . . . .</b> turn the adjusting screw anticlockwise.</p> <p><b>To decrease the distance . . . . .</b> turn the adjusting screw clockwise.</p> 
3	Tonearm offset angle	<ol style="list-style-type: none"> <li>1 Make the set as illustrated in Fig. 20.</li> <li>2 Set the on/off switch to "on" and press the start switch to shift the tonearm inward.</li> <li>3 Turn the offset angle adjusting screw so that the arm center matches the V-groove of the lift bar.</li> </ol> 

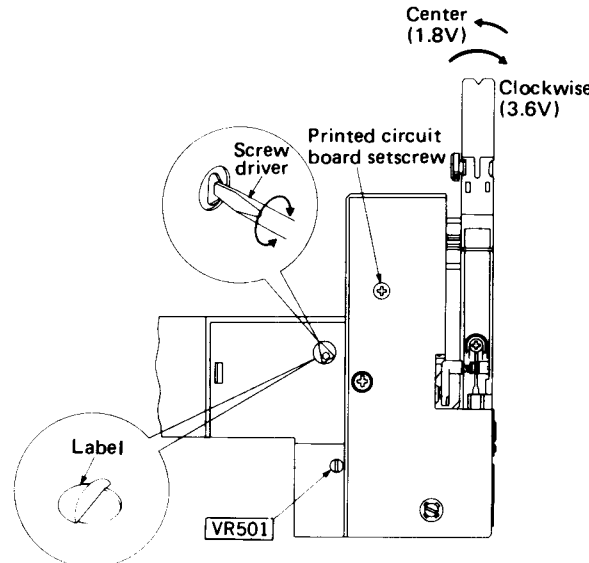
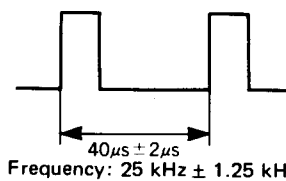
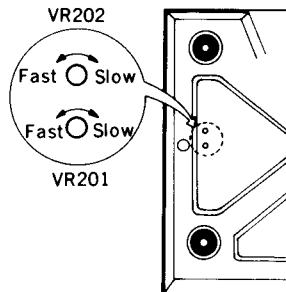
Step	Item	Adjustment procedure
4	Servo gain and offset voltage	<ol style="list-style-type: none"> <li>1 Make the set as illustrated in Fig. 20.</li> <li>2 Connect the DC voltmeter to TP315 (Q306) base or connector CN301 terminal ③ and TP3 (earth).</li> <li>3 Set the on/off switch to "on" and press the start switch to shift the tonearm inward.</li> <li>4 Remove the label of the tonearm cover.</li> <li>5 Completely shift the tonearm to the right. Then, adjust VR501 so that the voltage is 3.6V. <b>(Servo gain adjustment)</b></li> <li>6 Set the tonearm to the center and make sure that the output voltage is 1.8V. If the voltage is not 1.8V, loosen the printed circuit board setscrew and move the board to the right of left by a screwdriver so that the output voltage becomes 1.8V. After the adjustment, tighten the printed circuit board setscrew. <b>(Offset adjustment)</b></li> </ol> 
5	Clock frequency	<ol style="list-style-type: none"> <li>1 Make the set as illustrated in Fig. 20.</li> <li>2 Remove the tape from the cabinet switch.</li> <li>3 Connect TP7 (Q3 emitter) to TP326 (IC301 pin 14) with clip lead or the like.</li> <li>4 Connect the oscilloscope or frequency counter to TP316 (IC301 pin 4).</li> <li>5 Set the on/off switch to "on".</li> <li>6 Adjust VR301 so that the output waveform cycle is <math>40 \mu s \pm 2 \mu s</math>. Also, adjust VR301 so that the output frequency is <math>25 \text{ kHz} \pm 1.25 \text{ kHz}</math>.</li> </ol> 
6	Rotational speed	<ol style="list-style-type: none"> <li>1 Make the set as illustrated in Fig. 20.</li> <li>2 Play a 17 cm record.</li> <li>3 Turn VR202 to adjust the speed to the rated speed (45 rpm).</li> <li>4 Play a 30 cm record.</li> <li>5 Turn VR201 to adjust the speed to the rated speed (<math>33\frac{1}{3}</math> rpm).</li> </ol> <p><b>Note:</b> Be sure to adjust 45 rpm first.</p> 



MESSUNGEN UND JUSTIERUNGEN Deutsch

- Zu verwendende Instrumente
- 1. Elektronisches Gleichstrom-Voltmeter
- 2. Oszilloskop oder Frequenzzähler

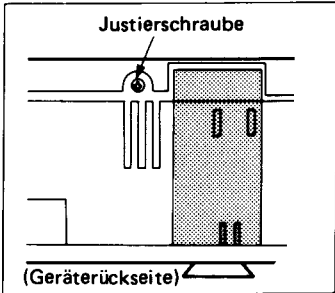
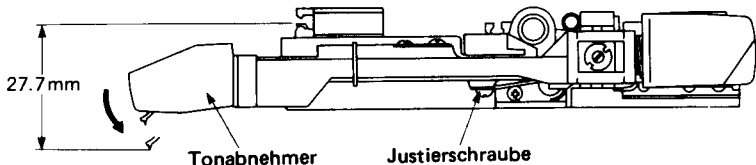
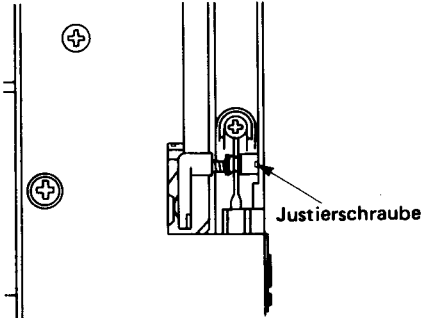
Schritt	Gegenstand	Justiermethode
1	Auto-Start-Position	<div><div><div><div>1 Überprüfen, daß der Tonarm in der Startposition (auf der Tonarmablage) ist.</div><div>2 Durch Drehen der Auto-Start-Positions-Justierschraube justieren.</div><div>Bei Absenken des Tonarms zu weit innen: Die Justierschraube im Uhrzeigersinn drehen.</div><div>Bei Absenken des Tonarms zu weit außen: Die Justierschraube entgegen dem Uhrzeigersinn drehen.</div><div>* Für die Justierung muß unbedingt eine 30 cm-Platte verwendet werden.</div></div><div></div></div></div>
2	Tonarm-lifthöhe	<div><div><div><div>1 Das Gerät so einstellen, wie in Abb. 1 gezeigt.</div><div>2 Den Netzschalter auf ON stellen und die Starttaste drücken, um den Tonarm nach innen zu bewegen.</div><div>3 Die Lifttaste drücken, so daß der Abstand zwischen der Tonabnehmer-Nadelspitze und der Führungsschiene 27.7 mm beträgt.</div><div>Um den Abstand zu vergrößern . . . . die Justierschraube entgegen dem Uhrzeigersinn drehen.</div><div>Um den Abstand zu verkleinern . . . . die Justierschraube im Uhrzeigersinn drehen.</div></div><div></div></div></div>
3	Tonarm-Reibungswinkel	<div><div><div><div>1 Das Gerät so einstellen, wie in Abb. 1 gezeigt.</div><div>2 Den Netzschalter auf ON stellen und die Starttaste drücken, um den Tonarm nach innen zu bewegen.</div><div>3 Die Reibungswinkel-Justierschraube drehen, bis die Armmitte mit der V-Kerbe am Liftbalken übereinstimmt.</div></div><div></div></div></div>

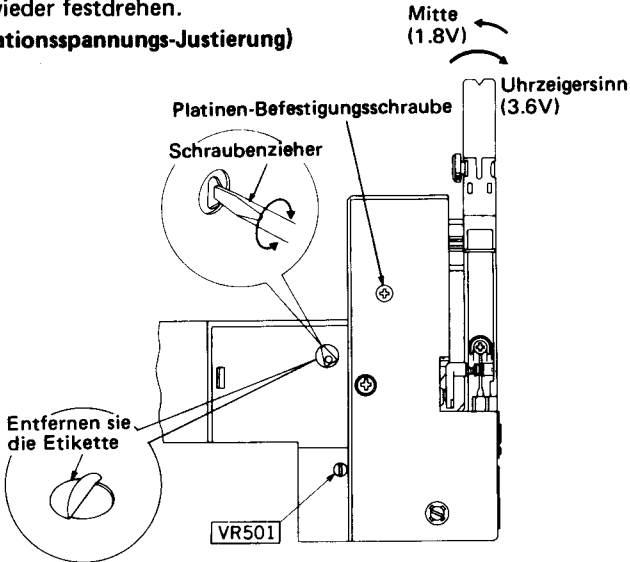
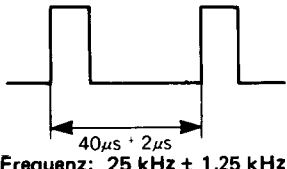
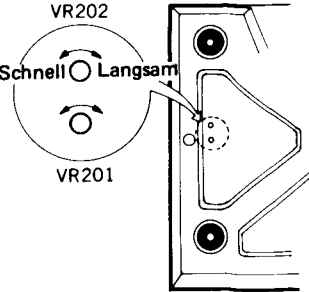
Schritt	Gegenstand	Justiermethode
4	Servo-Verstärkungs- und Kompensations-Spannung	<div><div><div><div>1 Das Gerät so einstellen, wie in Abb. 1 gezeigt.</div><div>2 Das elektronische Gleichstrom-Voltmeter an TP315 (Q306) Basis oder Anschluß CN301 Stift 2 und TP3 (Masse).</div><div>3 Den Netzschalter auf ON stellen und die Starttaste drücken, um den Tonarm nach innen zu bewegen.</div><div>4 Den Tonarm ganz nach rechts stellen. VR501 dann so einstellen, daß die Spannung 3.6V beträgt. (Servo-Verstärkungs-Justierung)</div><div>5 Den Tonarm in die Mitte stellen und überprüfen, daß die Ausgangsspannung 1.8V beträgt.</div><div>6 Falls die Spannung nicht 1.8V beträgt, die Platinen-Befestigungsschraube lösen und die Platine mit einem Schraubenzieher nach links oder rechts bewegen, bis die Ausgangsspannung 1.8V beträgt. Nach der Justierung, die Platinen-Befestigungsschraube wieder festdrehen.</div><div>(Kompensationsspannungs-Justierung)</div></div><div></div></div></div>
5	Zeitgeberfrequenz	<div><div><div><div>1 Das Gerät so einstellen, wie in Abb. 1 gezeigt.</div><div>2 Das Klebband vom Gehäuseschalter entfernen.</div><div>3 Mit einem Klemmenkabel o.ä. TP7 (Q3 Emitter) mit TP326 (IC301 Stift 14) verbinden.</div><div>4 Das Oszilloskop oder den Frequenzzähler an TP316 (IC301 Stift 4) anschließen.</div><div>5 Den Netzschalter auf ON stellen.</div><div>6 VR301 so justieren, daß der Ausgangswellenform-Zyklus <math>40\mu s \pm 2\mu s</math> beträgt. Ebenfalls VR301 so justieren, daß die Ausgangsfrequenz <math>25\text{ kHz} \pm 1.25\text{ kHz}</math> beträgt.</div></div><div></div></div></div>
6	Drehzahl	<div><div><div><div>1 Das Gerät so einstellen, wie in Abb. 1 gezeigt.</div><div>2 Eine 17 cm-Platte abspielen.</div><div>3 VR202 drehen, um die Drehzahl auf die Nenndrehzahl zu justieren (45 U/min).</div><div>4 Eine 30 cm-Platte abspielen.</div><div>5 VR201 drehen, um die Drehzahl auf die Nenndrehzahl zu justieren (33-1/3 U/min).</div><div>Anmerkung: Unbedingt zuerst 45 U/min justieren.</div></div><div></div></div></div>



MESURAGES ET RÉGLAGES Français

- Appareils utilisés
- 1. Voltmètre électronique à C.C.
- 2. Oscilloscope ou compteur de fréquence

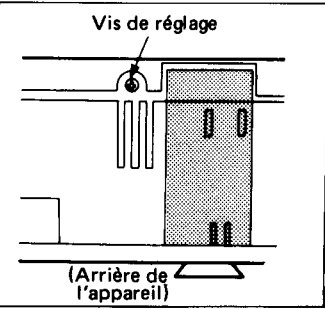
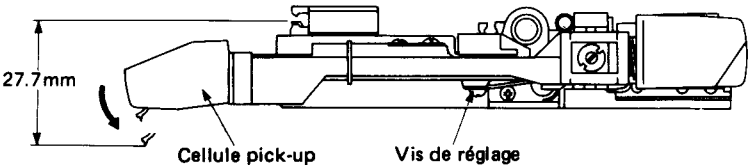
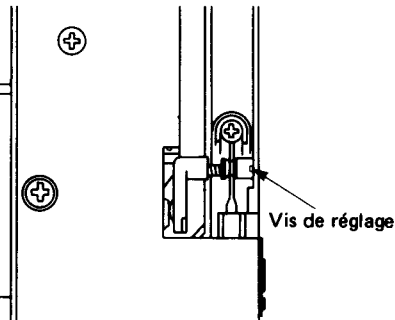
Etape	Article	Procédure de réglage
1	Position de démarrage automatique	<div><div><div><div>1 S'assurer que le bras de lecture est à la position de démarrage (sur l'accoudoir).</div><div>2 Ajuster en tournant la vis d'ajustement du positionnement de démarrage automatique.</div></div><div><div>Le bras de lecture s'abaisse à l'intérieur du disque:</div><div>Tourner la vis de réglage dans le sens des aiguilles d'une montre.</div></div><div><div>Le bras de lecture s'abaisse à l'extérieur du disque:</div><div>Tourner la vis de réglage dans le sens inverse des aiguilles d'une montre.</div></div></div><div><div>*S'assurer d'utiliser un disque de 30 cm pour la mise au point.</div><div></div></div></div>
2	Hauteur d'élévation du bras	<div><div><div><div>1 Effectuer le réglage comme il est illustré à la Fig. 20.</div><div>2 Mettre l'interrupteur d'alimentation sur "on" (marche) et appuyer sur le bouton de mise en marche pour déplacer le bras de lecture vers l'intérieur.</div><div>3 Appuyer sur le bouton de pose/relevage de façon à ce que la distance entre l'extrémité de la pointe de lecture de la cellule pick-up et le rail de guidage soit de 27.7 mm.</div></div><div><div>Pour augmenter la distance . . .</div><div>Tourner la vis de réglage dans le sens inverse des aiguilles d'une montre.</div></div><div><div>Pour diminuer la distance . . .</div><div>Tourner la vis de réglage dans le sens des aiguilles d'une montre.</div></div></div><div><div></div></div></div>
3	Angle de décalage du bras de lecture	<div><div><div><div>1 Effectuer le réglage comme il est illustré à la Fig. 20.</div><div>2 Mettre l'interrupteur d'alimentation sur "on" (marche) et appuyer sur le bouton de mise en marche pour déplacer le bras de lecture vers l'intérieur.</div><div>3 Tourner la vis de réglage de l'angle de décalage de façon à ce que le centre du bras coïncide avec la rainure en V de la tige d'élévation.</div></div><div><div></div></div></div></div>

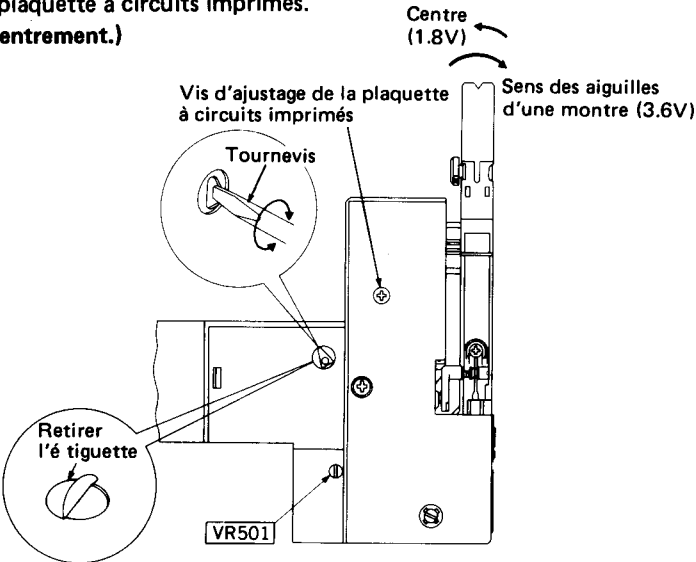
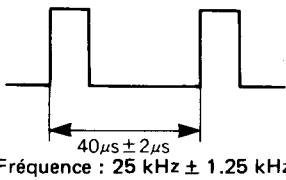
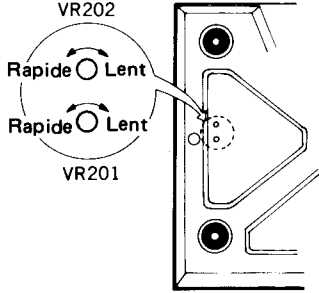
Etape	Article	Procédure de réglage
4	Amplification servo-mécanique et tension de suppression.	<div><div><div><div>1 Effectuer le réglage comme il est illustré à la Fig. 20.</div><div>2 Brancher un voltmètre électronique à C.C. à la base de TP315 (Q306) ou à la borne 3 du connecteur CN301 et de TP3 (mise à la terre).</div><div>3 Mettre l'interrupteur d'alimentation sur "on" (marche) et appuyer sur le bouton de mise en marche pour déplacer le bras de lecture vers l'intérieur.</div><div>4 Déplacer complètement le bras de lecture vers la droite. Puis, ajuster VR501 de façon à ce que la tension soit de 3.6V. (Réglage de l'amplification servo-mécanique.)</div><div>5 Placer le bras de lecture au centre et s'assurer que la tension de sortie soit de 1.8V.</div><div>6 Si la tension n'est pas de 1.8V, desserrer la vis d'ajustage de la plaquette à circuits imprimés et déplacer la plaquette vers la droite ou vers la gauche avec un tournevis, de façon à ce que la tension de sortie soit de 1.8V. Après la mise au point, resserrer la vis d'ajustage de la plaquette à circuits imprimés.</div></div><div><div>(Mise au point du décentrement.)</div><div></div></div></div></div>
5	Fréquence des impulsions d'horloge	<div><div><div><div>1 Effectuer le réglage comme il est montré à la Fig. 20.</div><div>2 Retirer la bande du dispositif de commutation du boîtier.</div><div>3 Connecter TP7 (émetteur Q3) à TP326 (broche 14 de IC301) avec un fil de raccordement à pince ou quelque chose de similaire.</div><div>4 Brancher l'oscilloscope ou le compteur de fréquence à TP316 (broche 4 de IC301).</div><div>5 Mettre l'interrupteur d'alimentation sur "on" (marche).</div><div>6 Régler VR301 de façon à ce que le cycle de la forme d'onde de sortie soit de 40µs ± 2µs. En outre, régler VR301 de façon à ce que la fréquence de sortie soit de 25 kHz ± 1.25 kHz.</div></div><div><div></div></div></div></div>
6	Vitesse rotationnelle	<div><div><div><div>1 Effectuer le réglage comme il est illustré à la Fig. 20.</div><div>2 Faire jouer un disque de 17 cm.</div><div>3 Tourner VR202 pour ajuster la vitesse à la vitesse nominale de rotation (45 t/p.m.)</div><div>4 Faire jouer un disque de 30 cm.</div><div>5 Tourner VR201 pour régler la vitesse à la vitesse nominale de rotation (33-1/3 t/p.m.)</div></div><div><div>Note: S'assurer de régler tout d'abord un 45 t/p.m.</div><div></div></div></div></div>



MEDICIONES Y AJUSTE Español

- Instrumentos usados
1. Voltímetro electrónico CC.
  2. Osciloscopio o contador de frecuencia

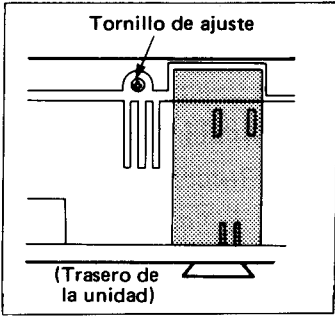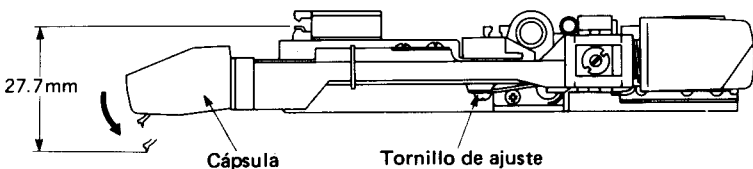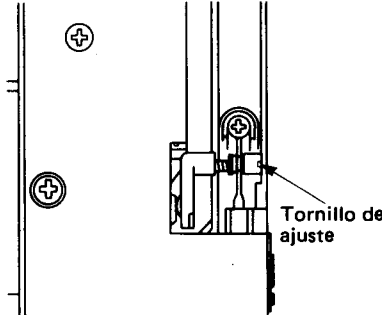Paso	Item	Procedimiento de ajuste
1	Posición de arranque automático	<div><div><div>1 Asegúrese de que el brazo del fonocaptor está en la posición de arranque (en el soporte).</div><div>2 Ajuste girando el tornillo de ajuste de posición de arranque automático.</div><div>El brazo del fonocaptor baja dentro del disco: Gire el tornillo de ajuste a la derecha.</div><div>El brazo del fonocaptor baja fuera del disco: Gire el tornillo de ajuste a la izquierda.</div><div>*Para el ajuste, asegúrese de usar un disco de gramófono de 30 cm.</div></div><div></div></div>
2	Altura de alzo de brazo	<div><div><div>1 Coloque la unidad como se ilustra en la Fig. 20.</div><div>2 Conecte el interruptor de la corriente y apriete el botón de arranque para desviar el brazo del fonocaptor hacia dentro.</div><div>3 Apriete el botón de colocación en surco de la aguja, de manera que la distancia entre la punta de la aguja de la cápsula y el riel de guía sea 27.7 mm.</div><div>Para aumentar la distancia . . . . gire el tornillo de ajuste a la izquierda.</div><div>Para disminuir la distancia . . . . gire el tornillo de ajuste a la derecha.</div></div><div></div></div>
3	Angulo del brazo del fonocaptor	<div><div><div>1 Coloque la unidad como se ilustra en la Fig. 20.</div><div>2 Conecte el interruptor de la corriente y apriete el botón de arranque para desviar el brazo del fonocaptor hacia dentro.</div><div>3 Gire el tornillo de ajuste del ángulo del brazo del fonocaptor de manera que el centro del brazo coincida con la ranura-V de la barra de alza.</div></div><div></div></div>

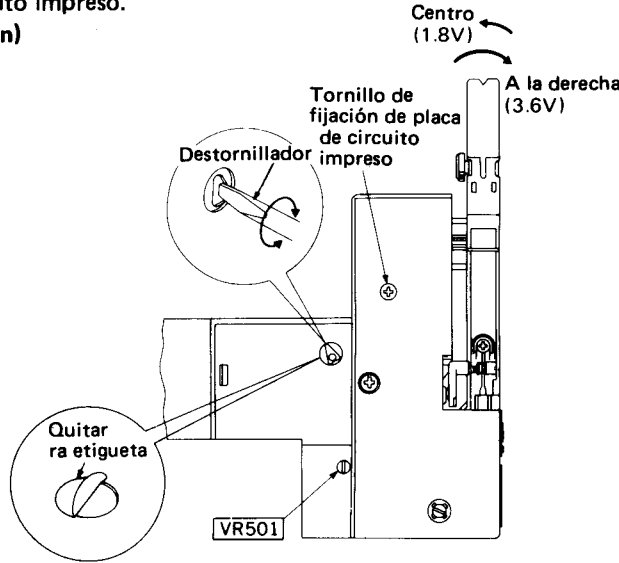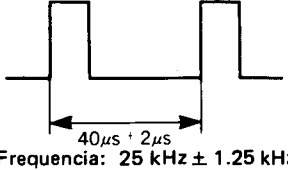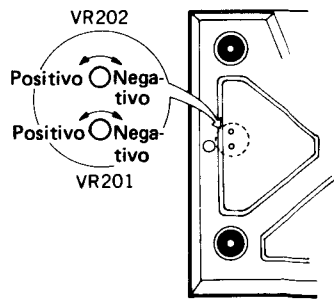Paso	Item	Procedimiento de ajuste
4	Contratensión y servogancia	<div><div><div>1 Coloque la unidad como se ilustra en la Fig. 20.</div><div>2 Conecte el voltímetro electrónico CC a base de TP315 (Q306) o terminal 3 CN301 del conector y TP3 (tierra).</div><div>3 Conecte el interruptor de la corriente y apriete el botón de arranque para desviar el brazo del fonocaptor hacia dentro.</div><div>4 Desvíe completamente el brazo del fonocaptor a la derecha. Luego, ajuste VR501 de manera que la tensión sea 3.6V.</div><div>(Ajuste de servogancia)</div><div>5 Coloque el brazo del fonocaptor en el centro y asegúrese de que la tensión de salida sea 1.8V.</div><div>6 Si la tensión no es 1.8V, afloje el tornillo de fijación de la placa del circuito impreso y mueva la placa a la derecha o izquierda mediante un destornillador de manera que la tensión de salida se haga 1.8V. Después del ajuste, apriete el tornillo de fijación de la placa del circuito impreso.</div><div>(Ajuste de desviación)</div></div><div></div></div>
5	Frecuencia de reloj	<div><div><div>1 Coloque la unidad como se ilustra en la Fig. 20.</div><div>2 Remueva la cinta del interruptor del gabinete.</div><div>3 Conecte TP7 (emisor Q3) a TP326 (púa 14 de IC301) con un cordón con presilla o algo parecido.</div><div>4 Conecte el osciloscopio o el contador de frecuencia a TP316 (púa 4 de IC301).</div><div>5 Conecte el interruptor de la corriente.</div><div>6 Ajuste VR301 de manera que el ciclo de forma de onda de salida sea 40µs ± 2µs. También, ajuste VR301 de manera que la frecuencia de salida sea 25 kHz ± 1.25 kHz.</div></div><div></div></div>
6	Velocidad rotacional	<div><div><div>1 Coloque la unidad como se ilustra en la Fig. 20.</div><div>2 Toque un disco de 17 cm.</div><div>3 Gire VR202 para ajustar la velocidad a la velocidad de régimen (45 r.p.m.)</div><div>4 Toque un disco de 30 cm.</div><div>5 Gire VR201 para ajustar la velocidad a la velocidad de régimen (33-1/3 r.p.m.)</div><div>Nota: Asegúrese de ajustar a 45 r.p.m. primero.</div></div><div></div></div>



SL-DL5

REPLACEMENT PARTS LIST...Electric Parts

- Notes: 1. Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.  
2. Important safety notice: Components identified by  $\Delta$  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.  
3. Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.  
4. The "S" mark is service standard parts and may differ from production parts.

Areas

- \* [E] is available in Switzerland and Scandinavia.  
\* [EK] is available in United Kingdom.  
\* [XL] is available in Australia.  
\* [EG] is available in F.R. Germany.  
\* [EB] is available in Belgium.  
\* [EF] is available in France.  
\* [XA] is available in Southeast Asia, Oceania, Africa, Middle Near East and Central South America.  
\* [EH] is available in Holland.  
\* [Ei] is available in Italy.  
\* [EC] is available in Czechoslovakia.

Ref. No.	Part No.	Part Name & Description
INTEGRATED CIRCUITS		
IC101	AN6636	IC, Drive
IC301	MN1421FPB	IC, Micro Computer
IC401	AN6554	IC, Operation Amplifier
TRANSISTORS		
Q1	2SD549	Transistor, Regulator
Q2	2SD636	Transistor, Regulator
Q3	2SD638	Transistor, Regulator
Q101, 102	2SD636	Transistor, Regulator & Switching
Q201	2SA1015-Y	Transistor, Switching
Q301 ~ 303	2SD636	Transistor, Switching
Q304	2SD892	Transistor, Cueing Control
Q305, 307	2SB641	Transistor, Switching
Q306	2SD636	Transistor, V/I Converter
Q308, 309	2SD636	Transistor, Wave form Shaping
Q310, 801 ~ 803	2SB641	Transistor, Wave form Shaping, Switching
Q401, 402	2SD592NC-R	Transistor, Tonearm Motor Control
Q403, 404	2SD638	Transistor, Tonearm Motor Control
DIODES		
D1	$\Delta$ SVDSIRBA20Z	Rectifier
D2	S MA1056	Diode
D301	S MA1075A	Diode
D302	S VSDPR5531K	Light Emitting Diode
D303 ~ 306	S MA162A	Diode
D501	S MA162A	Diode
D502	S VSDPR3432S	Light Emitting Diode
PHOTO INTERRUPTERS		
PC501	ON1262	Photo Interrupter
PC601	ON1261	Photo Interrupter
RELAY		
RL501	SFDYAW6945	Relay, Muting
SWITCHES		
S1	$\Delta$ SFDSC05N08	Switch, Power
S301	SFDSD05N01	Switch, Record Detector
S302 ~ 305	EVQJQR02K	Switch, Start, Stop, Repeat & Cueing
S306	SFDSHSW0699	Switch, Speed Select
S601	SFSDSD2MSL-C	Switch, Rest
S701	SFSDSC05N01	Switch, Disc Size Selector
S702	SFSDSC05N02	Switch, Rest
S901 [XA] only	$\Delta$ SFDSHXW225-2	Switch, Voltage Adjuster
VARIABLE RESISTORS		
VR201, 202	EVNM6AA00B14	Speed Adjustment, 10k $\Omega$ (B)
VR301	EVNKG6JA00B24	Clock Frequency Adjustment, 20k $\Omega$ (B)
VR501	EVNKG6JA00B53	Servo Gain Adjustment, 5k $\Omega$ (B)
FUSE		
F1 [XA]	$\Delta$ XBA2C02T1B	Fuse, T200mA 250V
F1 [Other Areas]	$\Delta$ XBA2C06T1B	Fuse, T630mA 250V
F2 [XA] only	$\Delta$ XBA2C06T1B	Fuse, T630mA 250V
THERMISTER		
R504	ERTD2FFK251S	Thermister
HALL ELEMENT		
H1, 2	OH-001	Hall Element, Turntable Position Detector
POWER TRANSFORMER		
T1 [EK, XL]	$\Delta$ SLT48DT4E	Power Transformer
T1 [XA]	$\Delta$ SLT57DT1A	Power Transformer
T1 [Other Areas]	$\Delta$ SLT48DT3E	Power Transformer
RESISTORS		
R1	S ERD25FJ472	Carbon, 1/4W, 4.7k $\Omega$ , $\pm 5\%$
R2	S ERD25FJ331	Carbon, 1/4W, 330 $\Omega$ , $\pm 5\%$


Ref. No.	Part No.	Part Name & Description
R3	S ERD25FJ152	Carbon, 1/4W, 1.5k $\Omega$ , $\pm 5\%$
R4, 5	S ERD25FJ332	Carbon, 1/4W, 3.3k $\Omega$ , $\pm 5\%$
R6	S ERD25FJ330	Carbon, 1/4W, 33 $\Omega$ , $\pm 5\%$
R101	S ERX1ANJ2R7	Metal Oxide, 1W, 2.7k $\Omega$ , $\pm 5\%$
R102	S ERD25FJ270	Carbon, 1/4W, 27 $\Omega$ , $\pm 5\%$
R103	S ERD25FJ182	Carbon, 1/4W, 1.8k $\Omega$ , $\pm 5\%$
R104	S ERD25FJ332	Carbon, 1/4W, 3.3k $\Omega$ , $\pm 5\%$
R106	S ERD25FJ562	Carbon, 1/4W, 5.6k $\Omega$ , $\pm 5\%$
R201	S ERD25FJ102	Carbon, 1/4W, 1k $\Omega$ , $\pm 5\%$
R202	S ERD25TJ153	Carbon, 1/4W, 15k $\Omega$ , $\pm 5\%$
R203	S ERD25FJ102	Carbon, 1/4W, 1k $\Omega$ , $\pm 5\%$
R204	S ERD25TJ153	Carbon, 1/4W, 15k $\Omega$ , $\pm 5\%$
R205, 206	S ERD25TJ104	Carbon, 1/4W, 100k $\Omega$ , $\pm 5\%$
R207	S ERO25CKF2702	Metal Film, 1/4W, 27k $\Omega$ , $\pm 5\%$
R208	S ERD25FJ562	Carbon, 1/4W, 5.6k $\Omega$ , $\pm 5\%$
R209	S ERO25CKF8202	Metal Film, 1/4W, 82k $\Omega$ , $\pm 1\%$
R210	S ERD25FJ471	Carbon, 1/4W, 470 $\Omega$ , $\pm 5\%$
R211	S ERD25FJ472	Carbon, 1/4W, 4.7k $\Omega$ , $\pm 5\%$
R212	S ERD25TJ333	Carbon, 1/4W, 33k $\Omega$ , $\pm 5\%$
R301	S ERD25FJ103	Carbon, 1/4W, 10k $\Omega$ , $\pm 5\%$
R302, 303	S ERD25FJ472	Carbon, 1/4W, 4.7k $\Omega$ , $\pm 5\%$
R304, 305	S ERD25FJ472	Carbon, 1/4W, 4.7k $\Omega$ , $\pm 5\%$
R306	S ERD25FJ102	Carbon, 1/4W, 1k $\Omega$ , $\pm 5\%$
R307	S ERD25FJ472	Carbon, 1/4W, 4.7k $\Omega$ , $\pm 5\%$
R308	S ERD25FJ331	Carbon, 1/4W, 330 $\Omega$ , $\pm 5\%$
R310	S ERD25FJ562	Carbon, 1/4W, 5.6k $\Omega$ , $\pm 5\%$
R312, 313	S ERD25TJ333	Carbon, 1/4W, 33k $\Omega$ , $\pm 5\%$
R314, 315	S ERD25TJ333	Carbon, 1/4W, 33k $\Omega$ , $\pm 5\%$
R316	S ERD25TJ333	Carbon, 1/4W, 33k $\Omega$ , $\pm 5\%$
R317	S ERD25FJ272	Carbon, 1/4W, 2.7k $\Omega$ , $\pm 5\%$
R318, 319	S ERD25FJ332	Carbon, 1/4W, 3.3k $\Omega$ , $\pm 5\%$
R320	S ERD25FJ272	Carbon, 1/4W, 2.7k $\Omega$ , $\pm 5\%$
R321, 322	S ERD25FJ331	Carbon, 1/4W, 330 $\Omega$ , $\pm 5\%$
R323	S ERD25FJ562	Carbon, 1/4W, 5.6k $\Omega$ , $\pm 5\%$
R324	S ERD25FJ103	Carbon, 1/4W, 10k $\Omega$ , $\pm 5\%$
R325	S ERD25TJ333	Carbon, 1/4W, 33k $\Omega$ , $\pm 5\%$
R326	S ERD25FJ222	Carbon, 1/4W, 2.2k $\Omega$ , $\pm 5\%$
R327	S ERD25FJ103	Carbon, 1/4W, 10k $\Omega$ , $\pm 5\%$
R328	S ERD25TJ153	Carbon, 1/4W, 15k $\Omega$ , $\pm 5\%$
R329, 330	S ERD25FJ332	Carbon, 1/4W, 3.3k $\Omega$ , $\pm 5\%$
R331	S ERD25FJ102	Carbon, 1/4W, 1k $\Omega$ , $\pm 5\%$
R332	S ERD25FJ562	Carbon, 1/4W, 5.6k $\Omega$ , $\pm 5\%$
R333	S ERD25FJ152	Carbon, 1/4W, 1.5k $\Omega$ , $\pm 5\%$
R334	S ERD25FJ222	Carbon, 1/4W, 2.2k $\Omega$ , $\pm 5\%$
R335	S ERD25TJ104	Carbon, 1/4W, 100k $\Omega$ , $\pm 5\%$
R336	S ERD25FJ682	Carbon, 1/4W, 6.8k $\Omega$ , $\pm 5\%$
R337	S ERD25TJ273	Carbon, 1/4W, 27k $\Omega$ , $\pm 5\%$
R338	S ERD25FJ222	Carbon, 1/4W, 2.2k $\Omega$ , $\pm 5\%$
R339	S ERD25TJ123	Carbon, 1/4W, 12k $\Omega$ , $\pm 5\%$
R340	S ERD25FJ272	Carbon, 1/4W, 2.7k $\Omega$ , $\pm 5\%$
R341	S ERD25FJ222	Carbon, 1/4W, 2.2k $\Omega$ , $\pm 5\%$
R401	S ERD25TJ683	Carbon, 1/4W, 68k $\Omega$ , $\pm 5\%$
R402	S ERD25TJ683	Carbon, 1/4W, 68k $\Omega$ , $\pm 5\%$
R403	S ERD25FJ472	Carbon, 1/4W, 4.7k $\Omega$ , $\pm 5\%$
R404	S ERD25FJ122	Carbon, 1/4W, 1.2k $\Omega$ , $\pm 5\%$
R405	S ERD25FJ222	Carbon, 1/4W, 2.2k $\Omega$ , $\pm 5\%$
R406	S ERD25FJ102	Carbon, 1/4W, 1k $\Omega$ , $\pm 5\%$
R407	S ERD25TJ224	Carbon, 1/4W, 220k $\Omega$ , $\pm 5\%$
R408	S ERD25FJ222	Carbon, 1/4W, 2.2k $\Omega$ , $\pm 5\%$
R409	S ERD25FJ102	Carbon, 1/4W, 1k $\Omega$ , $\pm 5\%$
R410	S ERD25TJ224	Carbon, 1/4W, 220k $\Omega$ , $\pm 5\%$
R411	S ERD25FJ272	Carbon, 1/4W, 2.7k $\Omega$ , $\pm 5\%$
R412	S ERD25FJ681	Carbon, 1/4W, 680 $\Omega$ , $\pm 5\%$
R501	S ERD25FJ331	Carbon, 1/4W, 330 $\Omega$ , $\pm 5\%$
R502	S ERD25FJ561	Carbon, 1/4W, 560 $\Omega$ , $\pm 5\%$
R503	S ERD25FJ221	Carbon, 1/4W, 220 $\Omega$ , $\pm 5\%$
R601	S ERD25FJ681	Carbon, 1/4W, 680 $\Omega$ , $\pm 5\%$
R801	S ERD25TJ153	Carbon, 1/4W, 15k $\Omega$ , $\pm 5\%$
R802	S ERD25TJ123	Carbon, 1/4W, 12k $\Omega$ , $\pm 5\%$
R803	S ERD25TJ153	Carbon, 1/4W, 15k $\Omega$ , $\pm 5\%$
R804	S ERD25TJ123	Carbon, 1/4W, 12k $\Omega$ , $\pm 5\%$

Ref. No.	Part No.	Part Name & Description
R805	S ERD25TJ153	Carbon, 1/4W, 15k $\Omega$ , $\pm 5\%$
R806	S ERD25TJ123	Carbon, 1/4W, 12k $\Omega$ , $\pm 5\%$
CAPACITORS		
C1, 2	S $\Delta$ ECKD1H223PF	Ceramic, 50V, 0.022 $\mu$ F, $\pm 100\%$
C3	S $\Delta$ ECKD1H223PF	Ceramic, 50V, 0.022 $\mu$ F, $\pm 100\%$
C4	S $\Delta$ ECEB1VS102	Electrolytic, 35V, 1000 $\mu$ F, $\pm 100\%$
C5	S ECEA1HS100	Electrolytic, 50V, 10 $\mu$ F, $\pm 5\%$
C101	S ECOM1H333JZ	Polyester, 50V, 0.033 $\mu$ F, $\pm 5\%$
C102	S ECEA1ES101	Electrolytic, 25V, 100 $\mu$ F, $\pm 5\%$
C103, 104	$\Delta$ ECEA1CN101S	Electrolytic, 16V, 100 $\mu$ F, $\pm 80\%$
C105	S ECEA1CS330	Electrolytic, 16V, 33 $\mu$ F, $\pm 100\%$
C106	S ECKD1H223PF	Ceramic, 50V, 0.022 $\mu$ F, $\pm 100\%$
C201	S ECOM1H104JZ	Polyester, 50V, 0.1 $\mu$ F, $\pm 5\%$
C202	S ECEA25Z4R7	Electrolytic, 25V, 4.7 $\mu$ F, $\pm 5\%$
C203	S ECOM1H104JZ	Polyester, 50V, 0.1 $\mu$ F, $\pm 5\%$


Ref. No.	Part No.	Part Name & Description
C204	S ECOM1H473JZ	Polyester, 50V, 0.047 $\mu$ F, $\pm 5\%$
C205	S ECOM1H333JZ	Polyester, 50V, 0.033 $\mu$ F, $\pm 5\%$
C206	S ECOM1H224JZ	Polyester, 50V, 0.22 $\mu$ F, $\pm 5\%$
C207	S ECOM1H104JZ	Polyester, 50V, 0.1 $\mu$ F, $\pm 5\%$
C208	S ECOM1H224JZ	Polyester, 50VDC, 0.22 $\mu$ F, $\pm 5\%$
C209	S ECEA50Z3R3	Electrolytic, 50V, 3.3 $\mu$ F, $\pm 100\%$
C210	S ECKD1H223PF	Ceramic, 50V, 0.022 $\mu$ F, $\pm 100\%$
C211	S ECKD2H102KB	Ceramic, 500V, 0.001 $\mu$ F, $\pm 5\%$
C301	S ECCD1H101K	Ceramic, 50V, 100 $\mu$ F, $\pm 5\%$
C302	S ECOM1H104KZ	Polyester, 50V, 0.1 $\mu$ F, $\pm 5\%$
C304	S ECEA1AS101	Electrolytic, 10V, 100 $\mu$ F, $\pm 5\%$
C305	S ECKD1H561KB	Ceramic, 50V, 560 $\mu$ F, $\pm 5\%$
C306	S ECKF1E104ZV	Ceramic, 25V, 0.1 $\mu$ F, $\pm 80\%$
C401	S ECOM1H223JZ	Polyester, 50V, 0.022 $\mu$ F, $\pm 5\%$
C402	S ECOM1H223JZ	Polyester, 50V, 0.022 $\mu$ F, $\pm 5\%$
C501	S ECEA1ES101	Electrolytic, 25V, 100 $\mu$ F, $\pm 5\%$
C601	S ECFB1B104ZRM	Ceramic, 50V, 0.1 $\mu$ F, $\pm 5\%$

TIMING CHART

30 cm Record

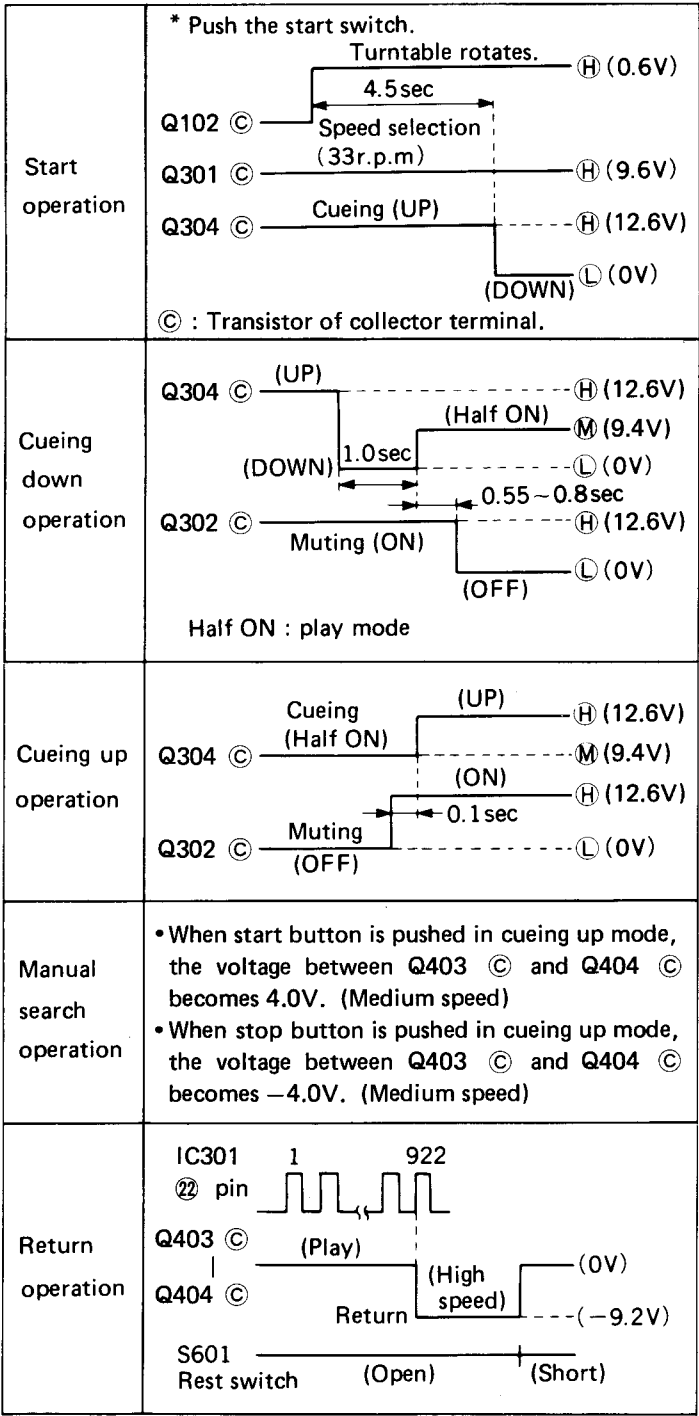


17 cm Record

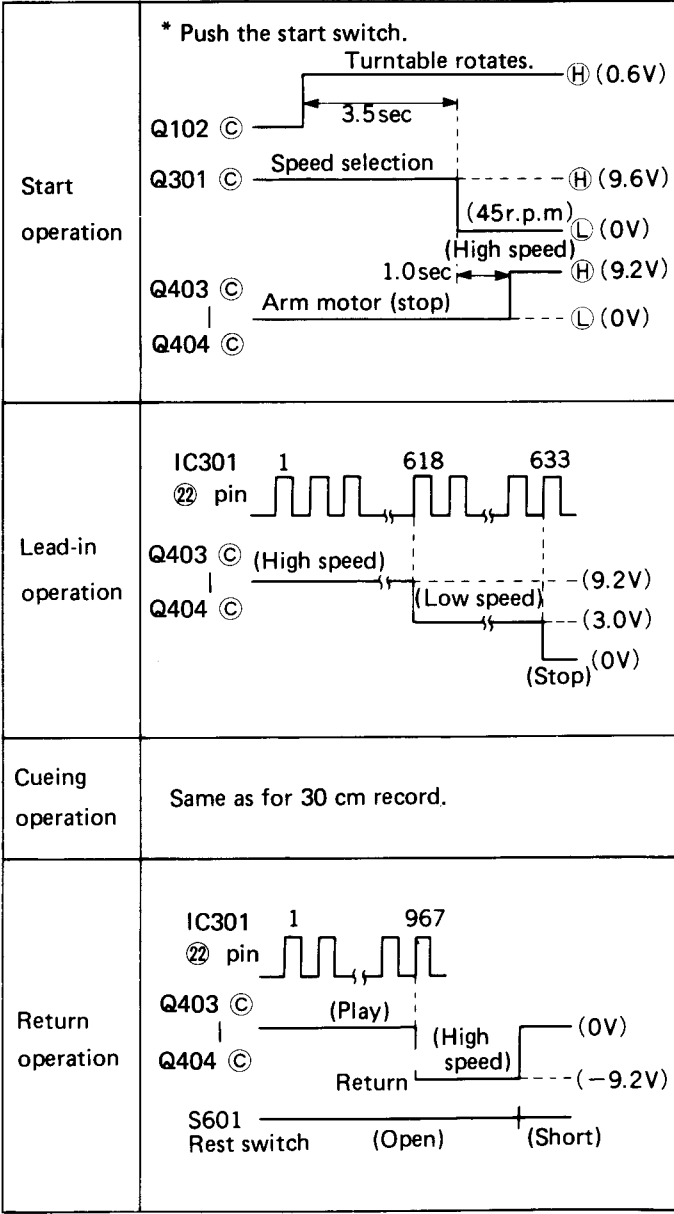




## ■ BLOCK DIAGRAM

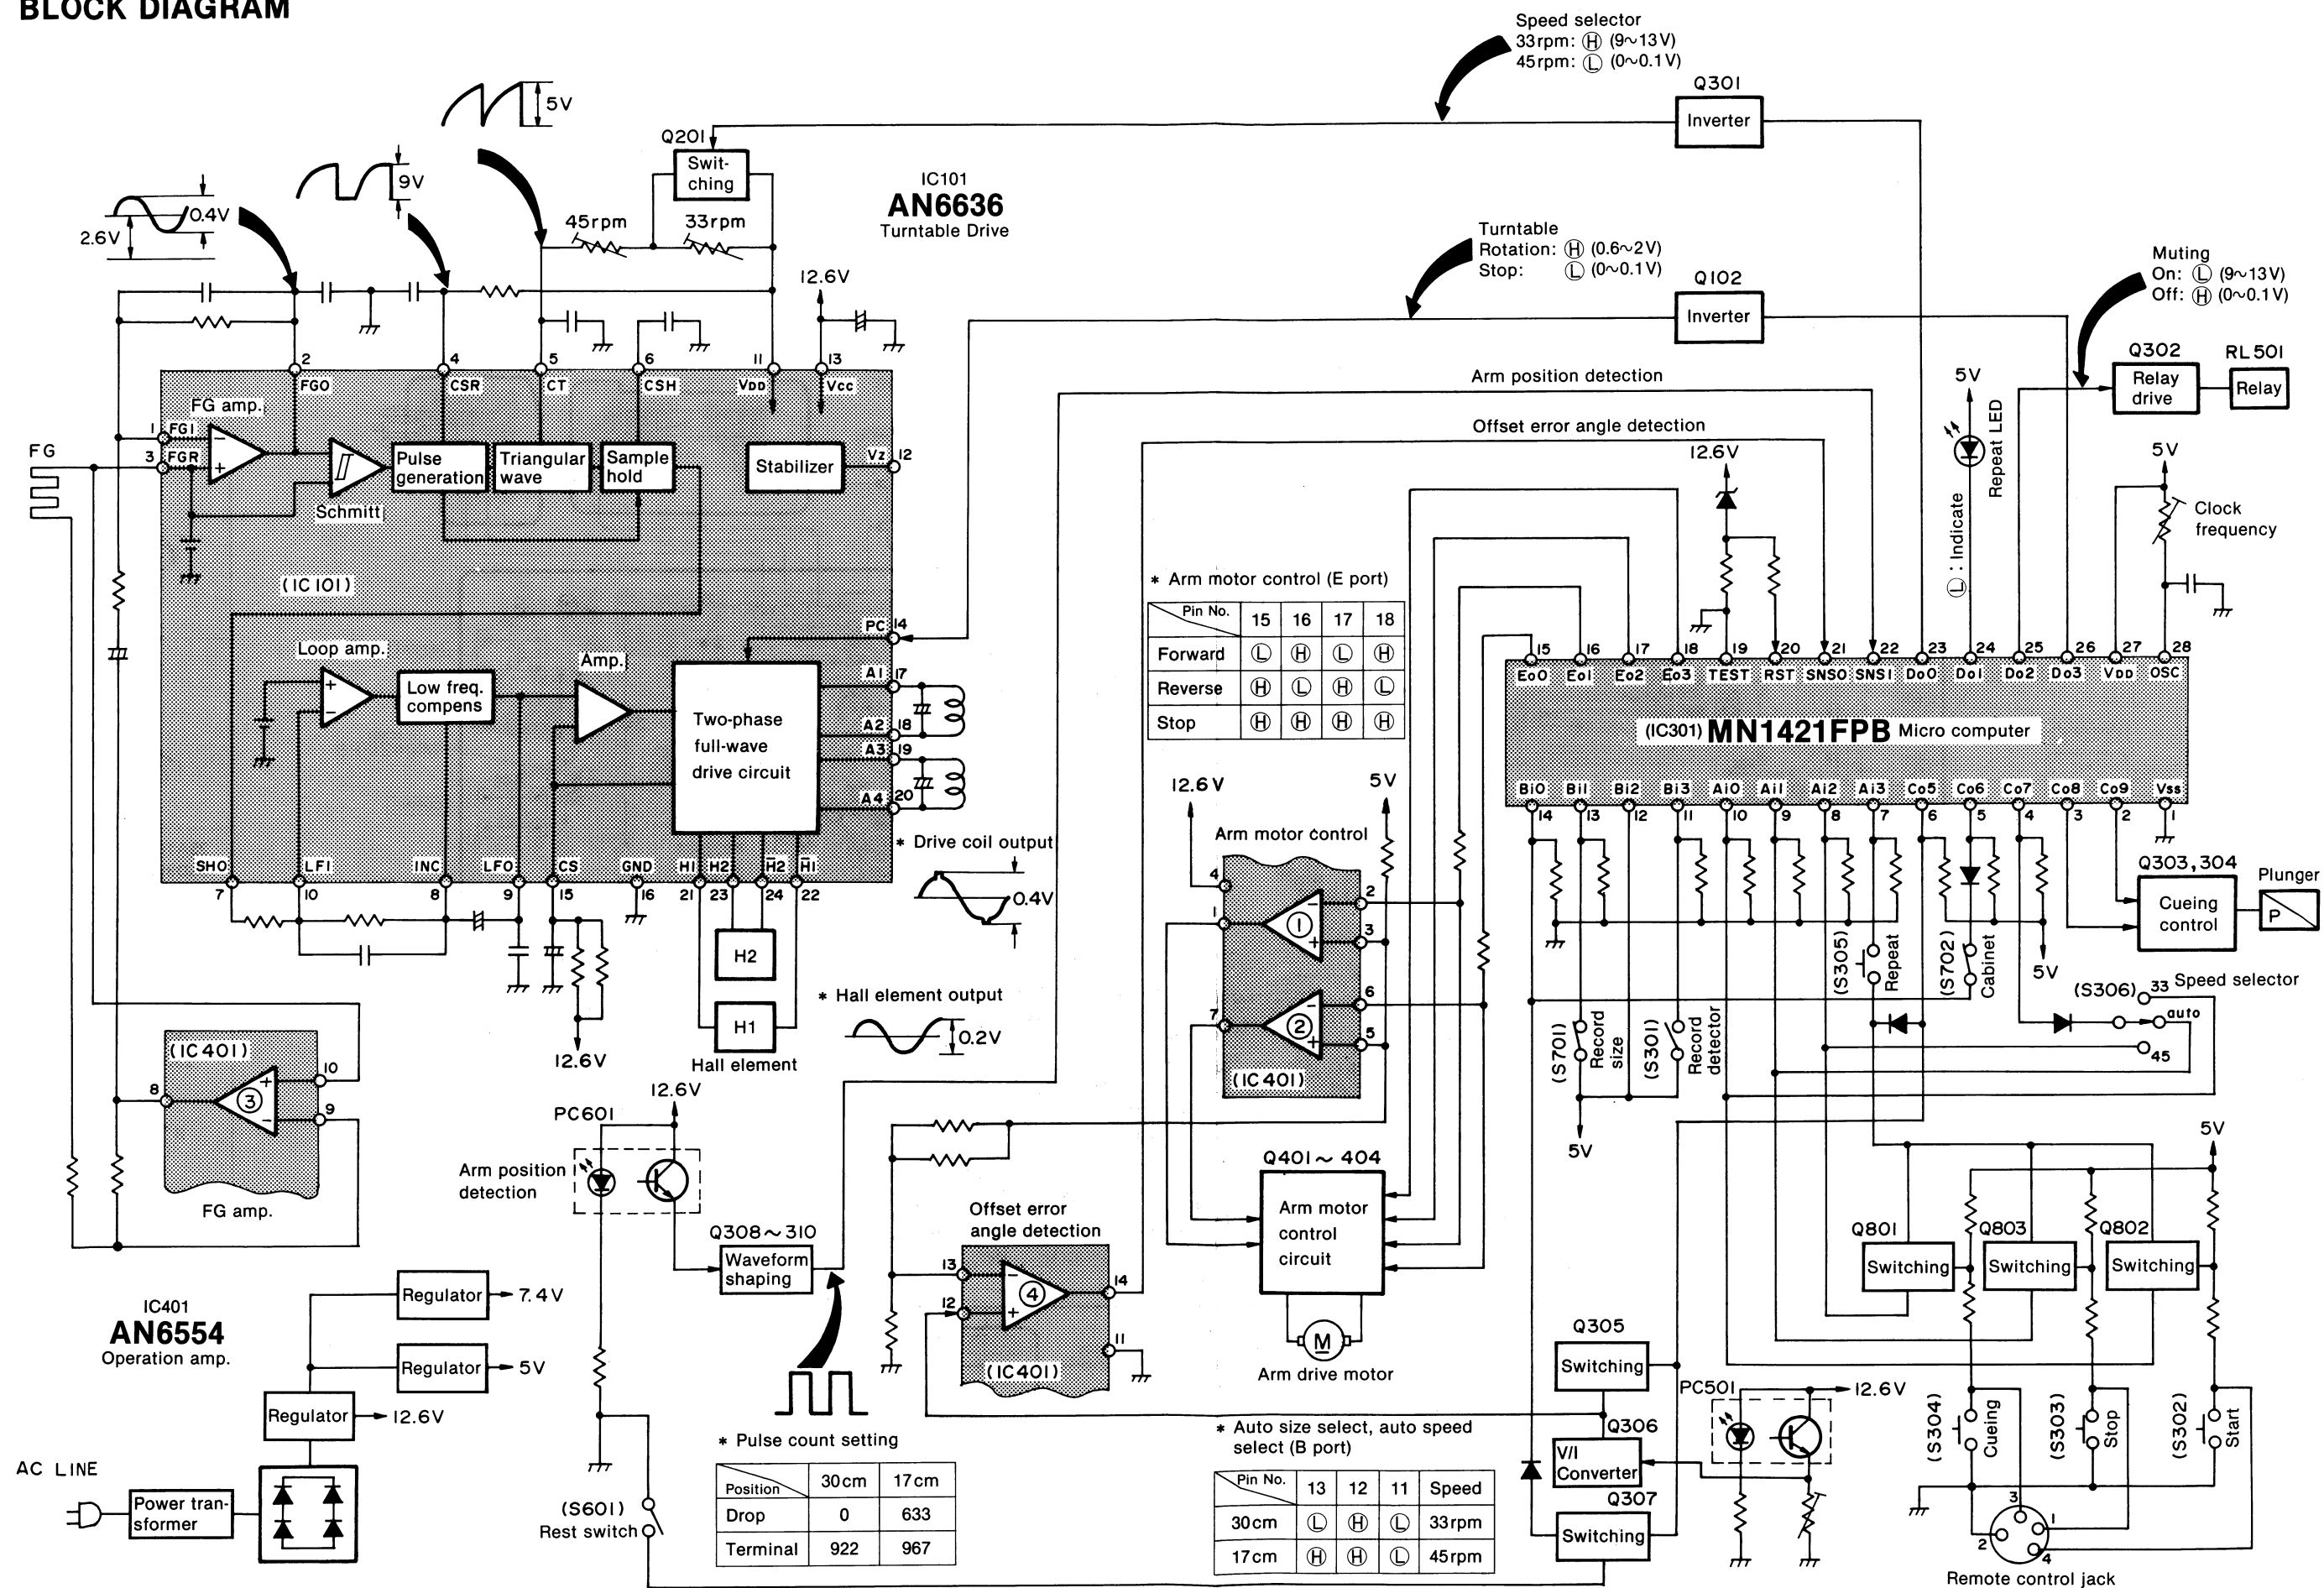




# CIRCUIT BOARD AND WIRING CONNECTION DIAGRAM

•Power source circuit for [XA] only.

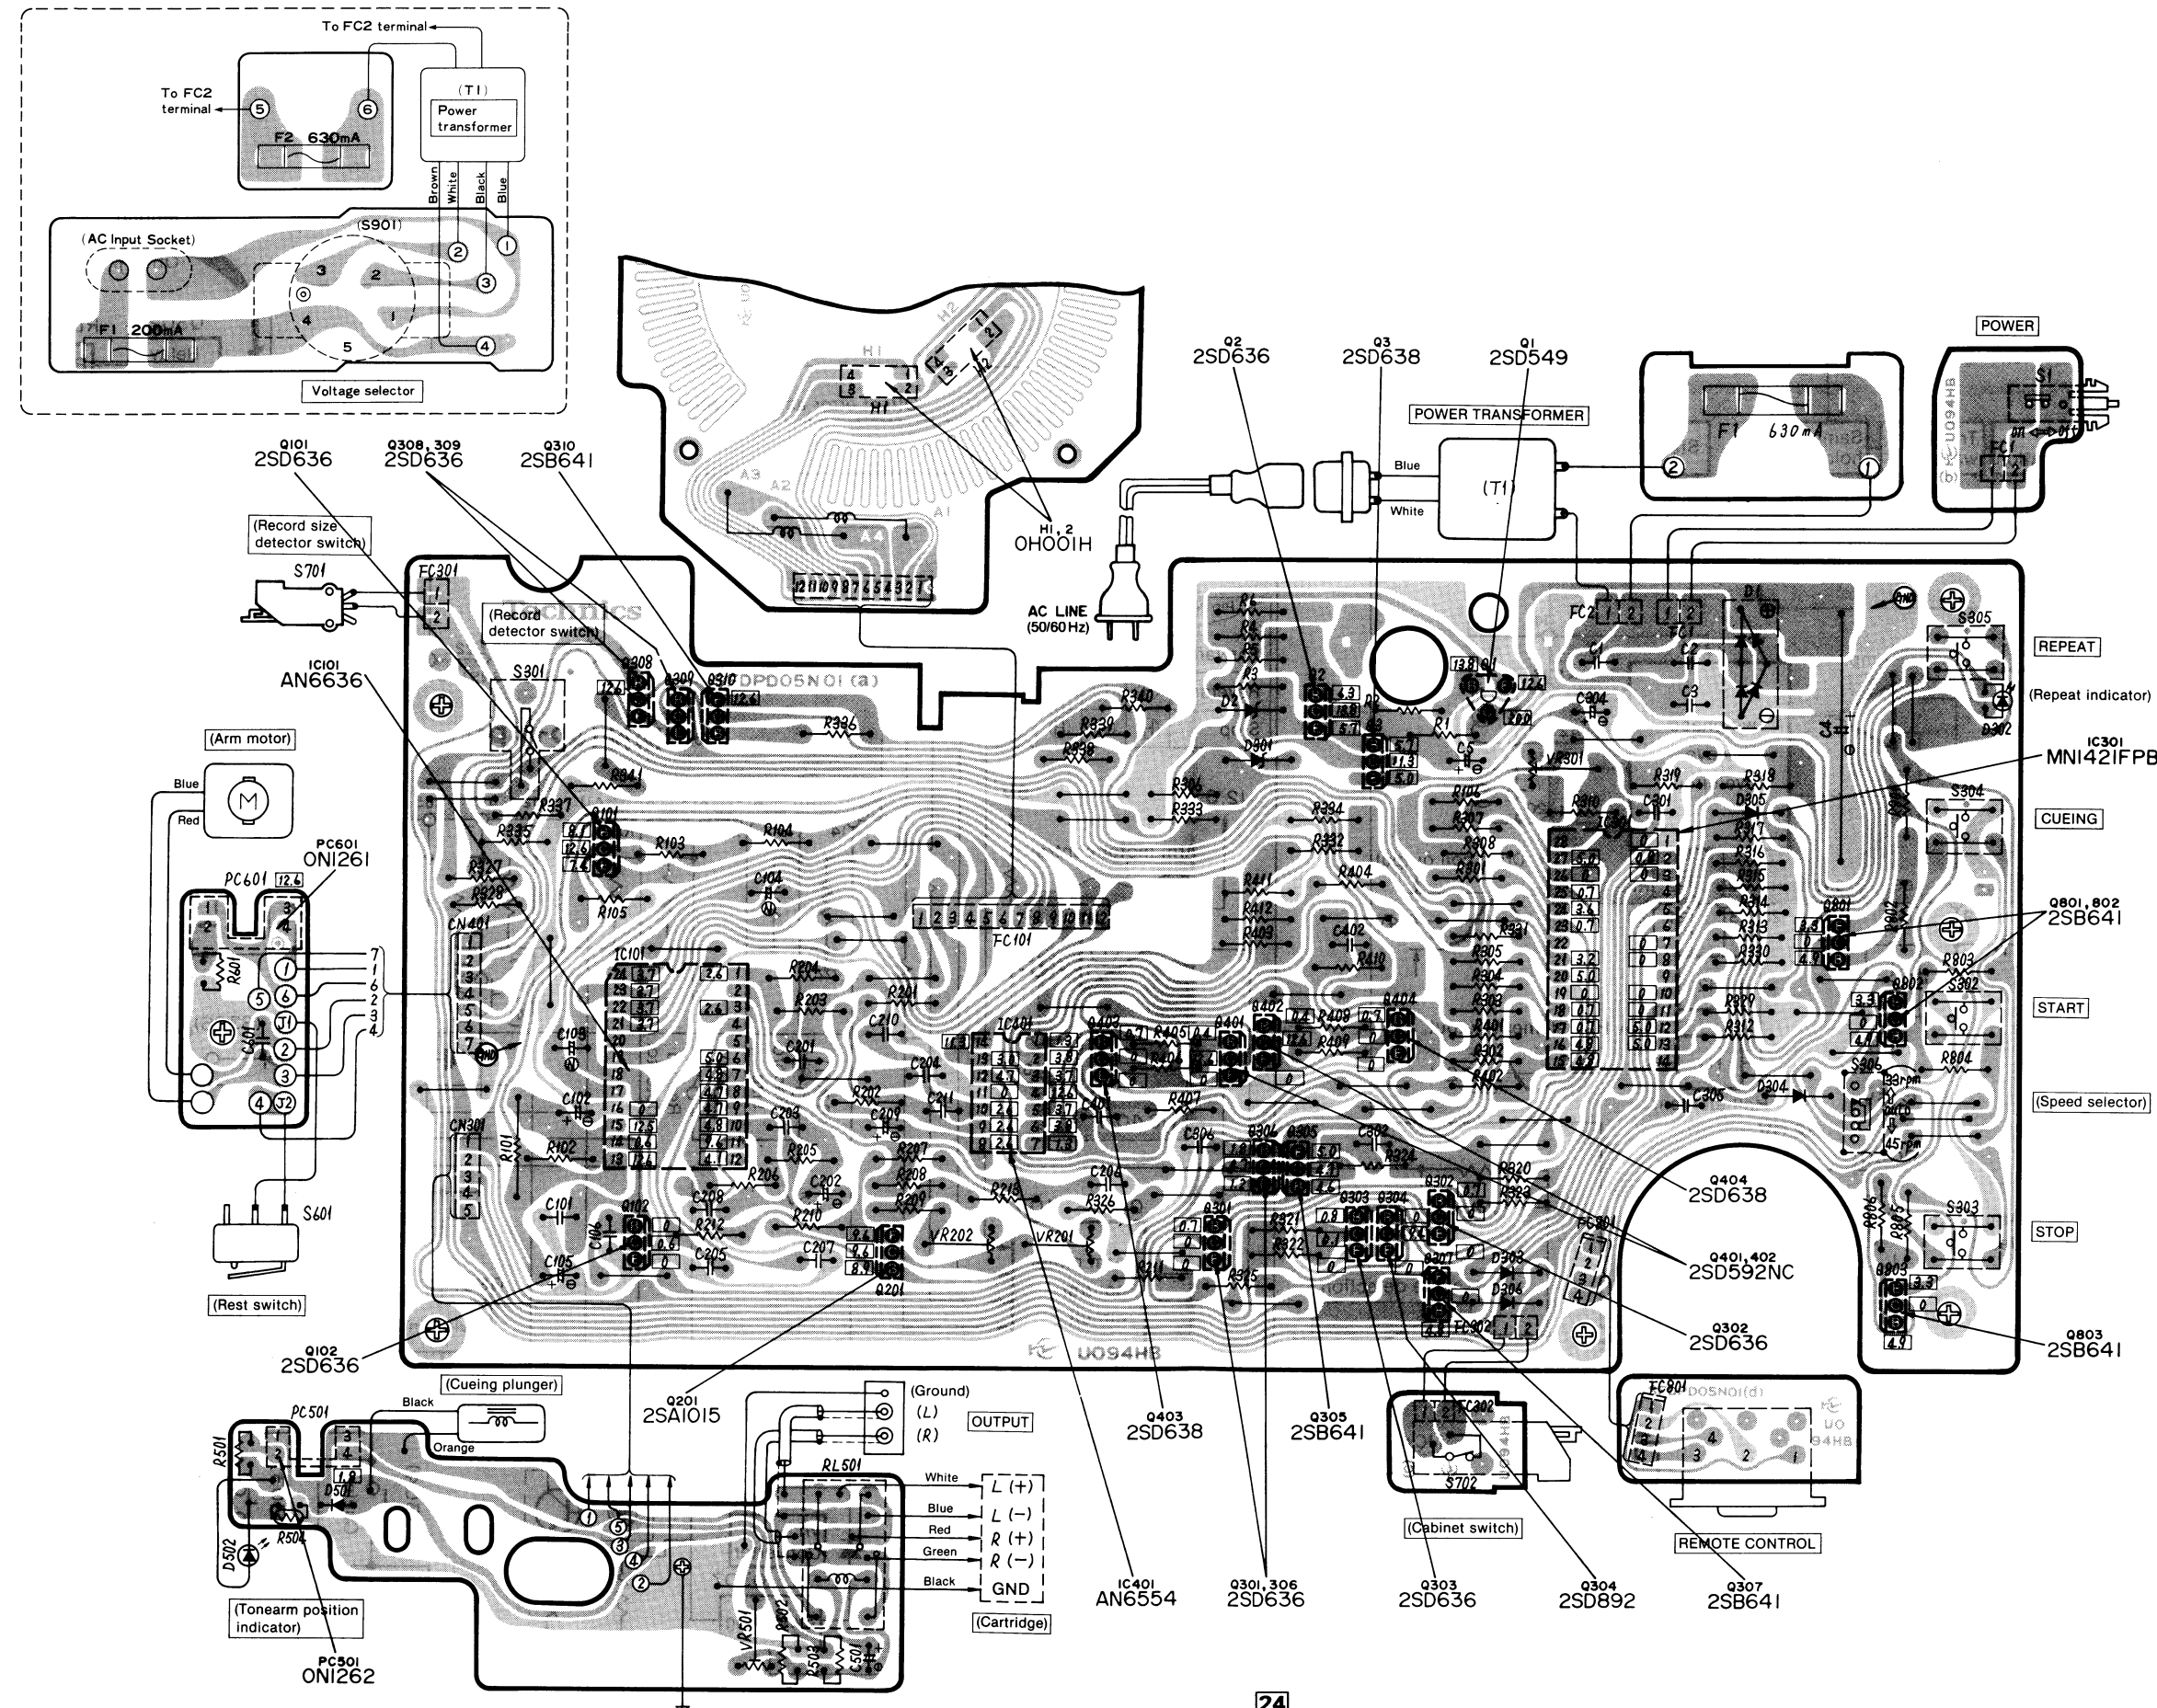

• Terminal guide of transistors, diodes and IC's

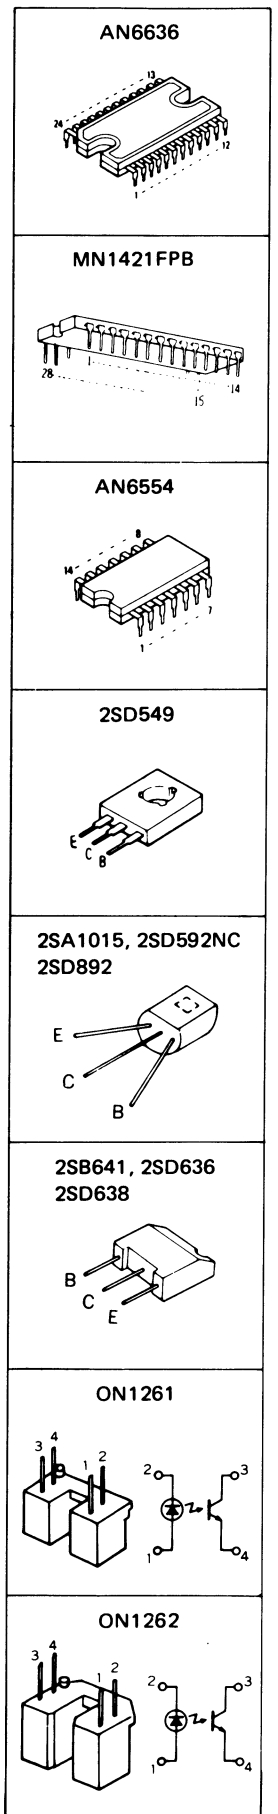




■ SCHEMATIC DIAGRAM (This schematic diagram may be modified at any time with the development of new technology.)

Notes:


1. **S1** : On/off switch in "on" position.
2. **S301** : Record detector switch in "off" position.  
(It detects the record on the turn table.)
3. **S302** : Start switch in "off" position. (It is not pushed.)
4. **S303** : Stop switch in "off" position. (It is not pushed.)
5. **S304** : Cueing control switch in "off" position. (It is not pushed.)
6. **S305** : Repeat switch in "off" position. (It is not pushed.)
7. **S306** : Speed selector switch in "auto" position.  
33 rpm  $\longleftrightarrow$  auto  $\longleftrightarrow$  45 rpm
8. **S601** : Rest switch in "off" position.  
(Tonearm is off the rest position.)
9. **S701** : Record size detector switch in "on" position.  
(17 cm record is on the turntable.)
10. **S702** : Cabinet switch in "on" position. (Upper cabinet is closed.)
11. **S901** : Voltage selector in "110 - 120V" position.  
110 - 120V  $\longleftrightarrow$  220 - 240V
12. Indicated voltage values are the standard values for the measured by the DC electronic circuit tester (high-impedance) with the chassis taken as standard. Therefore, there may exist some errors in the voltage values, depending on the internal impedance of the DC circuit tester or the set measured.
  - \*  $\square$  is the voltage at 45 rpm.
  - \*  $\square$  is the voltage at 33 rpm.
  - \*  $\square$  is the voltage when tonearm is in lead-in mode.
  - \*  $\square$  is the voltage when tonearm is in return mode.
  - \*  $\square$  is the voltage when turntable is in stop.

13. — Positive voltage lines.
14. Important safety notice:  
Components identified by  $\Delta$  mark have special characteristics important for safety.  
When replacing any of these components, use only manufacturer's specified parts.

• Power source circuit for [XA] only.


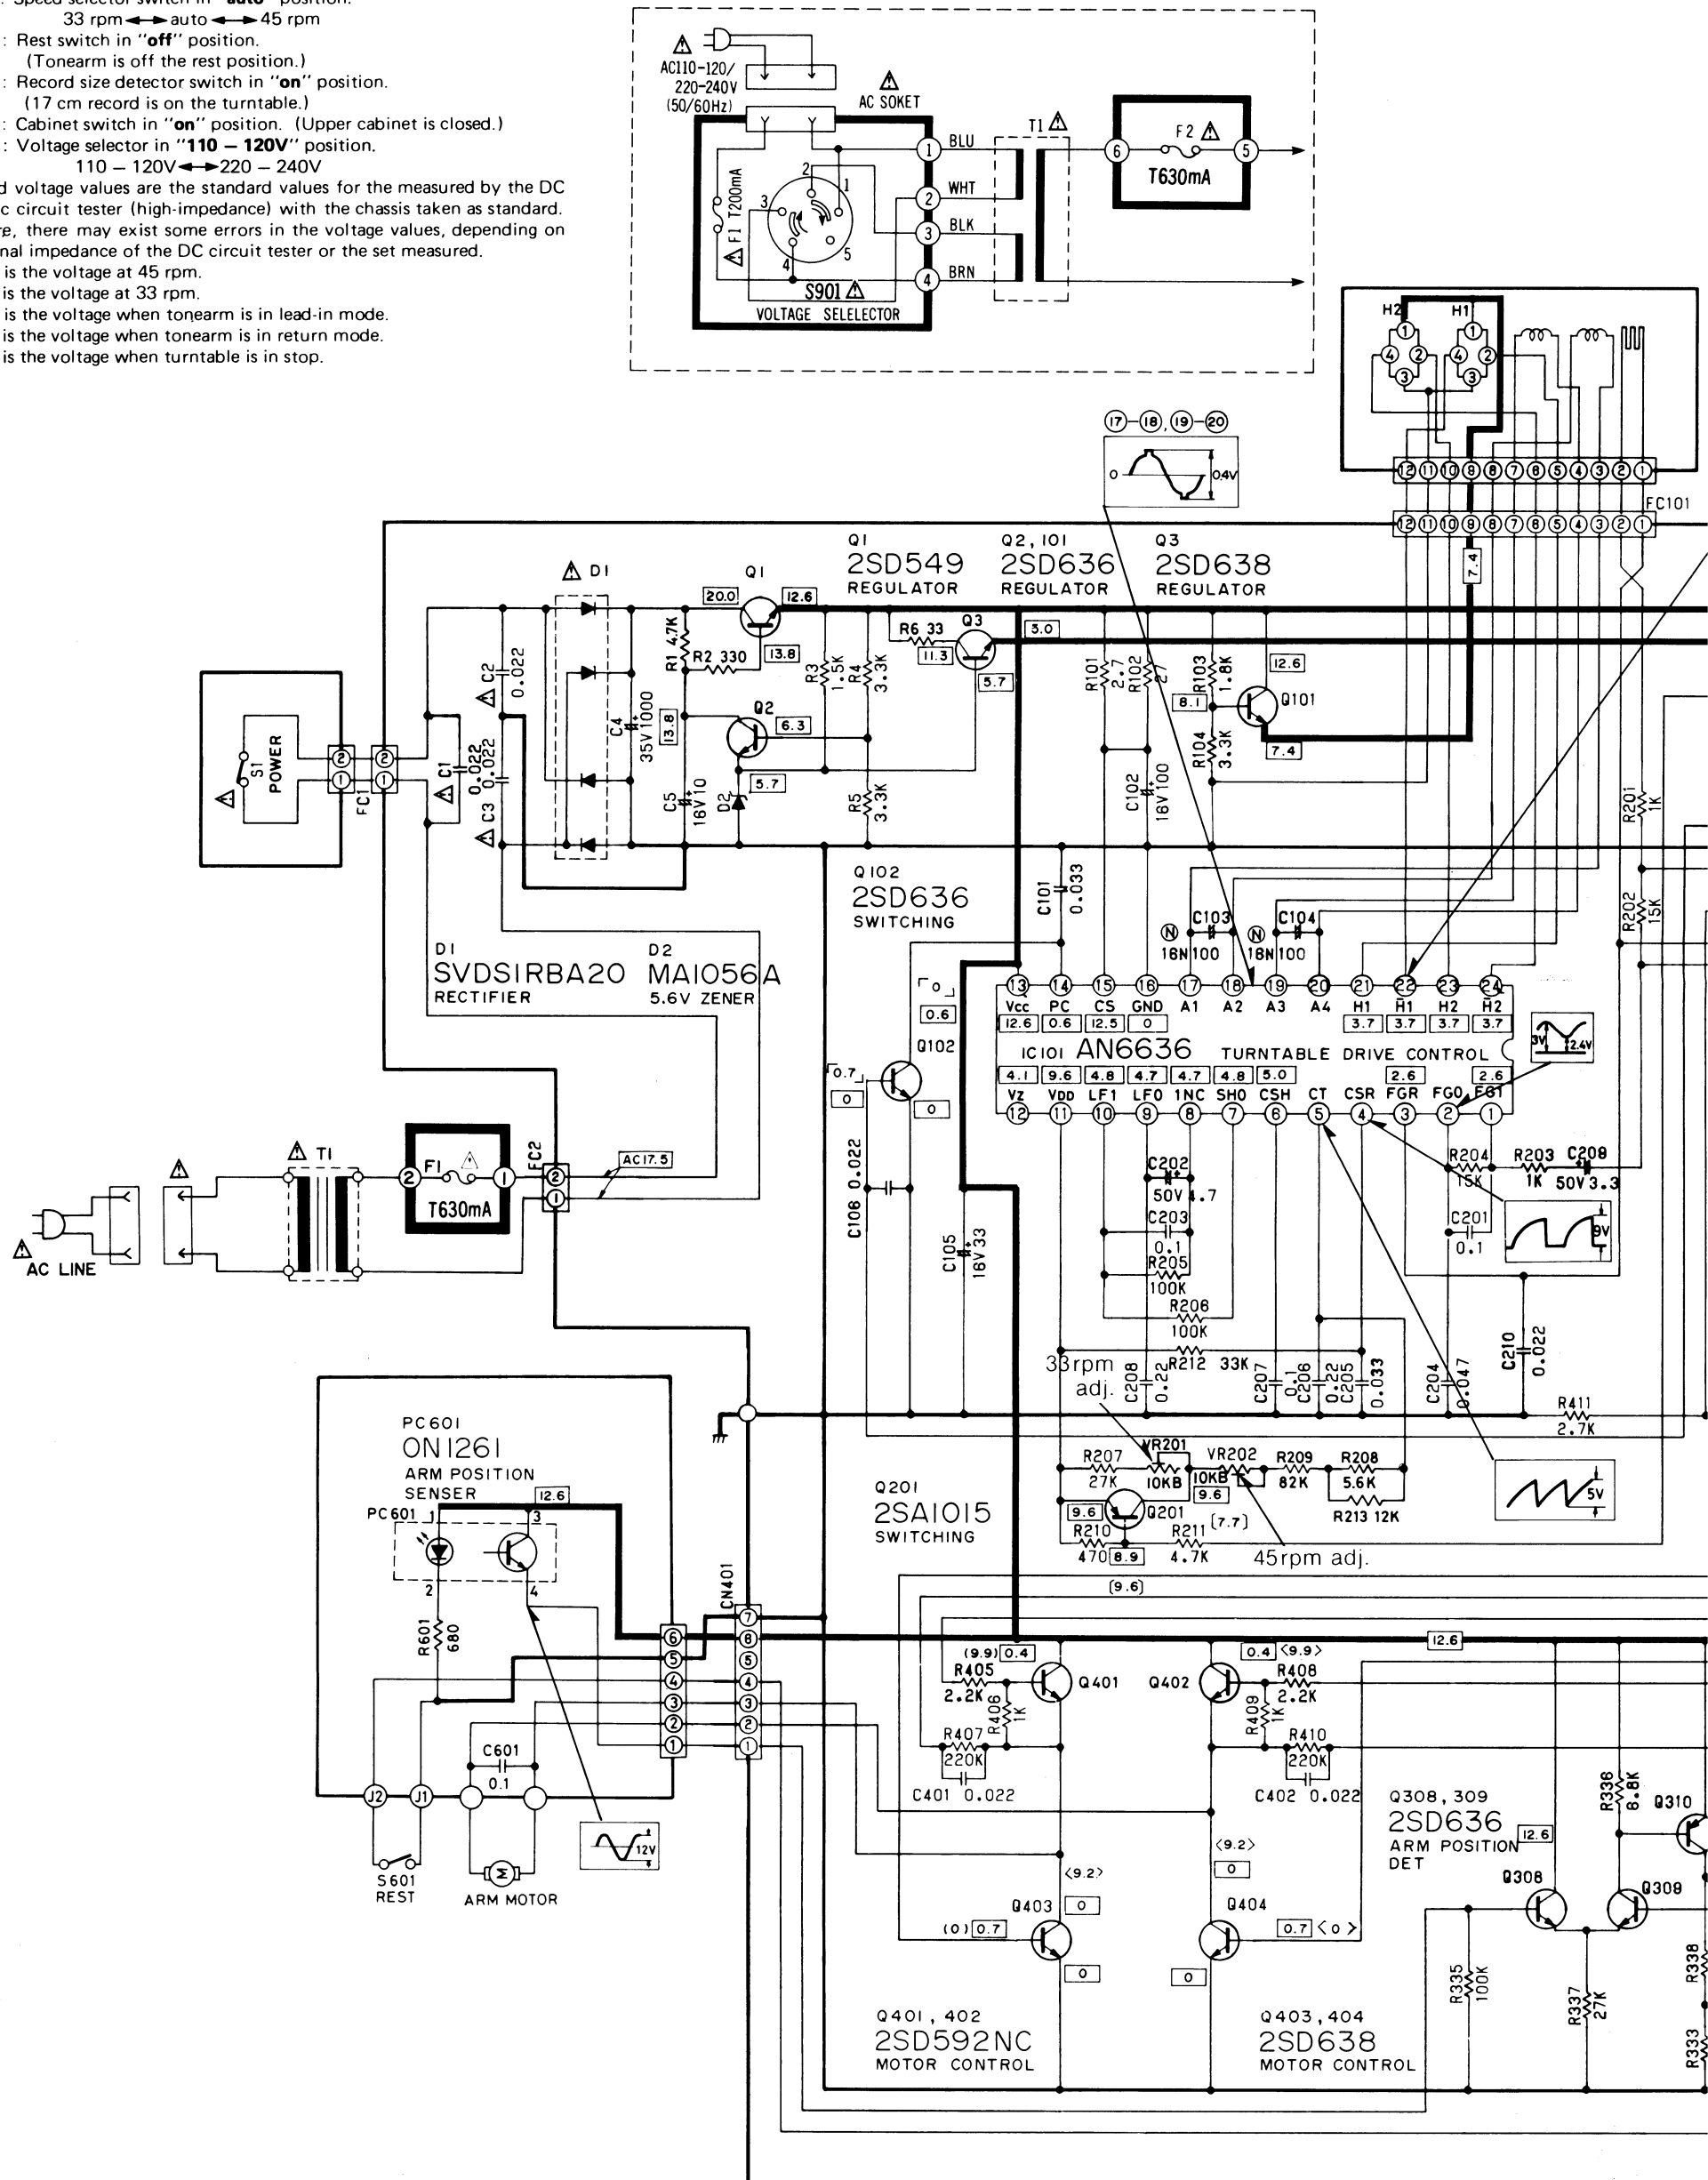




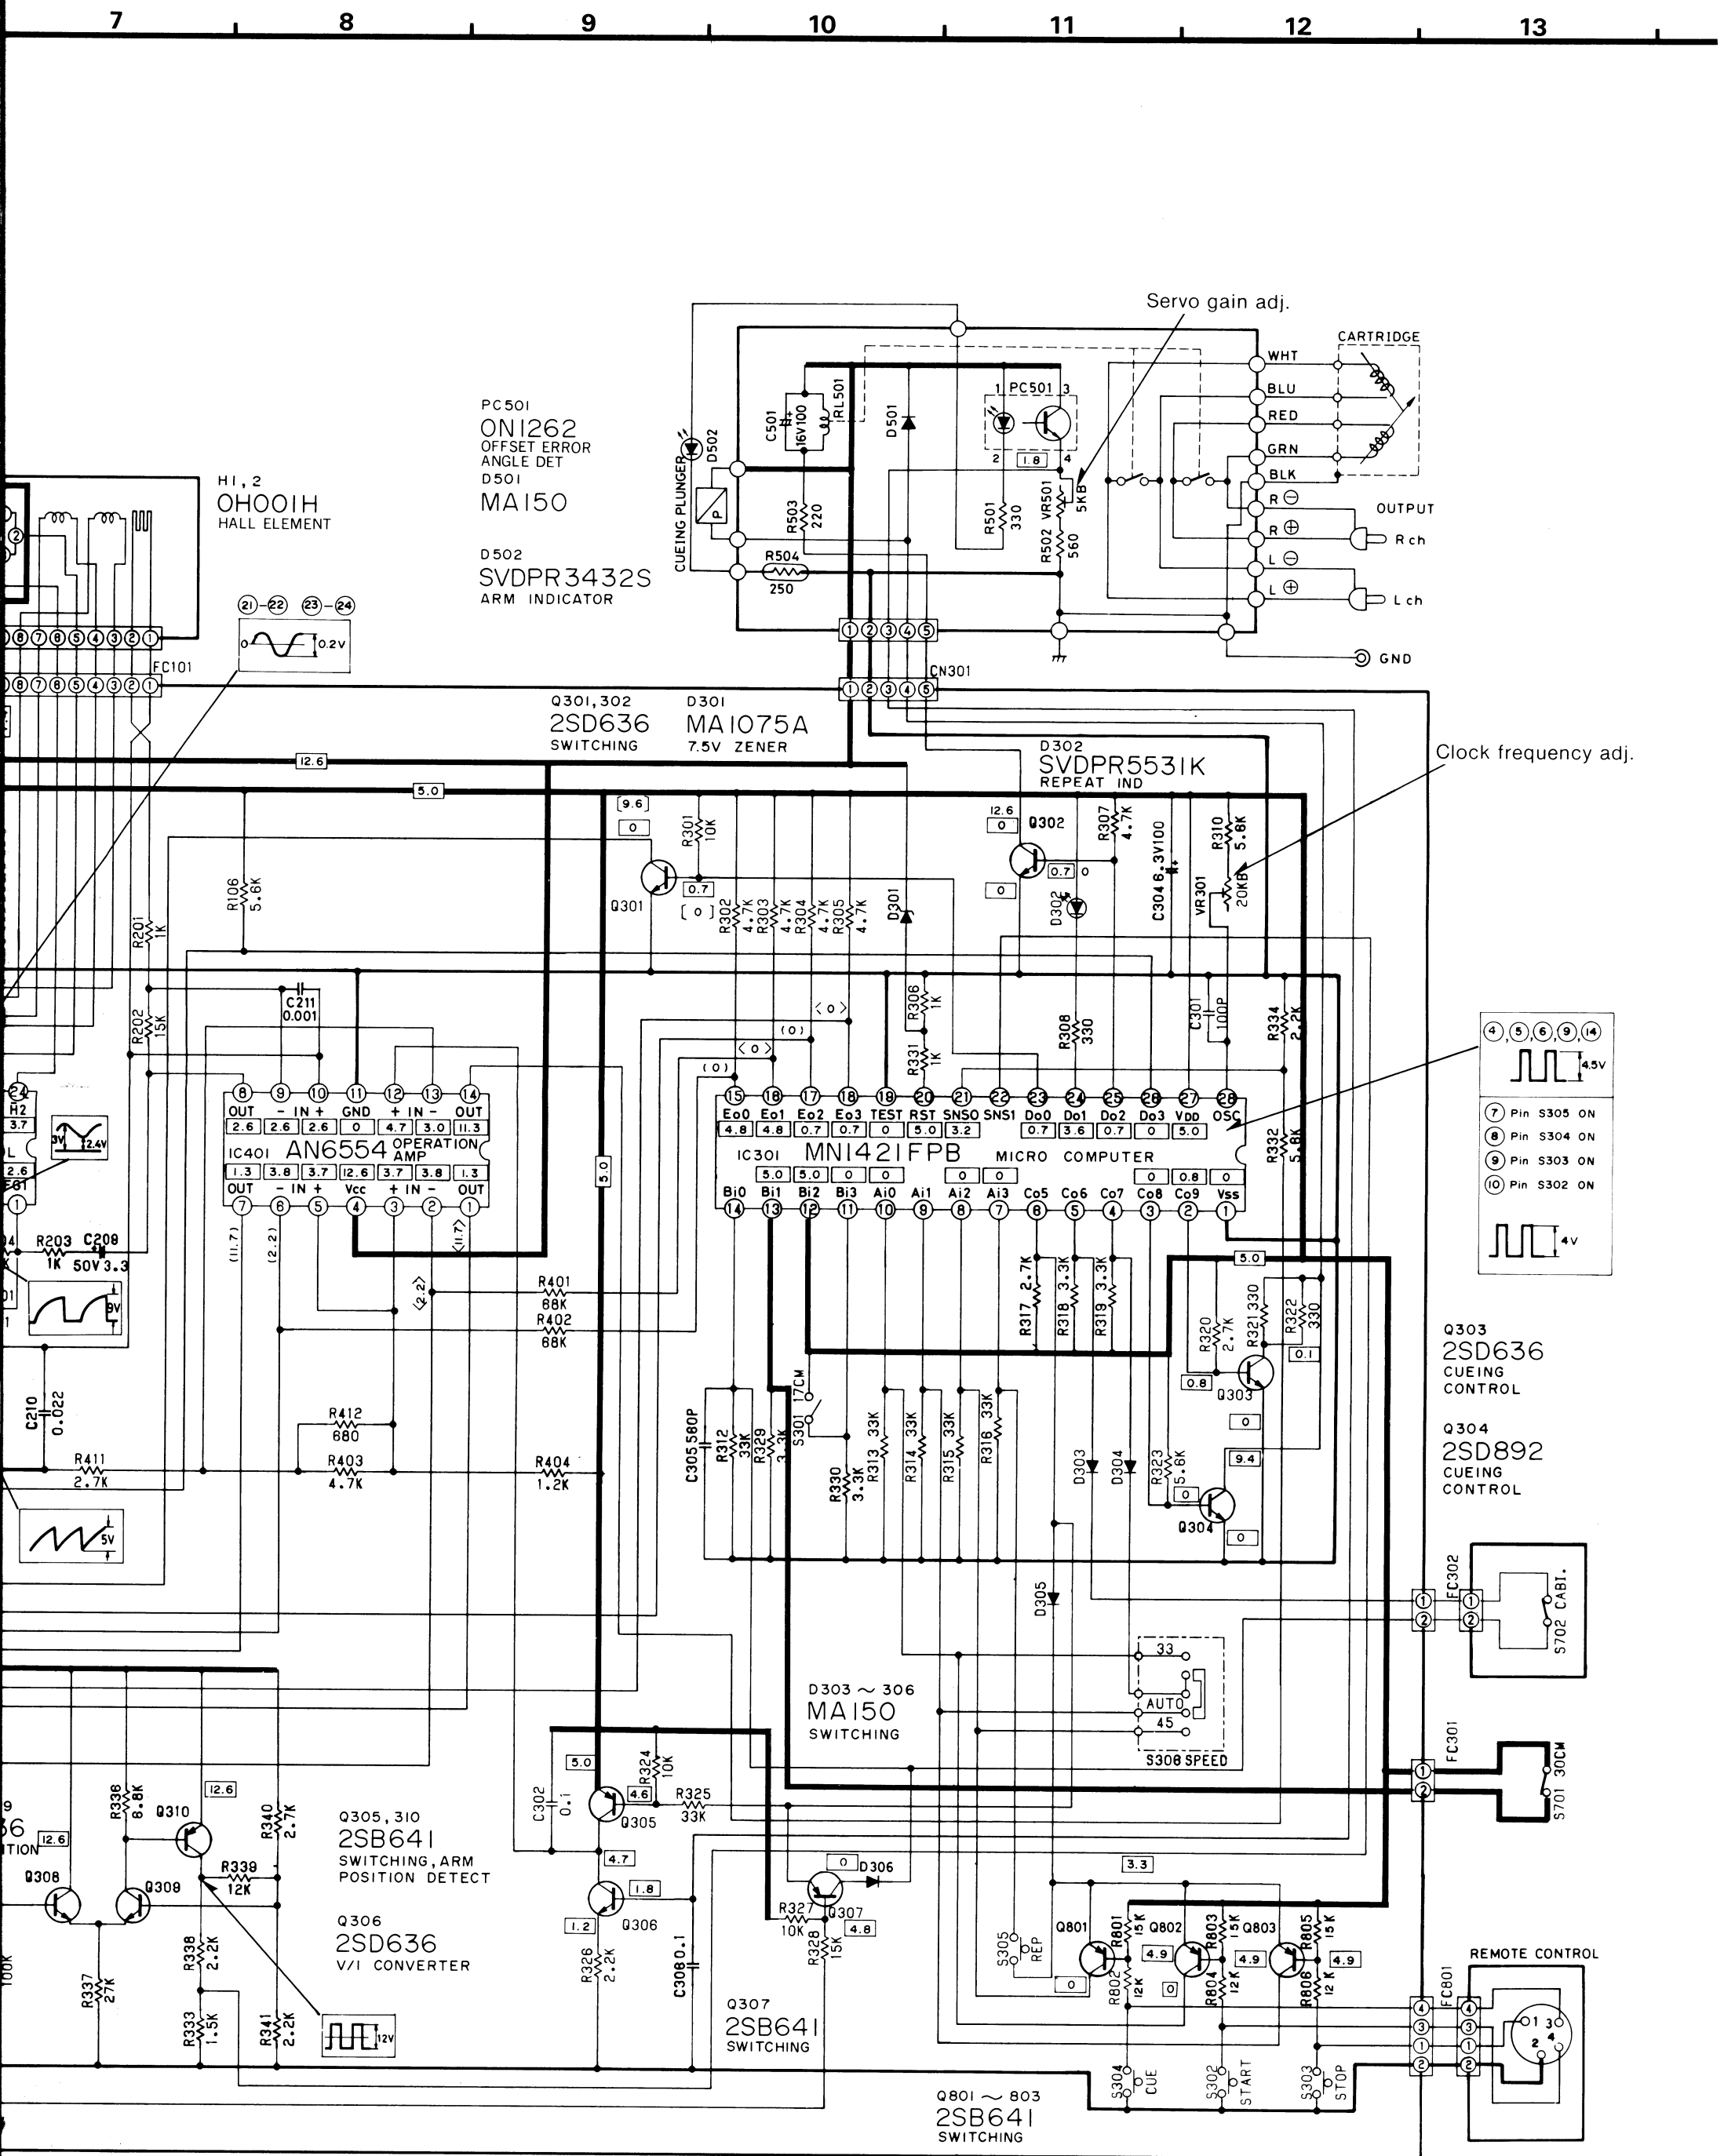




# EXPLODED VIEWS

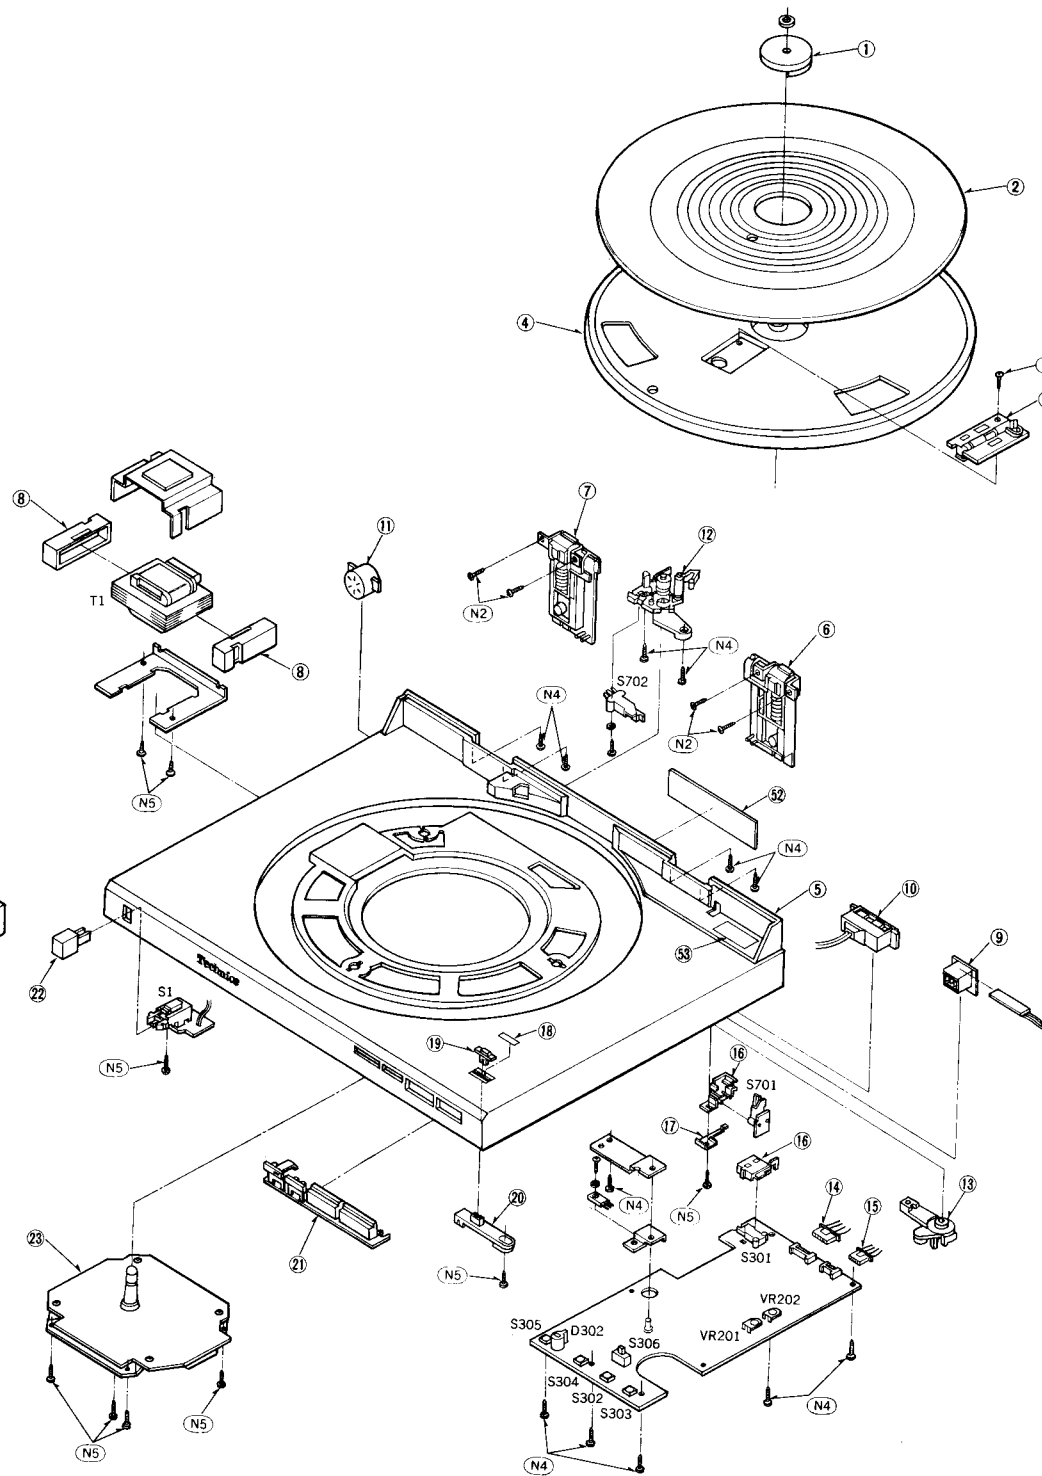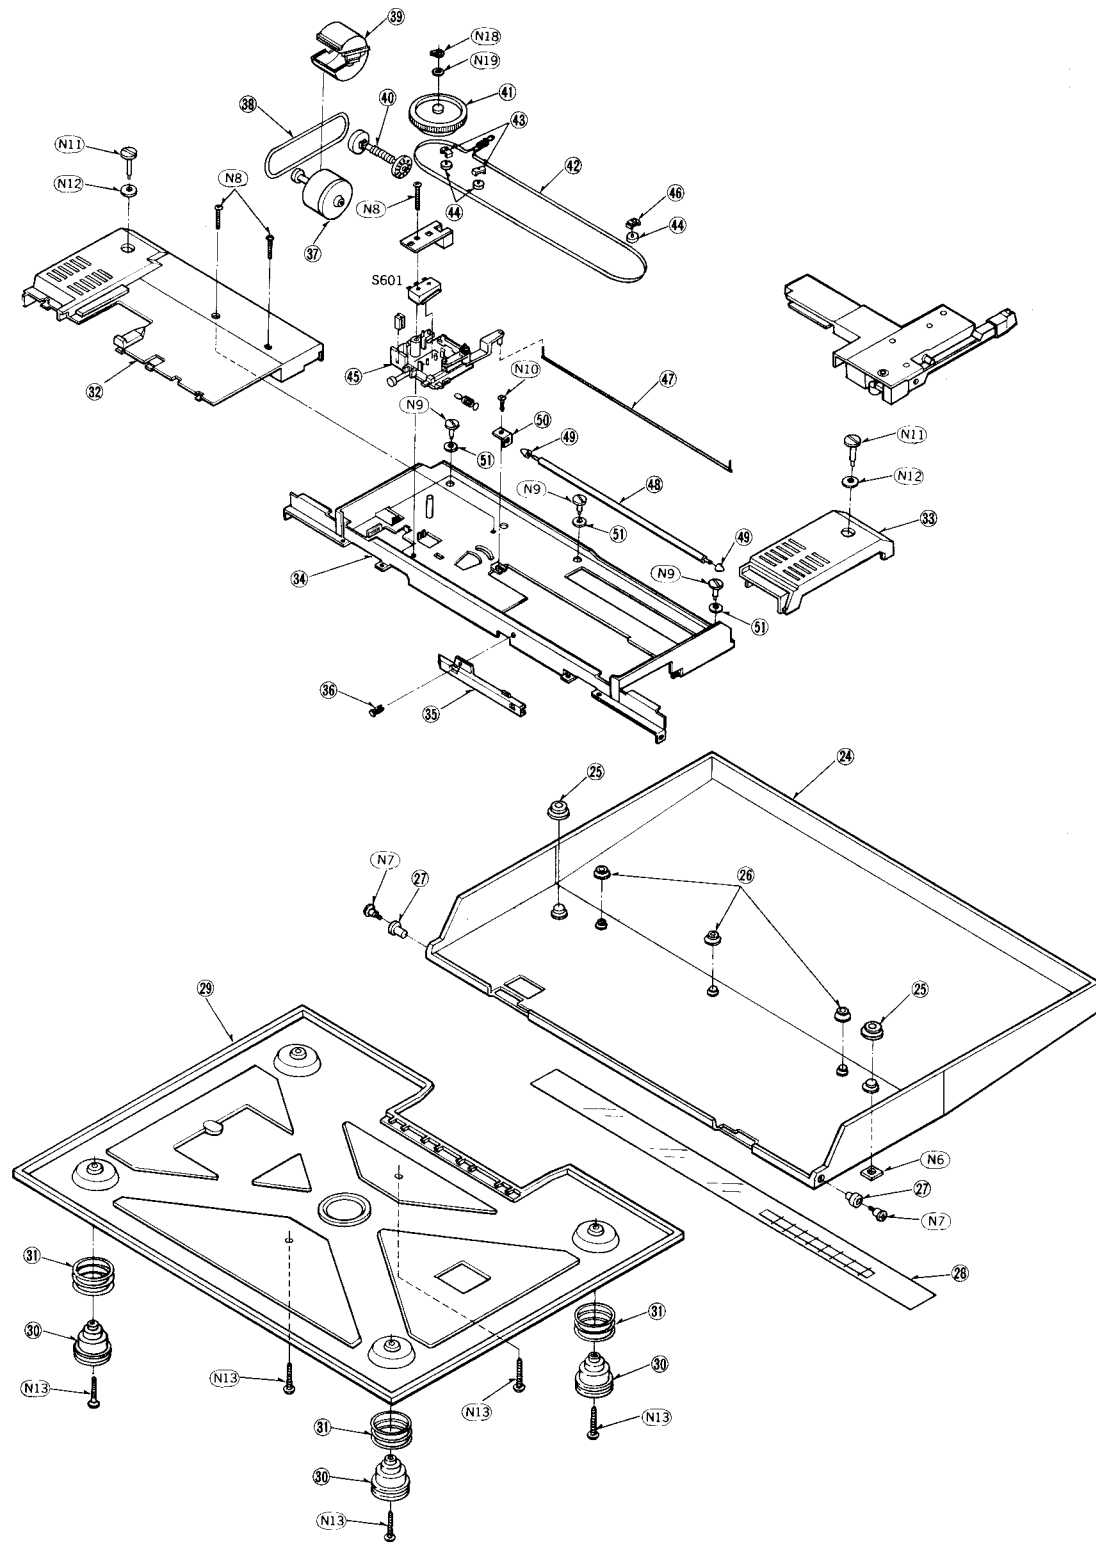

## • Tonearm

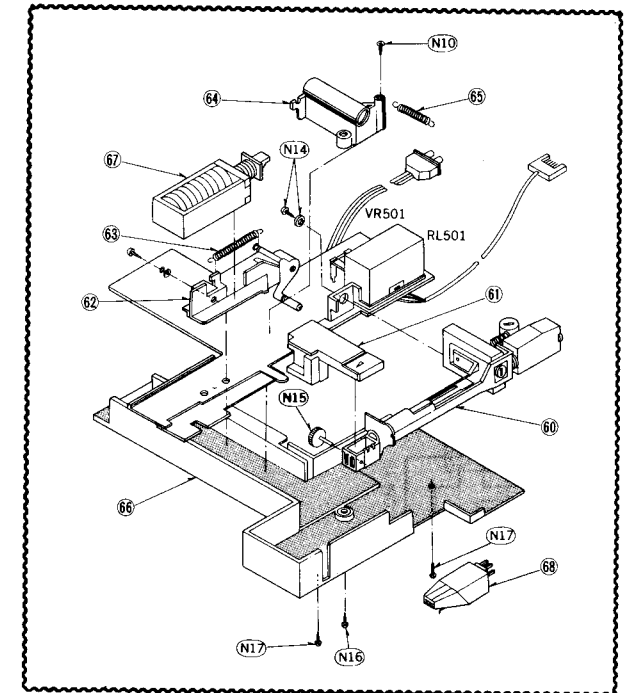



# REPLACEMENT PARTS LIST.....Cabinet & Chassis Parts

- Notes:**
1. Part numbers are indicated on most mechanical parts. Please use this part number for parts orders.
  2. Important safety notice: Components identified by  $\Delta$  mark have special characteristics important for safety. When replacing any of these components, use only manufacturer's specified parts.
  3. Bracketed indications in Ref. No. columns specify the area. Parts without these indications can be used for all areas.
  4. The "S" mark is service standard parts and may differ from production parts.
  5.  $\square$ -marked parts are used for black only, while  $\circ$ -marked parts are for silver type only.
  6. Parts other than  $\square$  and  $\circ$ -marked are used for both black and silver types.

Black type model No. : SL-DL5 (K)

## Areas


- \* [E] is available in Switzerland and Scandinavia.
- \* [EK] is available in United Kingdom.
- \* [XL] is available in Australia.
- \* [EG] is available in F.R. Germany.
- \* [EB] is available in Belgium.
- \* [EF] is available in France.
- \* [XA] is available in Southeast Asia, Oceania, Africa, Middle Near East and Central South America.
- \* [EH] is available in Holland.
- \* [Ei] is available in Italy.
- \* [EC] is available in Czechoslovakia.

Ref. No.	Part No.	Part Name & Description
<b>CABINET and CHASSIS PARTS</b>		
1	SFWEC05N01	45 Adaptor
2	SFTGC05N01	Turntable Mat
3	SFUMC05N11A	Record Detector
4	SFTEC05N01A	Turntable
5	$\circ$ SFACD05N01	Cabinet
5	$\square$ SFACD05S21	Cabinet (Black Type)
6	SFATC05N01A	Hinge, Right Side
7	SFATC05N02A	Hinge, Left Side
8	SFGCC05N02	Cushion Rubber, Power Transformer
8 [XA] only	SFGCC05X01	Cushion Rubber, Power Transformer
9	$\Delta$ SFDJHSC0492	Socket, AC Power
9 [XA] only	$\Delta$ SFDJHSC04912	Socket, AC Power
10	SFDHC05N02E	Socket, Input
11	SFDLD05N01	Socket, Remote Control
12	SFUMC05N07A	Record Size Detection Lever
13	SFUMC05N13E	Record Detector Lever
14	SFDJC05N02E	Connector Ass'y (7P)
15	SFDJC05N03E	Connector Ass'y (5P)
16	SFUMC05N15	Cover, Switch S301, 701
17	SFQPC05N01	Spring, S702
18	$\circ$ SFKKD05N02	Label, Speed Selector
18	$\square$ SFKKD05S21	Label, Speed Selector (Black Type)
19	SFKTD05N02	Knob, Speed Selector
20	SFUMD05N03	Guide, Speed Selector Knob
21	SFKTC05N01E	Knob, Start, Stop Ass'y
22	SFKTD05N01	Knob, Power
23	SFMZD05N01Z	Stator Frame Ass'y
24	$\circ$ SFADD05N01E	Dust Cover
24	$\square$ SFADD05S21E	Dust Cover (Black Type)
25	SFGCD05N01	Cushion Rubber (A)
26	SFGCC05N03	Cushion Rubber (B)
27	SFGCC05N06	Cushion Rubber (C)
28	SFKKD05N01	Surface Plate
29	SFAUD05N01	Bottom, Board
30	SFGAC05N01	Audio Insulator
31	SFQCC05N01	Spring, Audio Insulator
32	SFUMD05N01	Cover, Rest Switch Plate
33	SFUMD05N02	Cover, Right Side
34	SFUKD05N01A	Arm Drive Plate
35	SFUMC05N20	Guide, Lead Wire
36	SFUZC05N03	Latch
37	SFMHC05N01E	Arm Drive Motor
38	SFGBC10-01	Belt, Arm Drive (With Pulley)
39	SFGCC05N01	Cushion Rubber
40	SFUMC05N16A	Worm Ass'y
41	SFUMC05N17	Arm Drive Wheel
42	SFUZC05N02E	Arm Drive Rope Ass'y
43	SFUMC07-22	Stopper, Pulley
44	SFUMC05N22	Pulley
45	SFUMC05N02E	Plate, Rest Switch
46	SFUMC05N23	Stopper, Pulley
47	SFUZC05N01	Rod, Rest Switch
48	SFXJC05N01	Guide Rail
49	SFGCC05N05	Cushion Rubber
50	SFUPC05N03	Plate, Guide Rail
51	SFGCC05N04	Cushion Rubber
52 [E]	SFNN05S01	Name Plate
52 [EK, XL]	SFNN05G02	Name Plate
52 [XA]	SFNN05X01	Name Plate
52 [Other Areas]	SFNN05R01	Name Plate


Ref. No.	Part No.	Part Name & Description
53	SFNHC05X01	Label
<b>ZONE ARM PARTS</b>		
60	SFPAM00501A	Tonearm
61	SFPAB00501E	Tonearm Position, Indicator
62	SFPJL00501E	Lift Plate Ass'y
63	SFPSP00504	Spring, Left
64	SFPAB00502	Bracket, Tonearm
65	SFPSP00503	Spring, Lead Wire
66	SFPCS00501	Cover, Arm Base
67	SFDZC05N01	Cueing Plunger
68	* EPC-P24S	Cartridge
	* EPS-24CS	Stylus
<b>SCREWS, WASHERS and CIRCLIPS</b>		
N1	S XTN3+6BFZ	Screw, Tapping, $\oplus 3 \times 6$
N2	S XTV3+6BFZ	Screw, Tapping, $\oplus 3 \times 6$
N3	S XTV3+20BFN	Screw, Tapping, $\oplus 3 \times 20$
N4	S XTV3+8BFN	Screw, Tapping, $\oplus 3 \times 8$
N5	S XTW3+10Q	Screw, Tapping, $\oplus 3 \times 10$
N6	S XNC3HS	Nut, $\phi 3$
N7	S FXG05N03	Screw
N8	S XTV3+20BFZ	Screw, Tapping, $\oplus 3 \times 20$
N9	S FXG05N02	Screw
N10	S XTV3+8BFZ	Screw, Tapping, $\oplus 3 \times 8$
N11	S FXG05N01	Screw
N12	S FGC05N04	Washer
N13	S XTW3+20QFYR	Screw, Tapping, $\oplus 3 \times 20$
N14	S XSN3+5S	Screw, Tapping, $\oplus 3 \times 5$
N15	S FXPEV00502	Screw
N16	S XTV3+10BFZ	Screw, Tapping, $\oplus 3 \times 10$
N17	S XSN26+10BV	Screw, Tapping, $\oplus 2.6 \times 10$
N18	S FXW551D2	Washer
N19	S XUB3FP	Washer, $\phi 3$
<b>ACCESSORIES</b>		
A1 [EK, XL]	SFNUD05G01	Instructions Book, Printed Matter
A1 [XA]	SFNUD05X01	Instructions Book, Printed Matter
A1 [EG]	SFNUD05R01	Instructions Book, Printed Matter
A1 [EF]	SFNUD05F01	Instructions Book, Printed Matter
A1 [Ei]	SFNUD05i01	Instructions Book, Printed Matter
A1 [Other Areas]	SFNUD05S01	Instructions Book, Printed Matter
A2	SFDHC05N01	Phono Cord
A3	SFDLC05N01	Ground Wire
A4 [EK]	S $\Delta$ RJA43Z	AC Cord
A4 [XL]	S $\Delta$ RJA26Z	AC Cord
A4 [Other Areas]	S $\Delta$ RJA20Z	AC Cord
A5 [XA] only	$\Delta$ SFDK119118	2P Plug
A6	SFUMC05N24	Adaptor, 25 cm Record
<b>PACKING PARTS</b>		
P1 [EF]	$\circ$ SFHPD05C01	Carton, Box
P1 [Other Areas]	$\circ$ SFHPD05M01	Carton, Box
P1	$\square$ SFHPD05M21	Carton, Box (Black Type)
P2	SFHHD05N01	Pad, Front
P3	SFHHD05N02	Pad, Rear
P4	SFHDD05N01	Sheet, Turntable
P5	SFHKC05N01	Screw, Clamp
P6	SFHKC05N02	Spacer, Tonearm
P7	SFHSD05N01	Spacer, Dust Cover
P8	SFHSC05N02	Stopper, 45 Adaptor
P9	SFYH60X60	Polyethylene Bag, Unit
P10	SFYH15X20	Polyethylene Bag, Accessory
P11	SFYF05A06	Polyethylene Bag, 25 cm Record Adaptor

## PACKINGS



1. Set the tonearm to the start position.
2. Attach the arm spacer.

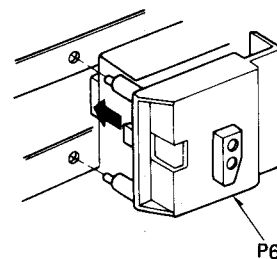





3. Attach the clasper, 45-adaptor holder and dust cover specer.
4. Stick the protection sheet on the top of dust cover.

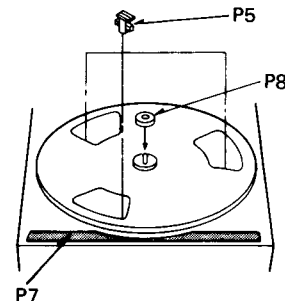


5. Put the set into the polyethylene bag and then pack it as illustrated.

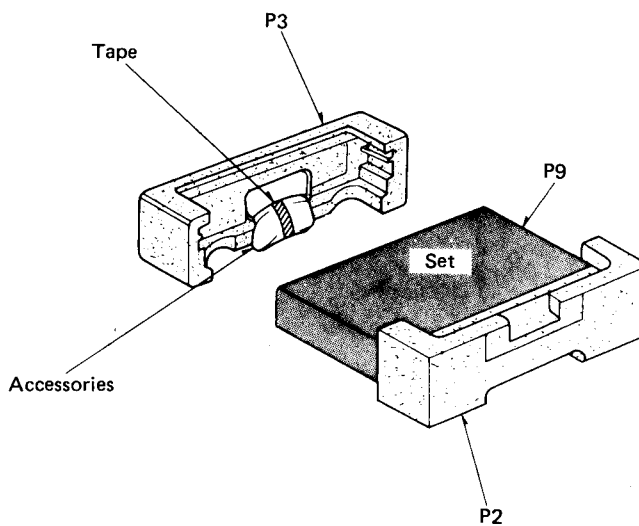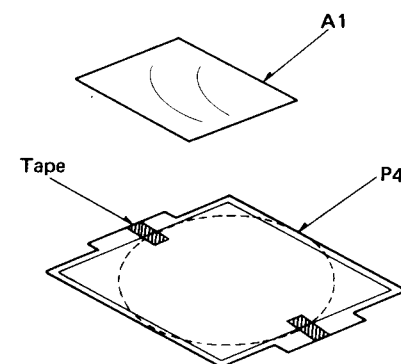

6. Place the unit (with cushions attached) as illustrated.
7. Fold the flaps according to the line marks.
8. Seal the top with adhesive tape.
  - \* Use gum tape or adhesive cloth tape of 50mm wide at least.
9. For the edges, first fold the flap "a" and then flap "b", and staple. Remember to staple only flap "b". (Use 15 or 16mm staple)

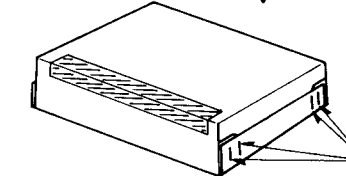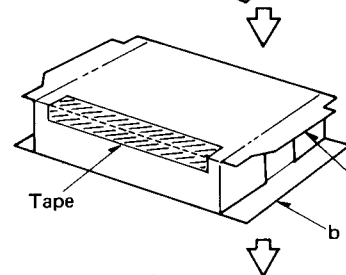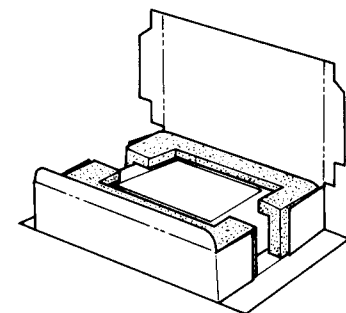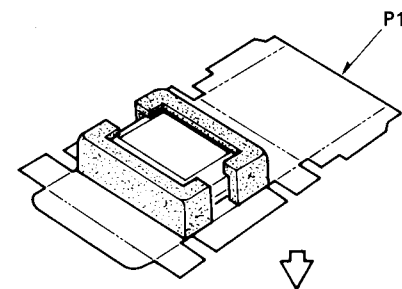

\* Stapling positions are shown below.

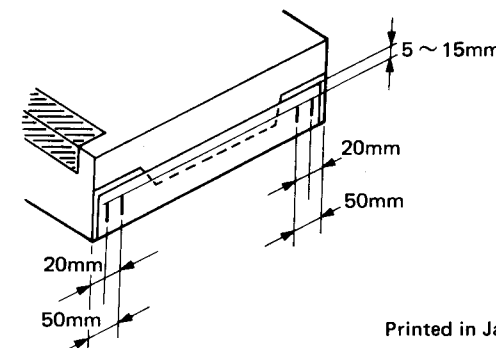



# Service Manual

Direct Drive Automatic Turntable System

## SL-DL5/(K)

[PA], [PE], [PC]

\* The colors of this model include silver and black.  
\* The black type model is provided with (K) in the Service Manual.

### Areas

\* [PA] is available in Far East PX.  
\* [PE] is available in European Military.  
\* [PC] is available in European Audio Club.

Please use this manual together with the Service manual for Model No. SL-DL5/(K)  
Order No. SD82022117C2.

## CHANGES

### REPLACEMENT PARTS LIST

Ref. No.	Change of Part No.		Part Name & Description	Per Set (Pcs.)	Remarks
	SL-DL5/(K) (ORDER NO. SD82022117C2)	➔ SL-DL5/(K) [PA, PE, PC]			
SWITCH					
S901	SFDSHXW225-2 [XA] only	SFDSHXW225-2	Switch, Voltage Selector	1	
FUSES					
F1	XBA2C02T1B [XA]	XBA2C02T1B	Fuse, T200mA 250V	1	
	XBA2C06T1B [Other Areas]				
F2	XBA2C06T1B [XA] only	XBA2C06T1B	Fuse, T630mA 250V	1	
POWER TRANSFORMER					
T1	SLT48DT4E [EK, XL]	SLT57DT1A	Power Transformer, Power Source	1	
	SLT57DT1A [XA]				
	SLT48DT3E [Other Areas]				
CABINET and CHASSIS PARTS					
8	SFGCC05N02 [Other Areas]	SFGCC05X01	Rubber Cushion, Power Transformer	1	
	SFGCC05X01 [XA] only				
9	SFDJHSC0492 [Other Areas]	SFDJHSC04912	Socket, AC Cord	1	
	SFDJHSC04912 [XA] only				
52	SFNND05S01 [E, EC]	SFNND05P01 [PA, PE]	Name Plate	1	
	SFNND05G01 [EK, XL]				
	SFNND05X01 [XA]	SFNND05P02 [PC]	Name Plate	1	
	SFNND05R01 [Other Areas]				
68	PEC-P24S	EPC-P28	Cartridge	1	
	EPS-24CS	EPS-28ES	Stylus	1	

# Technics

Panasonic Tokyo  
Matsushita Electric Industrial Co., Ltd.  
1-2, 1-chome, Shibakoen, Minato-ku, Tokyo 105 Japan

Matsushita Electric Trading Co., Ltd.  
P.O. Box 288, Central Osaka Japan



Ref. No.	Change of Part No.		Part Name & Description	Per Set (Pcs.)	Remarks
	SL-DL5/(K) (ORDER NO. SD82022117C2)	➡ SL-DL5/(K) [PA, PE, PC]			
ACCESSORIES					
A1	SFNUD05G01 [EK, XL]	SFNUD05G01	Instruction Book	1	
	SFNUD05X01 [XA]				
	SFNUD05R01 [EG]				
	SFNUD05F01 [EF]				
	SFNUD05I01 [Ei]				
	SFNUD05S01 [Other Areas]				
A4	RJA43Z [EK]	QFC1100	AC Cord	1	
	RJA26Z [XL]				
	RJA20Z [Other Areas]				
A5	SFDK119118 [XA] only	Deletion	.....	0	
A7	Addition	QJP0603S	Adaptor, Gimens	1	
PACKING PART					
P1	SFHPD05C01 [EF] only	SFHPD05M21	Carton Box (Black)	1	
	SFHPD05M01 [Other Areas]				